AV17

FUNAI

VCR 5400
Service-Nr. 38-019
+
VCR 5600
Service-Nr. 38-020

Video Cassette Recorder

HQ

Video cassette recorders bearing the "HQ" mark incorporate VHS high quality technology. Note that there is interchangeability with former VHS video cassette recorder.

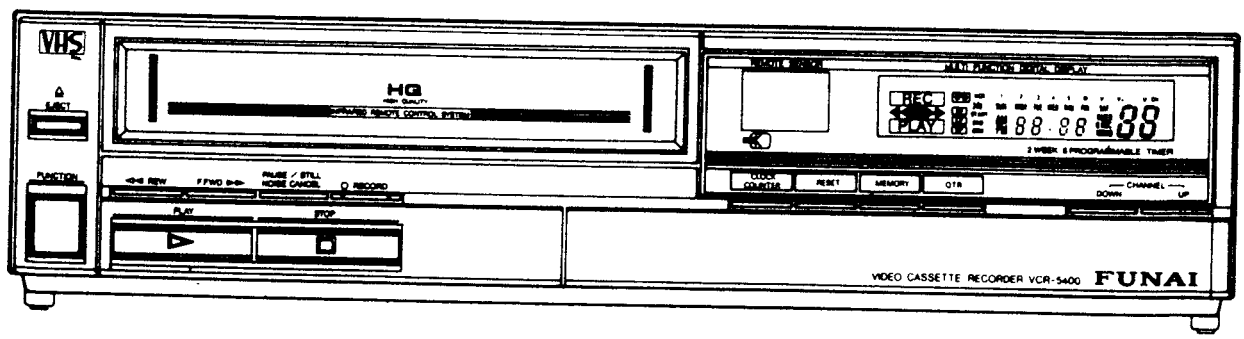

SERVICE MANUAL

DISASSEMBLY INSTRUCTIONS (DECK)

[1] FRONT LOADING UNIT

1. Remove 4 screws (B).
2. Take off the hook (A). (Right side only)
3. Remove 3 screws (C).
4. Take off Loading Motor Bracket Ass'y (D).

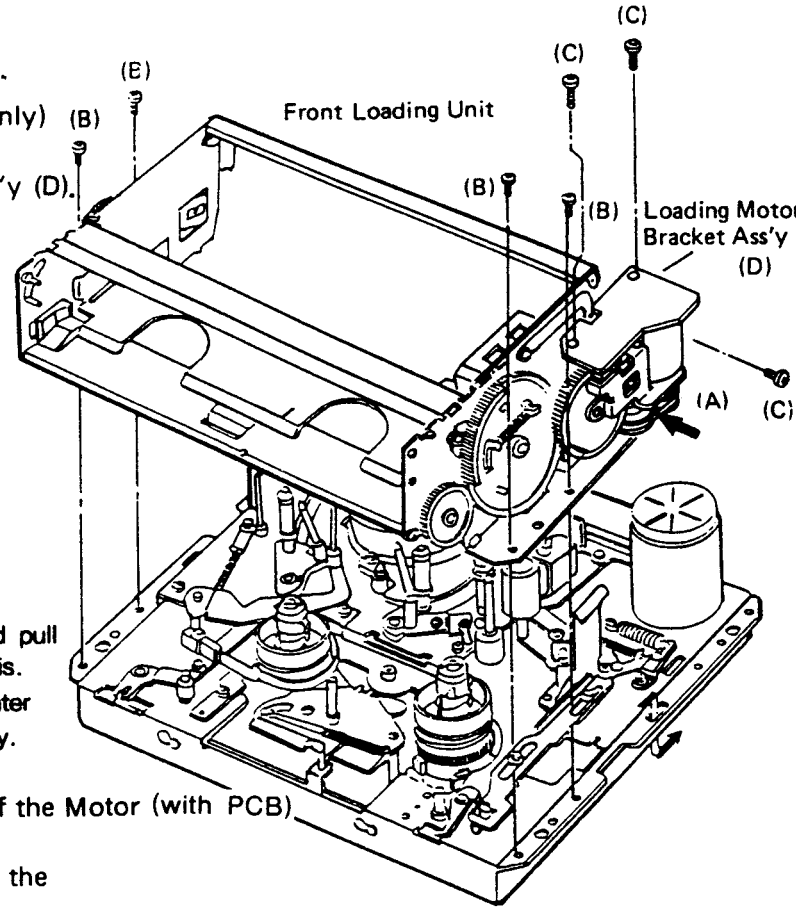

[2] PHOTO SENSOR

1. Replacement of Lamp Holder Ass'y.
   (Sensor Lamp)
   1. Hold lamp holder ass'y body(A) and pull up to remove the hook from chassis.
   2. Turn the lamp holder ass'y to counter clockwise and take out holder ass'y.
2. Replacement of photo (Start) sensor
   1. Remove 2 screws (B) and take off the Motor (with PCB) (C)and Bracket (D), Motor(E).
   2. Remove 1 screw (F) and take off the Sensor Guide.
      Remove 1 screw (G) and take off the Photo Sensor PCB Ass'y.
3. Replacement of photo (End) sensor
   1. Same manner of remove photo (Start) sensor(H). (same as 2.2)

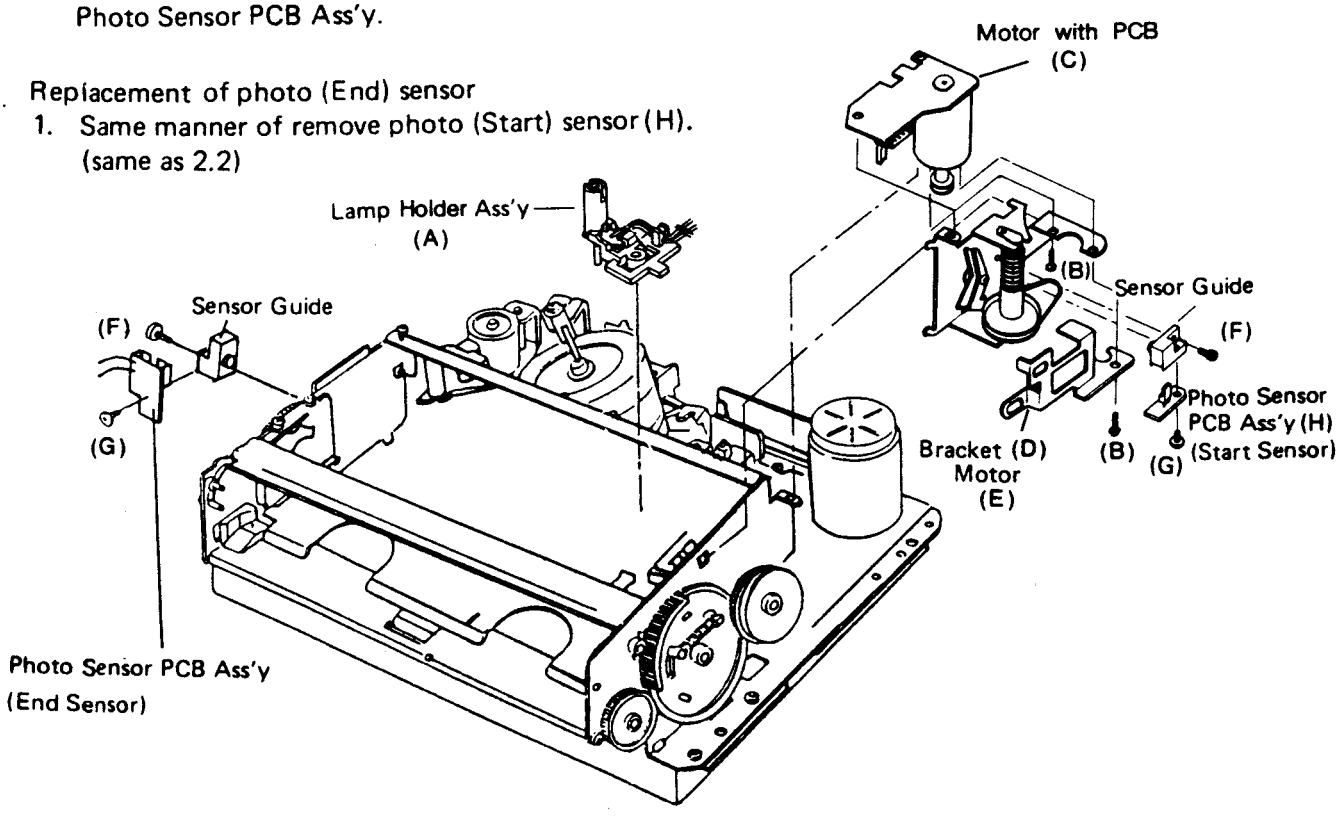

[3] FULL ERASE HEAD/AUDIO CONTROL HEAD

Erase Head

1. Remove E-ring (A).
2. Pull out the Full Erase head plate(B).
3. Remove 1 screw (C) and take off the Full erase head(D).

Audio Control Head

1. Remove 1 screw (E) and 1 screw (F) and azimuth spring(H).
2. Remove audio control head(I).

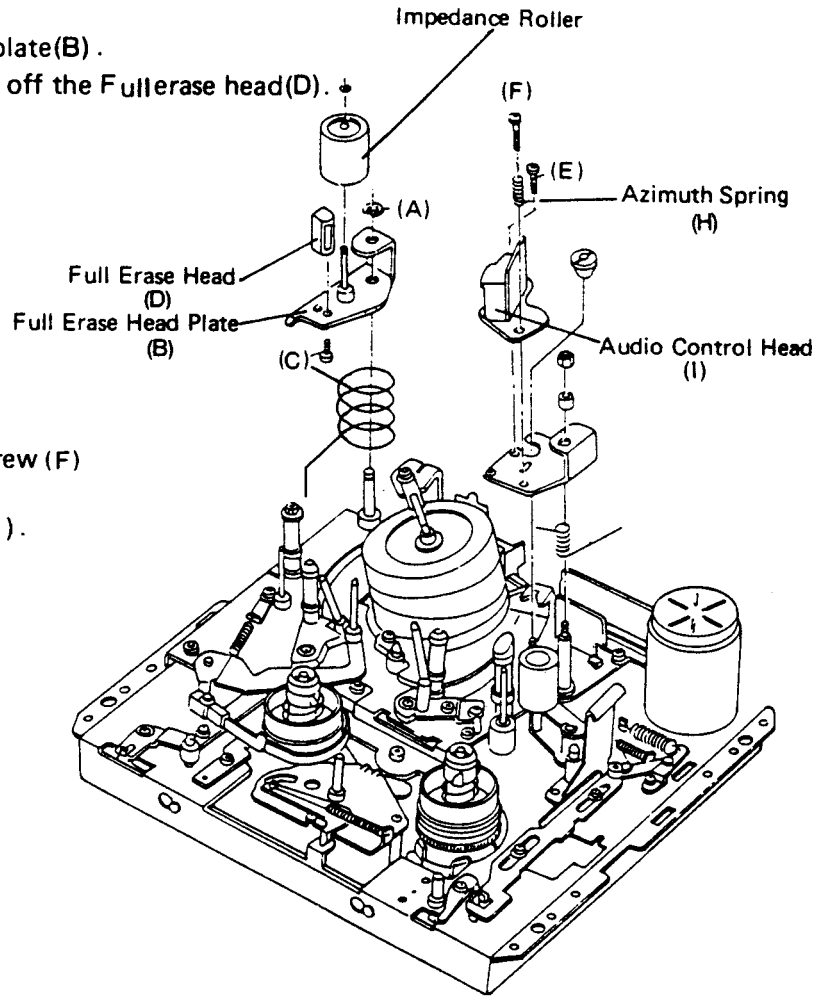

[4] REEL (SUPPLY & TAKE-UP)

(a) Remove front loading unit.

1. Remove polyslider washers(A).
2. Remove the reels(B), (C).

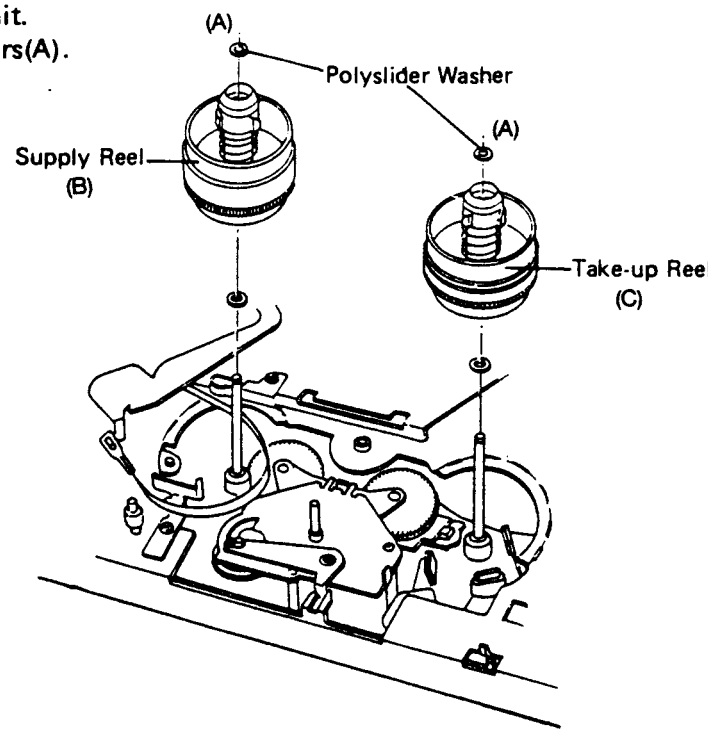

[5] GEAR HOLDER ASS'Y/CLUTCH

Gear Holder Ass'y

(a) Remove front loading unit.

1. Remove 3 screws (A), and gear holder ass'y(B).
2. Remove return spring(C).
3. Remove 1 screw (D) and return arm(E).
4. Remove E-Ring (F) and return drum(G) and return gear (H).
5. Remove polyslider washer (I) and then take off the reel drive gear(J).

Clutch

Top gear is pressed to insert so pull off each part from top.

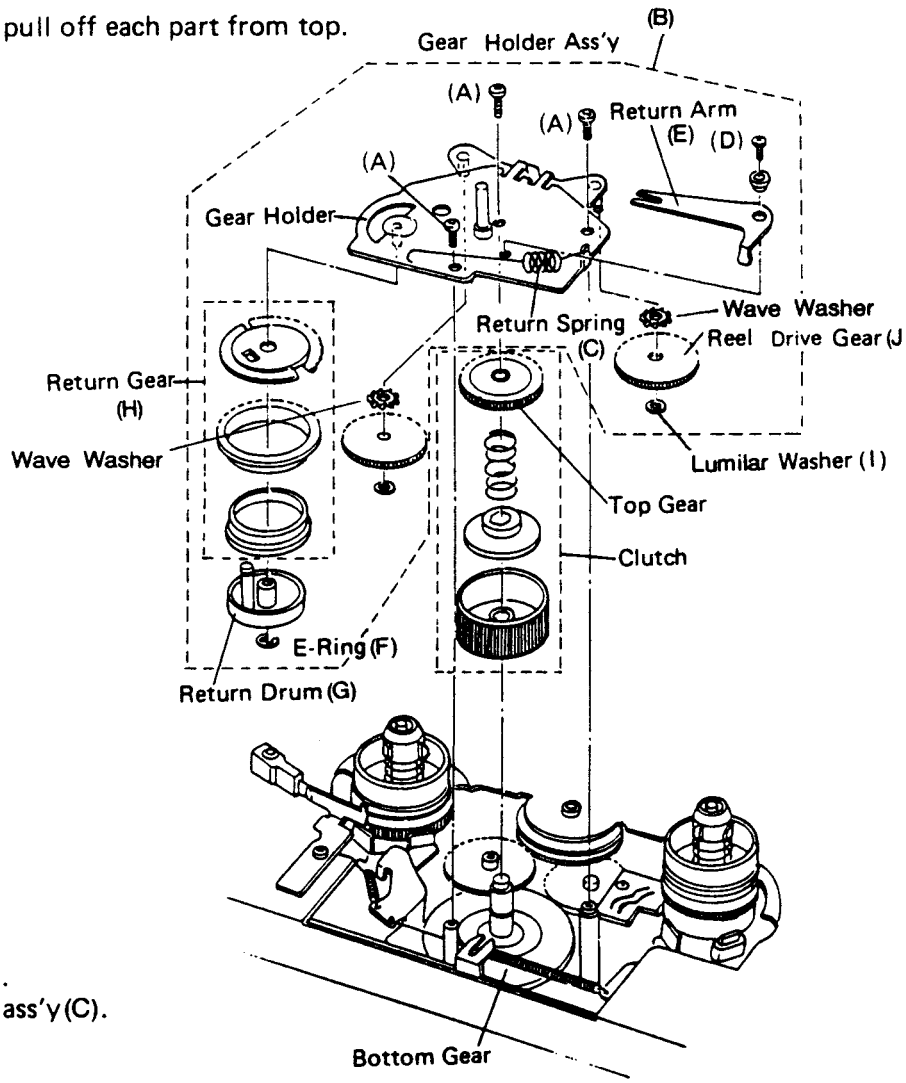

[6] REEL SENSOR

(a) Remove front loading unit.

(b) Remove gear holder ass'y.

1. Remove 1 screw (A).
2. Remove take-up reel(B).
3. Remove reel sensor PCB ass'y(C).

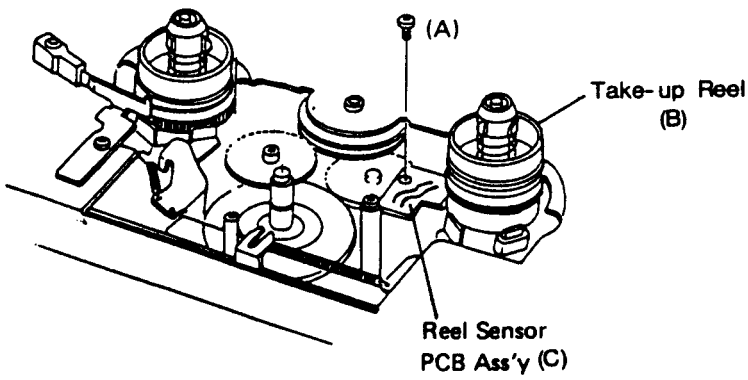

[7] SUB CHASSIS

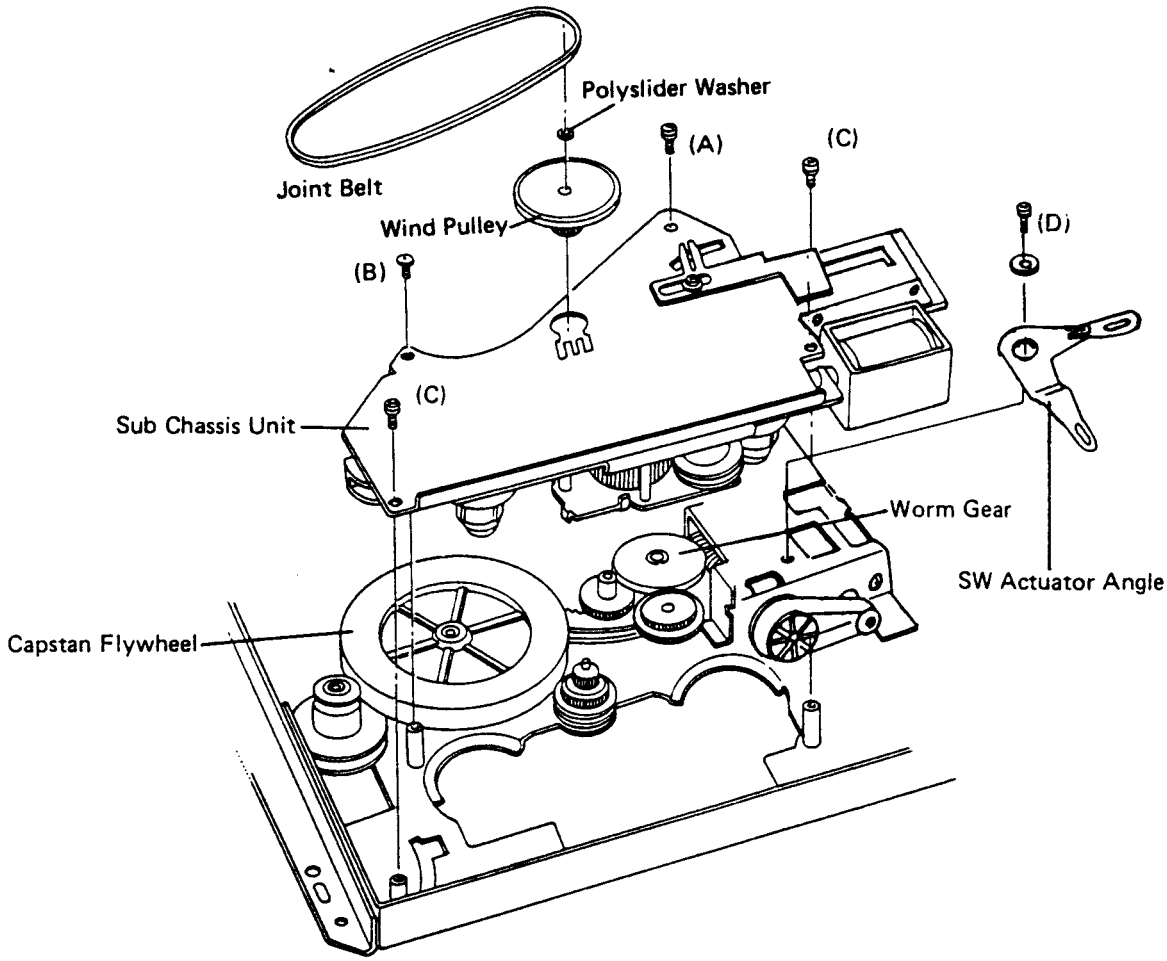

Take out of Sub Chassis Unit

1. Turn the Capstan Flywheel clockwise more than three times. (Because the levers, etc. are set at neutral.)
2. Remove the Joint Belt.
3. Remove the Polyslider Washer.
4. Pull out the Wind Pulley.
5. Remove 1 screw (D) and take off the SW Actuator Angle.
6. Remove 4 mount screws from sub chassis. (Ax1, Bx1 Cx2)
7. Take out the Sub Chassis Unit.

Mounting of Sub Chassis Unit

1. Turn the Return Arm in the direction of arrow mark.
2. Move the Back Tension Change Plate to the right direction extremely.
3. Turn the RB return arm to the direction of arrow mark extremely.
4. Turn the Loading Plates (L) and (R), and stop them at the position of hitting the wall of groove or just stop.
   This work is done by turning the pulley of the Worm Gear jointed to the Loading Motor.
5. Turn the Interlocking Gear in the direction of arrow mark (counterclockwise) extremely.
6. Mount the Sub Chassis Unit. At this time, make the band brake of back tension fit to the supply reel. (Top side)
7. Shake the Switch Actuator to right and left in order to confirm the engagement of interlocking gear.
8. Slide the Pressure Plate in the direction of arrow mark in order to connect the Pressure Plate with the Bell Crank.
9. Mount the Sub Chassis Unit with 4 small screws.
   (A x 1, B x 2, C x 1)
10. Insert the Wind Pulley.
11. Set the Polyslider Washer.
12. Mount the Joint Belt.
13. Confirm that the Return Arm is set to the calw of the Back Tension Change Plate.
    It is OK that following two operations are confirmed by turning the capstan flywheel.
    (1) When the Capstan Flywheel is turned counterclockwise (CCW), the Back Tension Change Arm moves to the left.
    (2) When the Capstan Flywheel is turned clockwise (CW), the Back Tension Change Arm moves to the right.

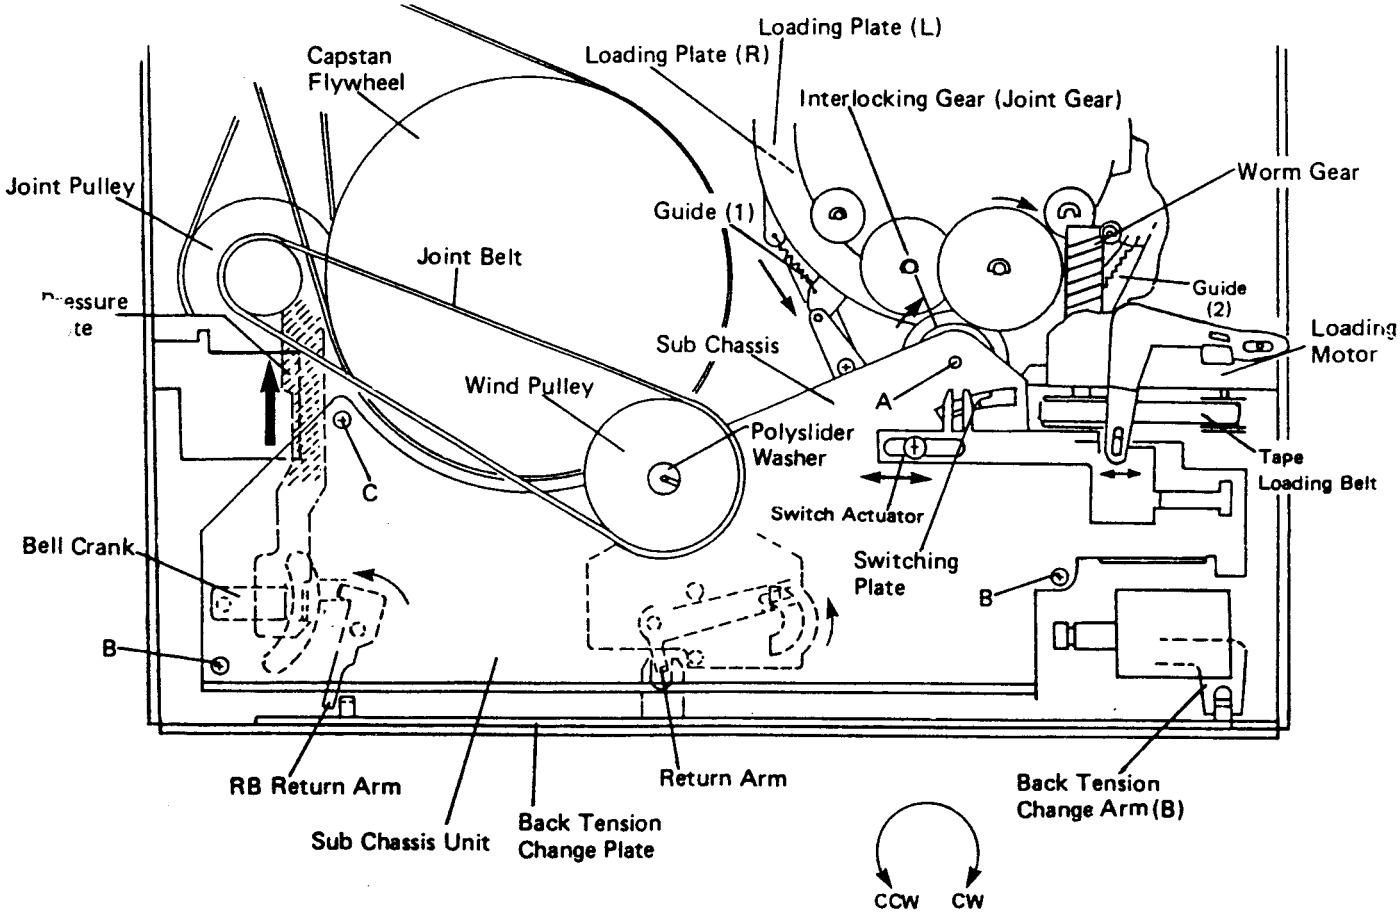

[8] TENSION ARM ASS'Y

Remove front loading unit.

1. Remove E-ring (A).
2. Remove E-ring (B).
3. Remove tension arm spring(C).
4. Remove tension arm (D).
5. Remove E-ring (E).

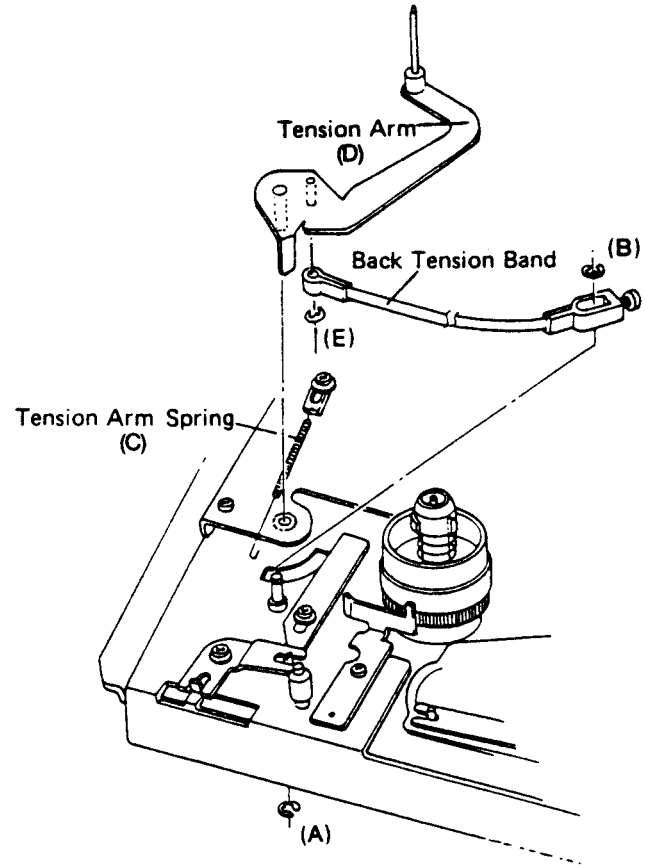

[9] DRUM ASS'Y

(a) Remove front loading unit.

1. Remove connector (A) from bottom side.
2. Remove a screw (B), and drum ground(C).
3. Remove 3 screws (D) and take off the drum ass'y(E).

Remark: Remove the drum ass'y carefully without any damage. Especially do not hit the drum ground holder.

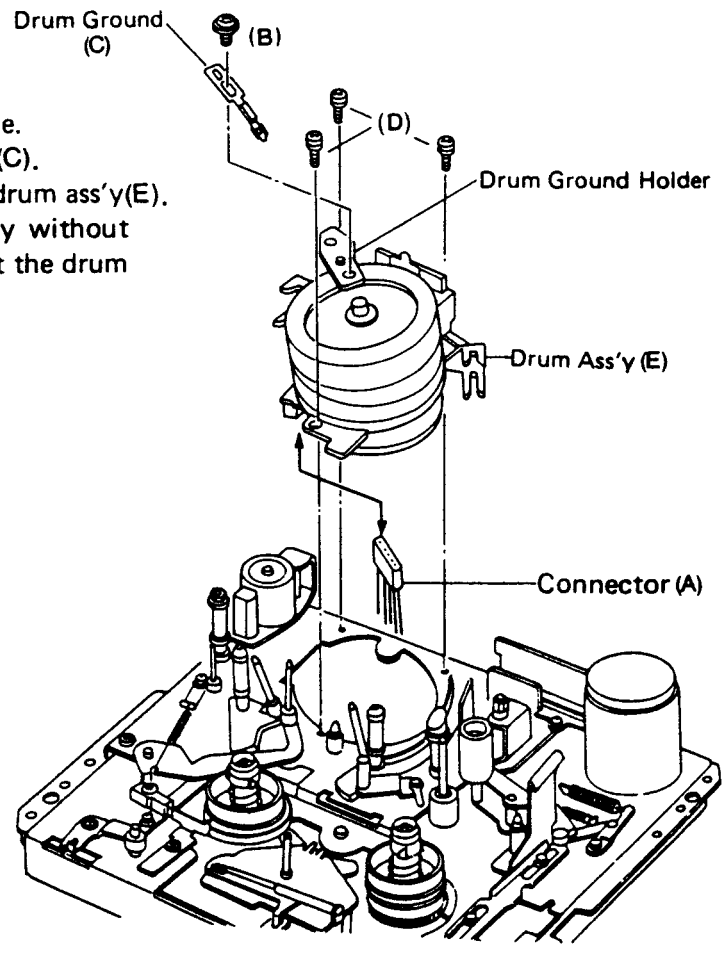

[10] UPPER DRUM

Remove front loading unit.

1. Remove 1 screw (A), and drum ground.
2. Resolder rotary transformer wires (B), (C), (D) and (E).
   Do not unsolder head wires.
3. Remove 2 screws (F).

Remarks: 1) Use gloves and do not touch with bare finger or dust to drum face.
2) If the video head is defective, replace the complete upper drum with head.

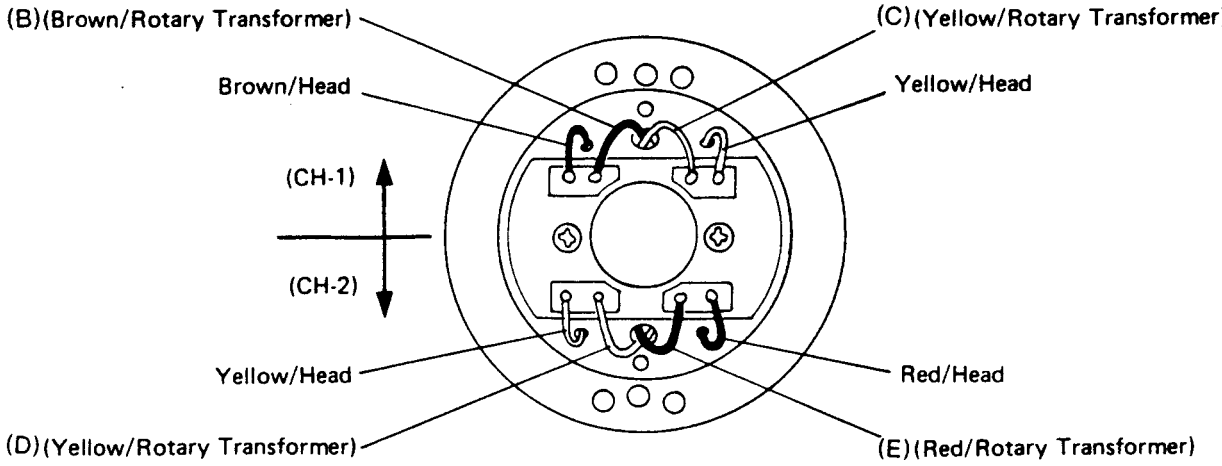

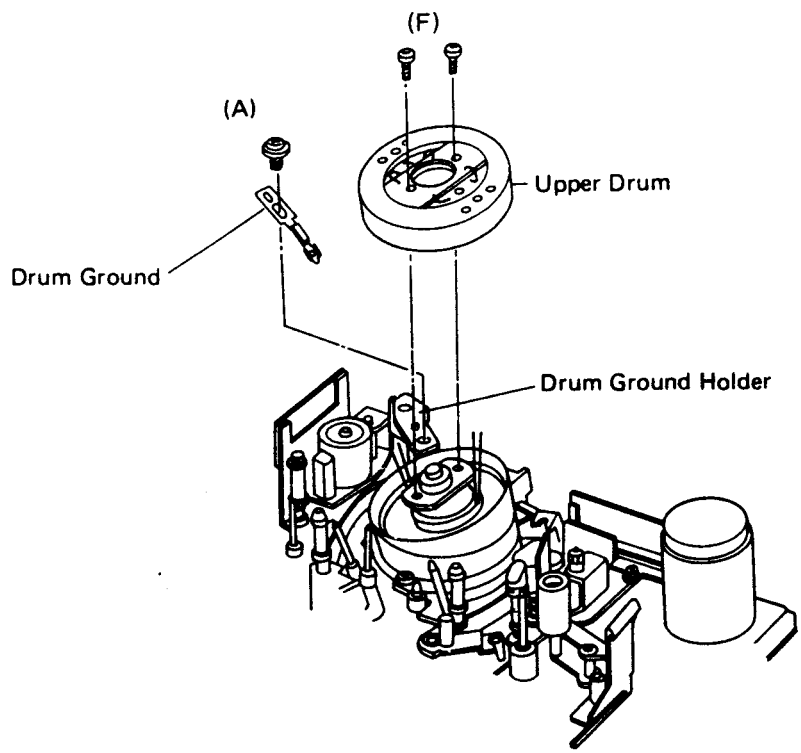

[11] DRUM MOTOR

1. Remove 2 screws (A).
2. Remove the rotor (B).
3. Remove 3 screws (C).
4. Remove stayter(D).
5. Remove 3 screws (E).
6. Remove Rivet, Drum Motor Bracket(F).

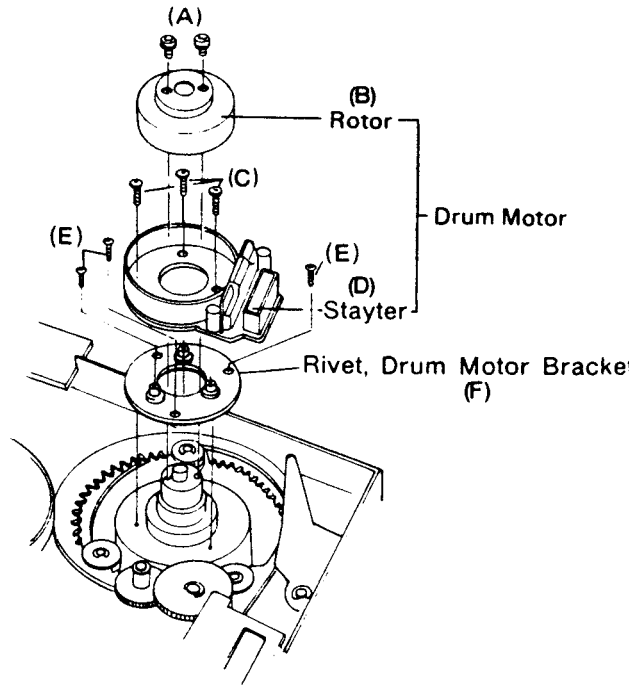

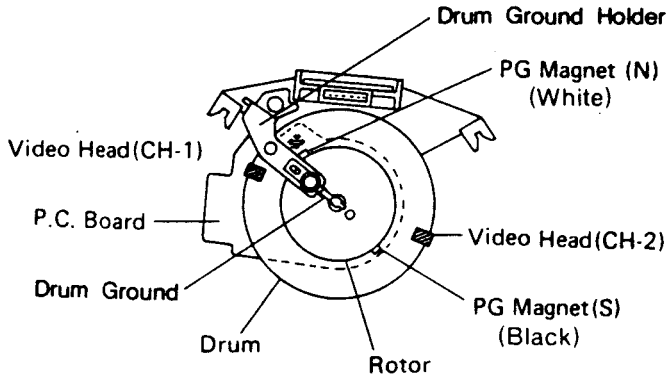

DRUM Ass'y (Top View)

[12] CAPSTAN MOTOR

1. Take off the belt from capstan motor.
2. Remove 2 screws (A).

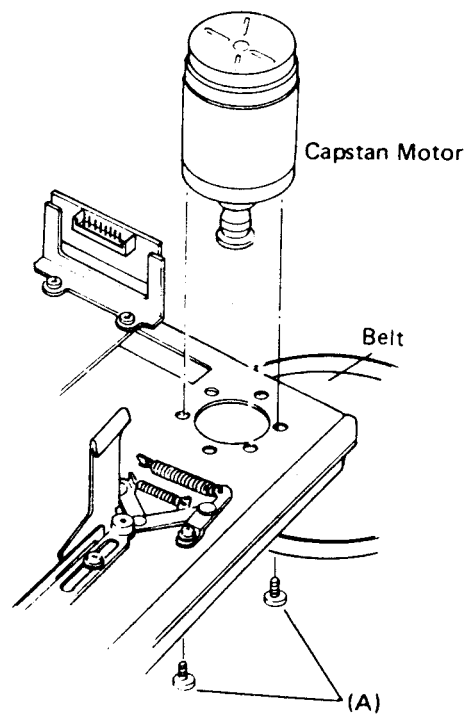

[13] TAPE LOADING MOTOR

1. Remove 2 screws (A).
2. Take off Tape Loading Motor Ass'y .
3. Take off Loading Belt.
4. Remove 2 screws (B) and take off Motor Ass'y.

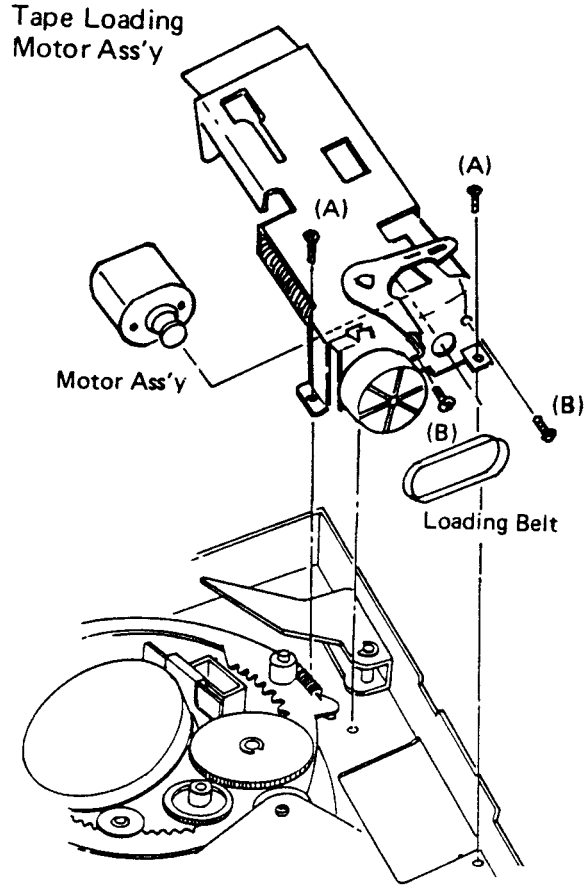

[14] LOADING BASE

1. Remove Motor Ass'y and Drum Ass'y.
2. Remove 2 screws (A) from bottom.
3. Remove E-ring (B).
4. Remove 3 screws (C).
5. Take off the Loading Base.

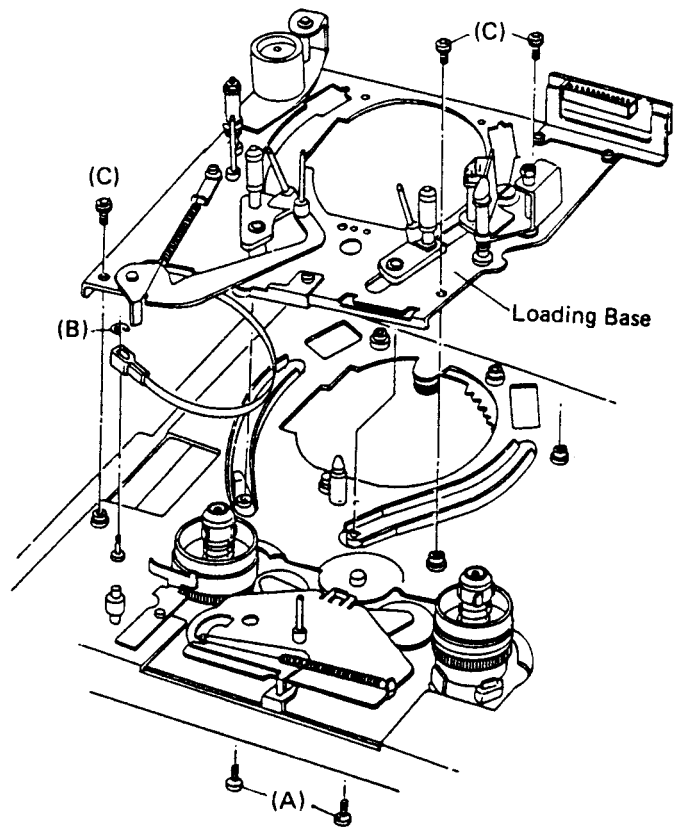

[15] LOADING GEAR

1. Remove Sub-Chassis Unit Flywheel and Front Loading Motor Ass'y.
2. Remove E-ring (A) and take off Gear Ass'y.
3. Remove E-ring (B) and take off Gear Ass'y.
4. Remove E-ring (C) and take off Gear Ass'y.
5. Remove 3 E-rings (D), 2 Plate Washers (E) and 1 Plate Washer (F).
6. Remove 2 screws (J).
7. Take off the Loading Plate (L).
8. Take off the Joint Gear (K), 2 Guide Gears (G), Guide Roller (H) and Plate Washer (I).
9. Take off the Loading Plate (R).
10. Take off 2 Guide Gears (G') and Guide Roller (H').

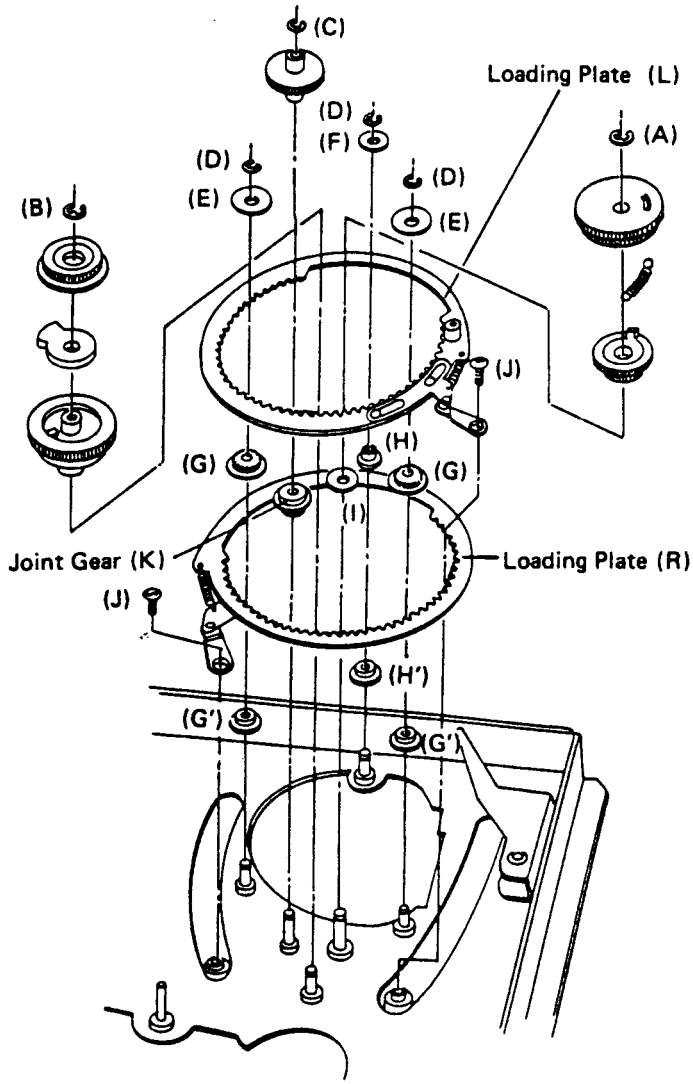

[16] CAPSTAN FLYWHEEL

1. Remove Front Loading Unit.
2. Take off the Joint Belt and Main Belt.
3. Take off the Polyslide Washer (A) and Wind Pulley.
4. Remove 2 screws (B).

Remark: Do not miss the washer (C) and (D) when pull out the capstan flywheel.

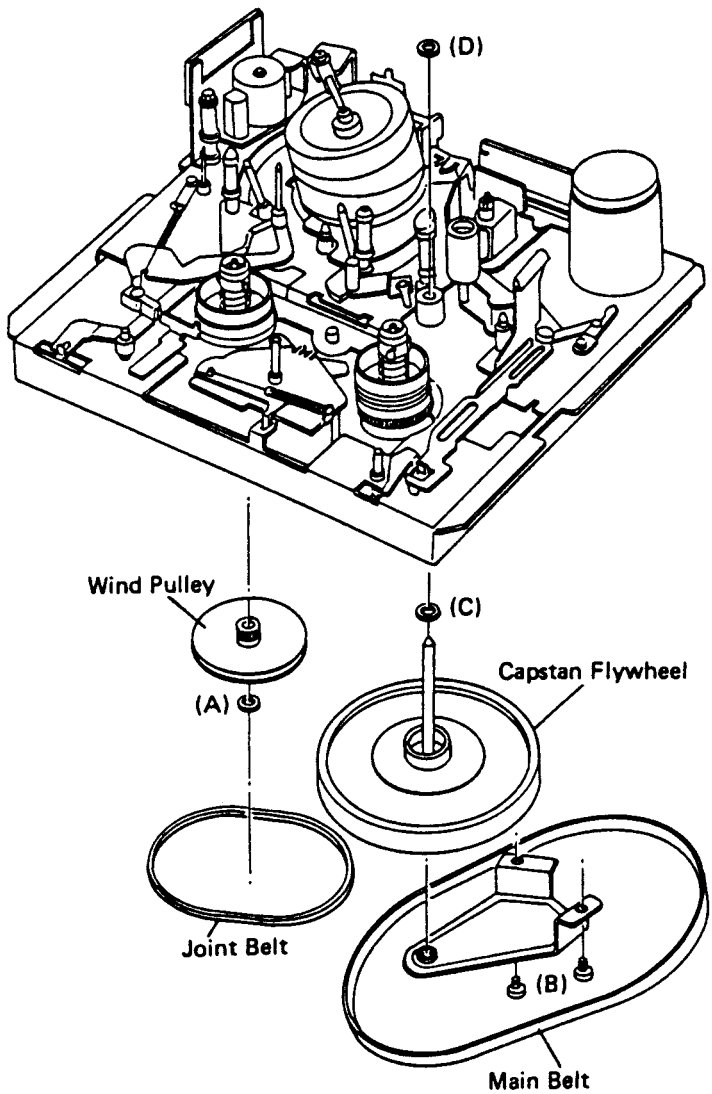

[18] FRONT LOADING WORMWHEEL UNIT

- DISASSEMBLY
  1. Remove E-ring (A).
  2. Remove Wormwheel Ass'y. (Wormwheel, Spring Friction, Gear Friction.)
- ASSEMBLY
  1. Turn Lift Gear (R) fully counterclockwise.
  2. Restore Wormwheel Ass'y to Stud.
     Match Lift Gear (R) to Wormwheel Hole as illustrated.

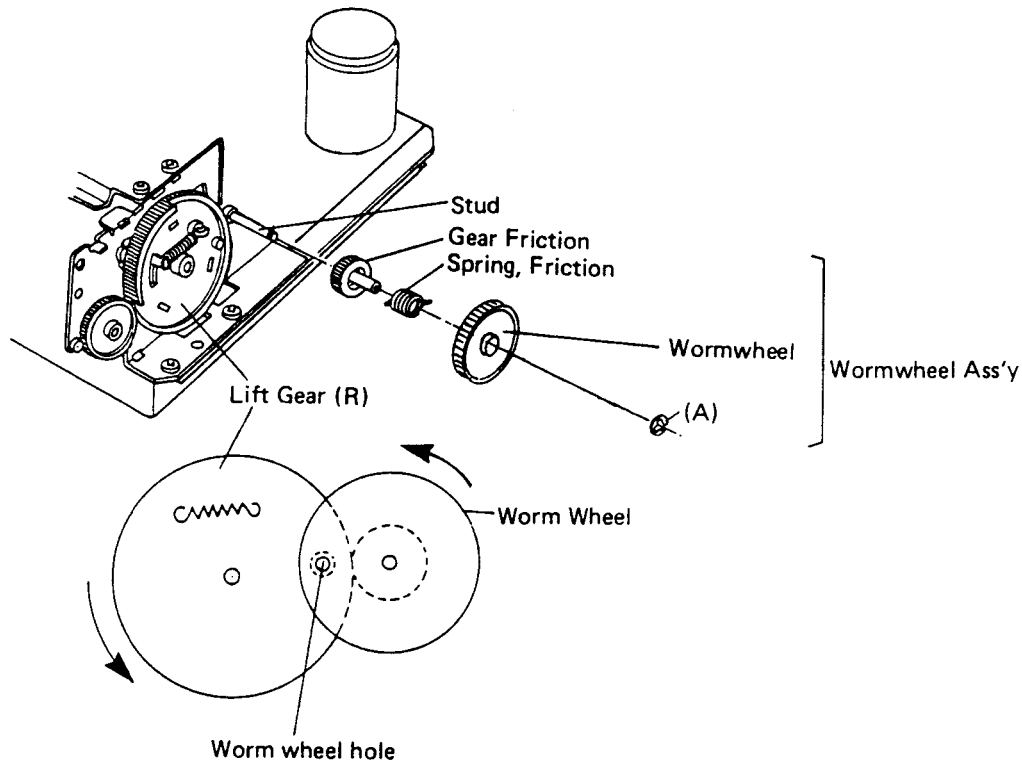

BLOCK DIAGRAM (VIDEO/AUDIO)

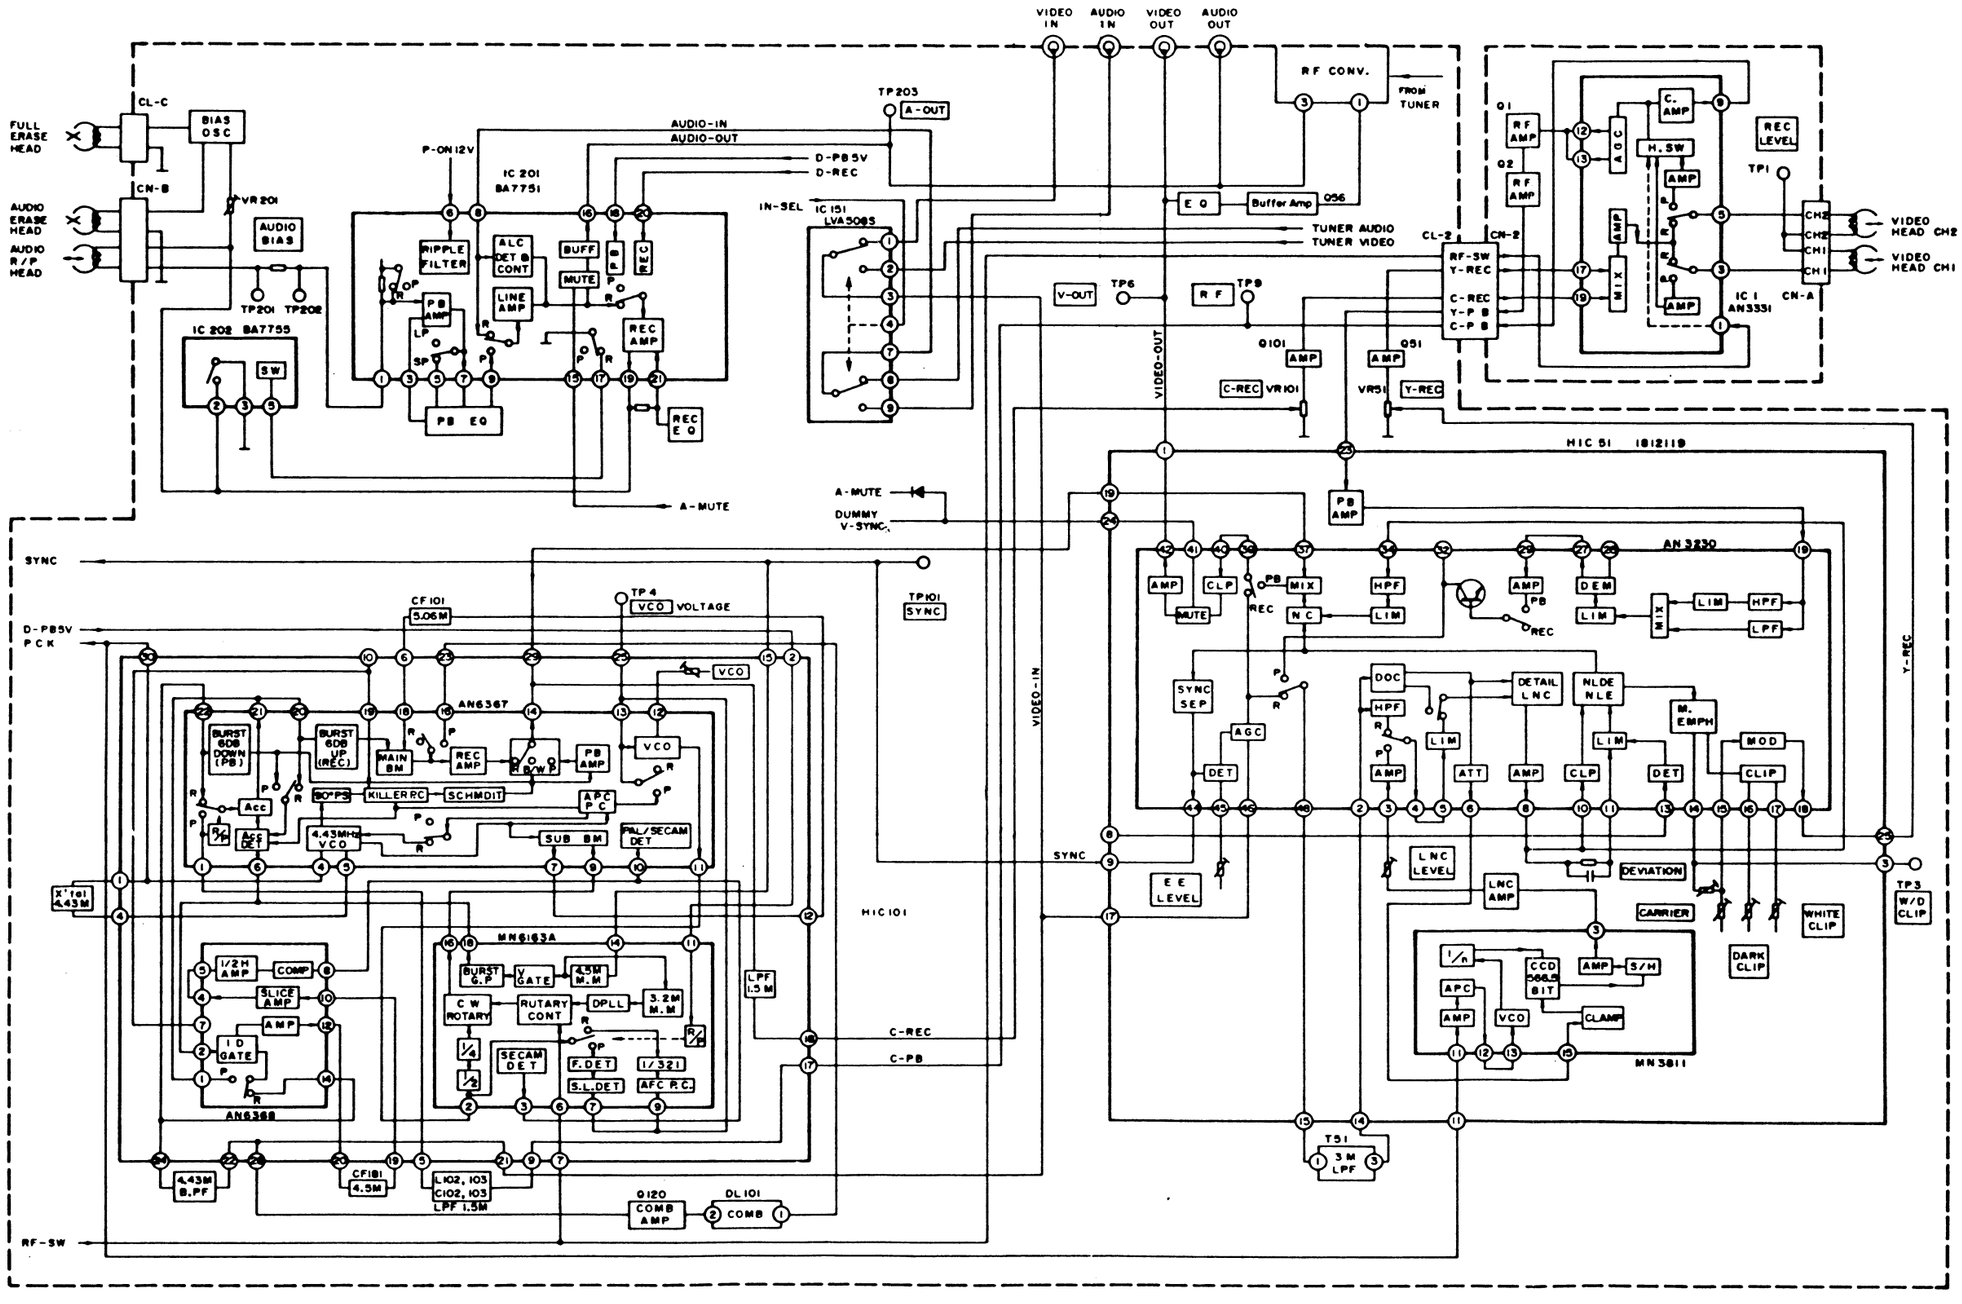

BV-1

BLOCK DIAGRAM (SERVO/SYSCON/TUNER/TIMER/CONTROL)

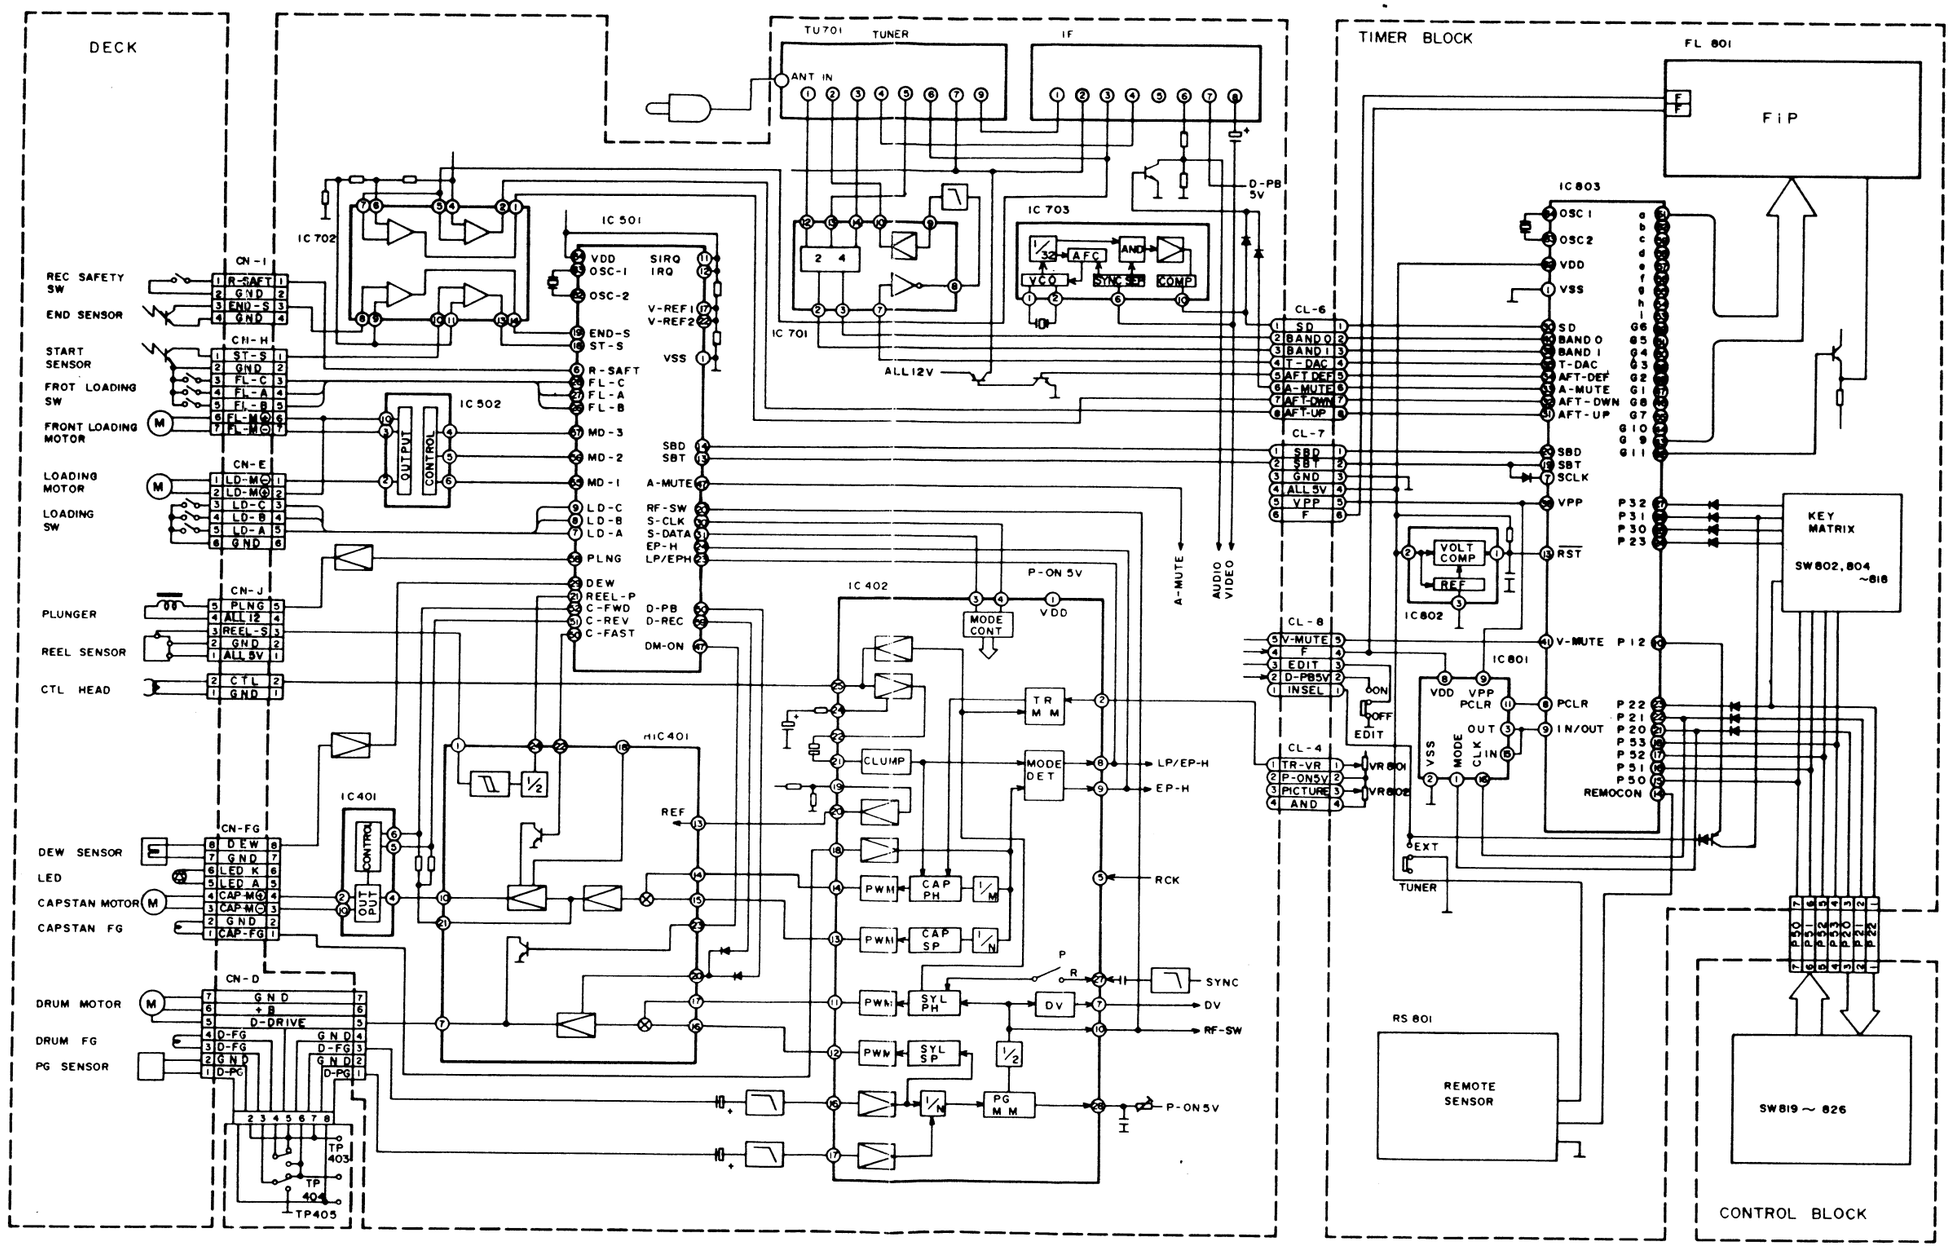

BS-1

DECK ADJUSTMENT

1. Audio/control head height and azimuth adjustment.
   1. Connect CH1 of oscilloscope to AUDIO OUT. (Fig. 4-14)

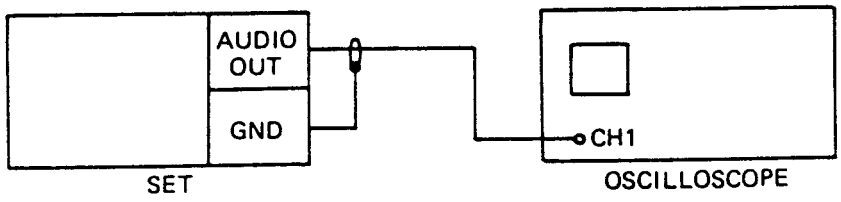

Fig. 4-14

2. Playback test tape F-6A 1kHz Audio Signal.
3. Adjust nut Ⓐ to obtain maximum audio output level (Fig.4-15/17)
4. Playback test tape F-6N (6kHz Audio Signal)
5. Adjust screw Ⓒ to obtain maximum audio output level (Fig.4-16/17)
6. Check that smooth tape transportation at the take-up guide pole. Especially tape separate and wrinkling. If these problem occur Pre-adjust Ⓐ and Ⓒ. (Fig.4-17)
7. djust screw Ⓑ to obtain maxium audio output level. (Fig.4-16/17)

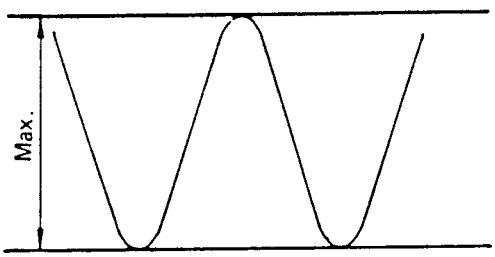

1 kHz Fig. 4-15

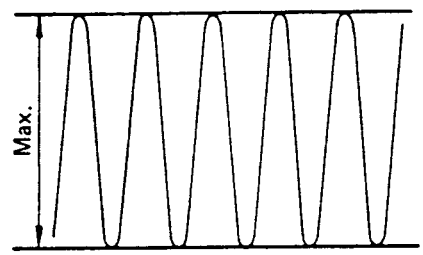

6 kHz Fig. 4-16

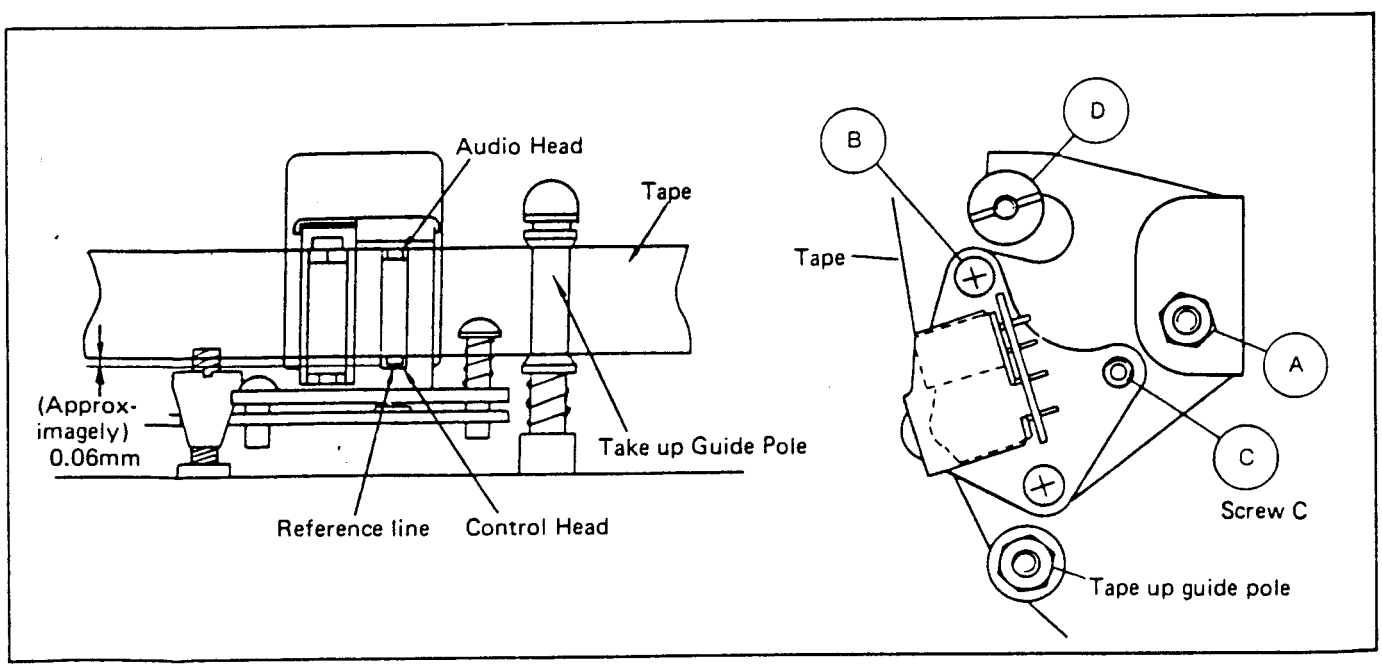

Fig. 4-17 A/C Head Adjustment

2. **FM peak adjustment**
   1. Connect CH1 of oscilloscope to TP9.
   2. Connect CH2 of oscilloscope across TP401 and Ground.
   3. Set oscilloscope to TRIGGER mode.

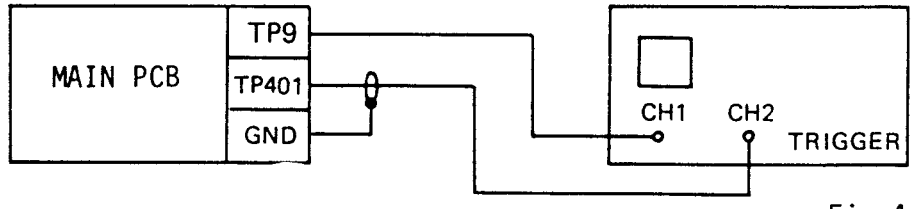

Fig.4-18

   4. Playback test tape F-6N (stair step without color signal).
   5. Adjust screw Ⓓ to obtain maximum FM output level. (Fig. 4-17,4-19)



Fig.4-19

3. **FM waveform adjustment**

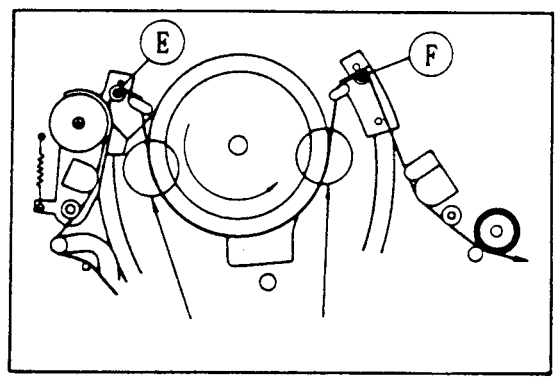

Fig.4-20

   1. Connect CH1 of oscilloscope to TP9.
   2. Connect CH2 of oscilloscope across TP401 and GND.
   3. Set oscilloscope to TRIGGER mode.

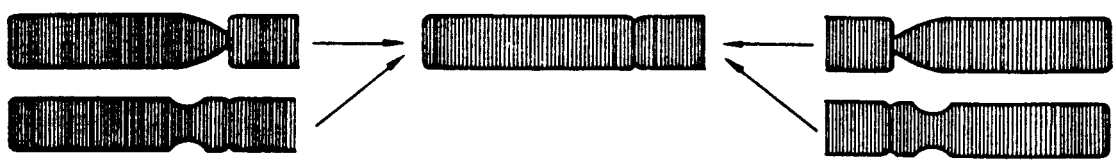

Fig. 4-21 **Fig. 4-22** **Fig.4-23**

   4. Playback test tape F-6N (stair step without color signal).
   5. If the FM waveform observing by oscilloscope as same as shown in Fig. 4-21, adjust screw Ⓕ until waveform becomes as shown in Fig. 4-22.
   6. If the FM waveform observing by oscilloscope is as same as shown in Fig. 4-23, adjust screw Ⓔ until wave form becomes as shown in Fig. 4-22.

NOTE: 1. Confirm that Electrical Adjustment (Video Head Switching Point and CTL Preset) has been done before Deck Adjustment.
2. Deck Adjustment should be done at Tracking Volume center position.

Service schedule of components

○:Check ●:Replace

Deck		Periodic Service Schedule			
Ref.No	Parts Name	1000 hr	2000 hr	3000 hr	4000 hr
2	Drum, upper with video head	○	●	○	●
224	Pinch Roller (A)		●		●
301	Ass'y, Clutch		●		●
392	Motor Ass'y, Capstan		●		●
651	Motor with Pulley			●	
702	Motor Ass'y, Loading			●	
373	Belt, Main		●		●
393	Belt, Drive		●		●
394	Belt, Joint		●		●
659	Belt, TL		●		●
338	Shue, Brake		●		●
193	Flat Ass'y, Back Tension		●		●
16	Ground, Drum			●	
142	Head, Audio/Control			●	
178	Head, Full Erase			●	
281	Reel Ass'y, Supply			●	
282	Reel Ass'y, Take-up (B)			●	
311	Clutch Ass'y, RF (B)		●		●

－How to service the defective units.－

1. Clean all parts for the tape transportion.
   Drum, upper with video head/Pinch Rollre
   Audio/Control head/Full erase head
2. After clean up the parts must be confirmed all DECK ADJUSTMENT.

ALIGNMENT INSTRUCTIONS

PREPARATION

Electrical adjustments are required after replacing circuit components and certain mechanical parts. It is important to perform these adjustments only after all repairs and replacements have been completed. Also, do not attempt these adjustments unless the proper equipment is available.

REQUIRED TEST EQUIPMENT

1. Oscilloscope : Dual-trace with 10 : 1 prove.
2. Frequency Counter
3. Color Monitor
4. Pattern Generator (Color bar with 100% white)
5. AC Voltmeter (RMS)
6. Alignment Tape F6-A (Color bar with 100% white)

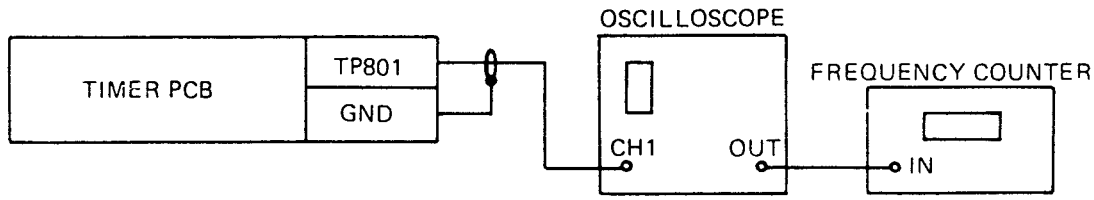

Fig. 1

No.	Item	Test point	Adjustment point	Method	Connection Figure
1	Timer clock E-E Mode	TP801 Ground	TC801	1. Connect the oscilloscope across. TP801 and Ground. 2. Connect the frequency counter to oscilloscope out. 3. Make adjustment by TC801 so that the indication of frequency counter becomes 524.288 kHz ± 1Hz.	Fig. 1

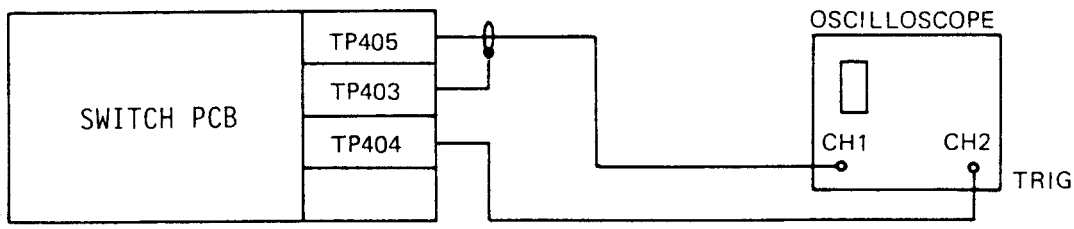

Fig. 2

No.	Item	Test point	Adjustment point	Method	Connection Figure
2	Drum PG/FG polarity Adjustment (P:B. Mode) Test Tape F6-A	TP403 (GND) TP404 (FG) TP405 (PG)	SW401	1. Connect CH1 of oscilloscope across. TP405 and Ground (TP403). 2. Connect CH2 of oscilloscope to TP404. 3. Set oscilloscope mode to (−) Trigger. 4. Set SW401 either position so that PG, FG pulse becomes as shown below. 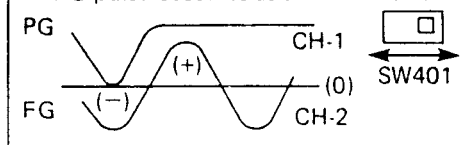	Fig. 2

* SW401 adjustment only needs when the deck is replaced.

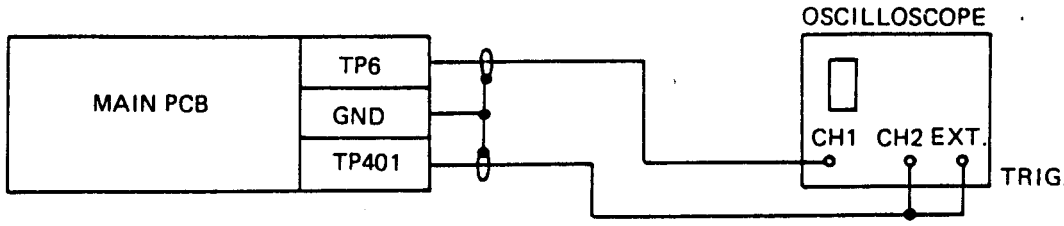

Fig. 3

No.	Item	Test point	Adjustment point	Method	Connection Figure
3	Switching point Adjustment Test Tape F6-A	TP6 TP401	VR401	1. Connect CH1 to TP6 of VIDEO-OUT and CH2 toTP401, and set EXT. Trigger mode (+) Trigger. 2. Playback the tape and adjust by VR401 so that the Vsync front edge of CH1 video output waveform comes the position where 6.5H is delayed from the rising of CH2 Head Switching Pulse waveform. 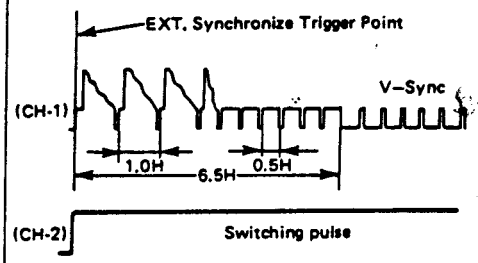	Fig. 3

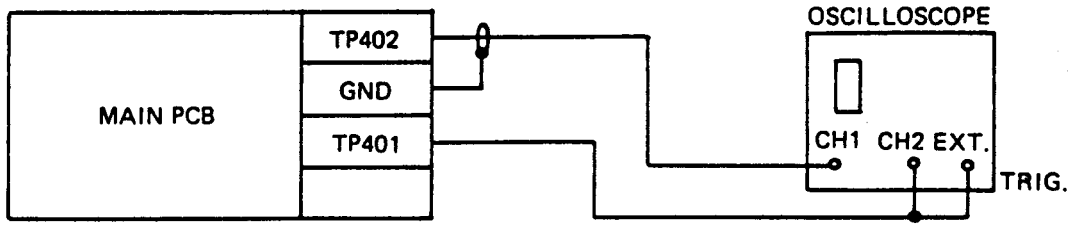

Fig. 4

No.	Item	Test point	Adjustment point	Method	Connection Figure
4	CTL Preset Adjustment (P.B. mode) Test tape F6-A 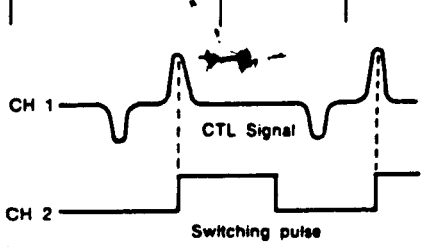	TP402 TP401	VR402	1. Connect CH1 of oscilloscope across TP402 and Ground. 2. Connect CH2 of oscilloscope across TP401 and Ground. 3. Set oscilloscope mode to EXT. Trigger (+) Trigger. 4. Playback the tape by setting tracking volume at center click position. 5. Adjust VR402 to make a position of CTL signal where delated 2.3m sec. from switching pulse starting position. 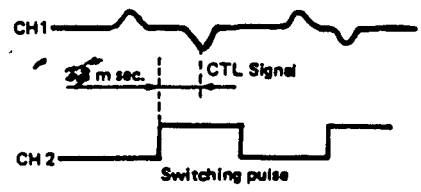	Fig. 4

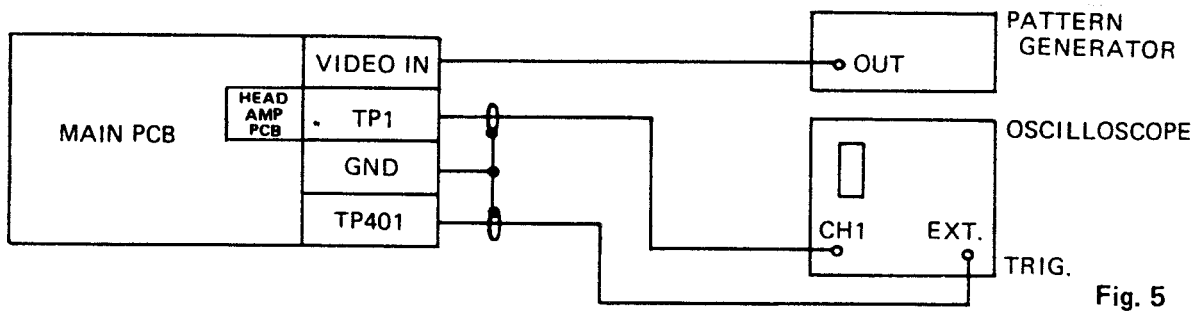

Fig. 5

No.	Item	Test point	Adjustment point	Method	Connection Figure
5	Rec. Current Adjustment (Rec. Mode) Blank tape	TP1 (GND) TP401	VR51 VR101	1. Connect CH1 of oscilloscope across TP1 and Ground. 2. Connect EXT. Trig. of osilloscope across TP101 and Ground. 3. Turn VR51 to fully clockwise direction 4. Input RED only signal to VIDEO INPUT. 5. Adjust by VR101 so that chroma level becomes 25mVp-p, ± 3mV.  25mVp-p 6. Adjust by VR51 so that V-Sync level becomes 140mVp-p ± 10mV. 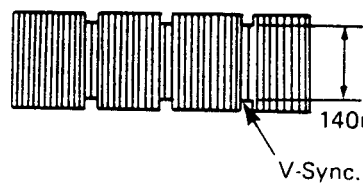 140mVp-p V-Sync.	Fig. 5

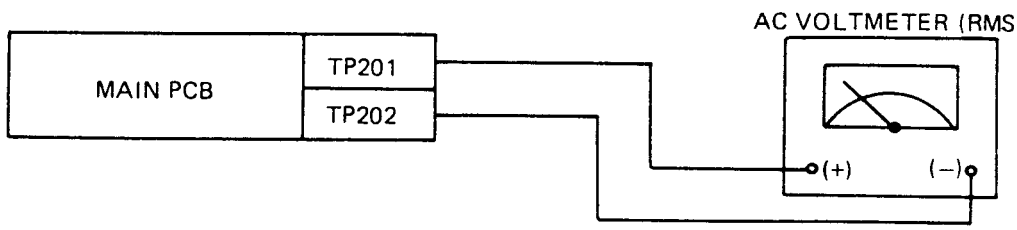

Fig. 6

No.	Item	Test point	Adjustment point	Method	Connection Figure
6	REC Bias Current	TP201 TP202	VR201	1. Set the REC status by the blank tape. (Do not set the PAUSE. In PAUSE mode, the bias oscillation is stopped.) 2. Connect the AC voltmeter to TP201 and TP202. 3. Adjust by VR201 so that the voltage becomes 22 mV.	Fig. 6

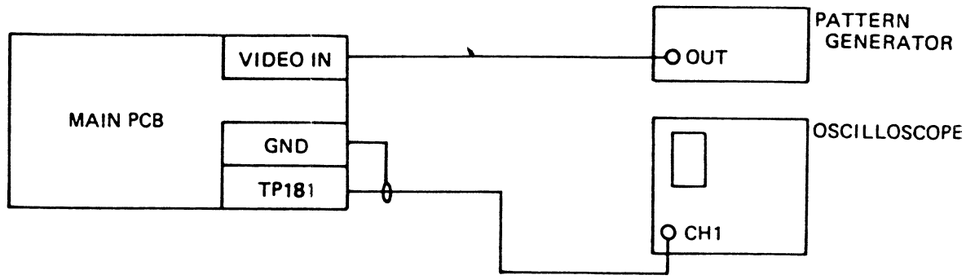

No.	Item	Test point	Adjustment point	Method	Connection Figure
7. *	SECAM 1/2 fH Tune Adjustment (Rec. Mode) Blank tape	TP181 GND	L181	1. Connect the equipment as shown in Fig. 7. 2. Input SECAM color bar to VIDEO IN. 3. Adjust L181 to make maximum output level.	Fig. 7

* Note: Require this adjustment for ME-SECAM model only.

TEST POINTS AND ALIGNMENT POINTS

MAIN PCB

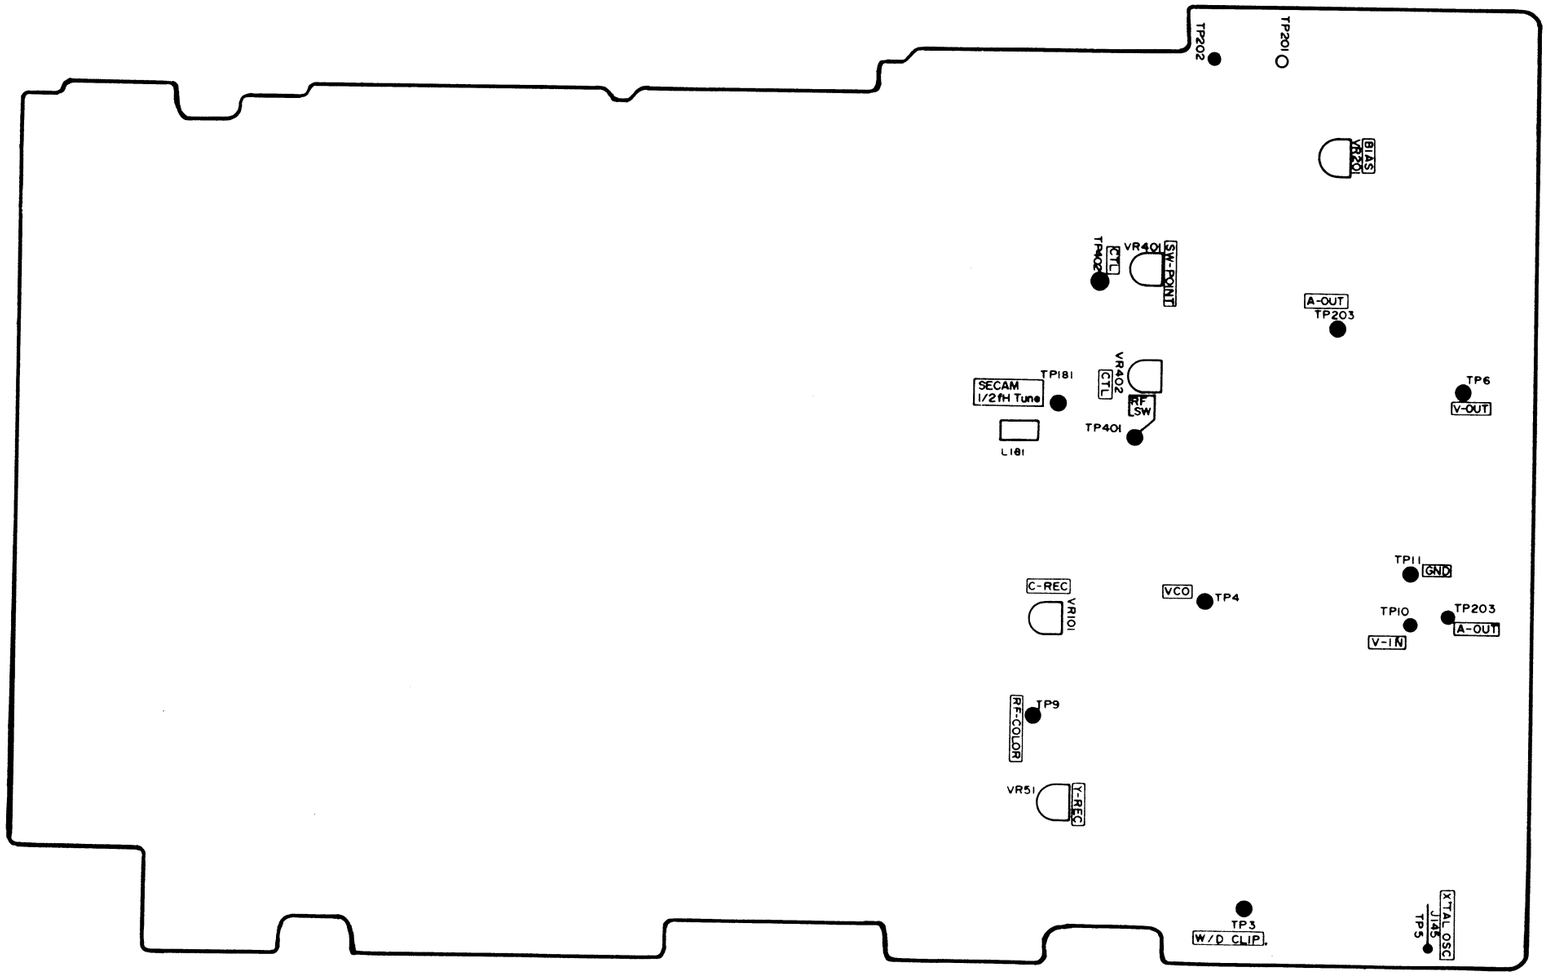

SWITCH PCB

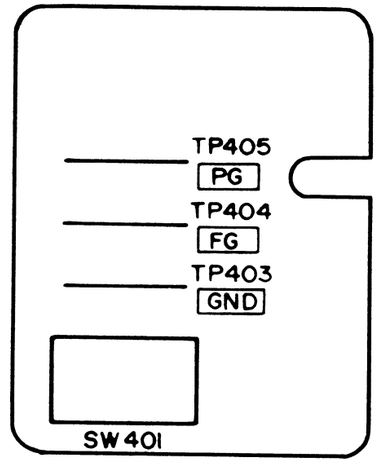

TEST POINTS AND ALIGNMENT POINTS

HEAD AMP PCB

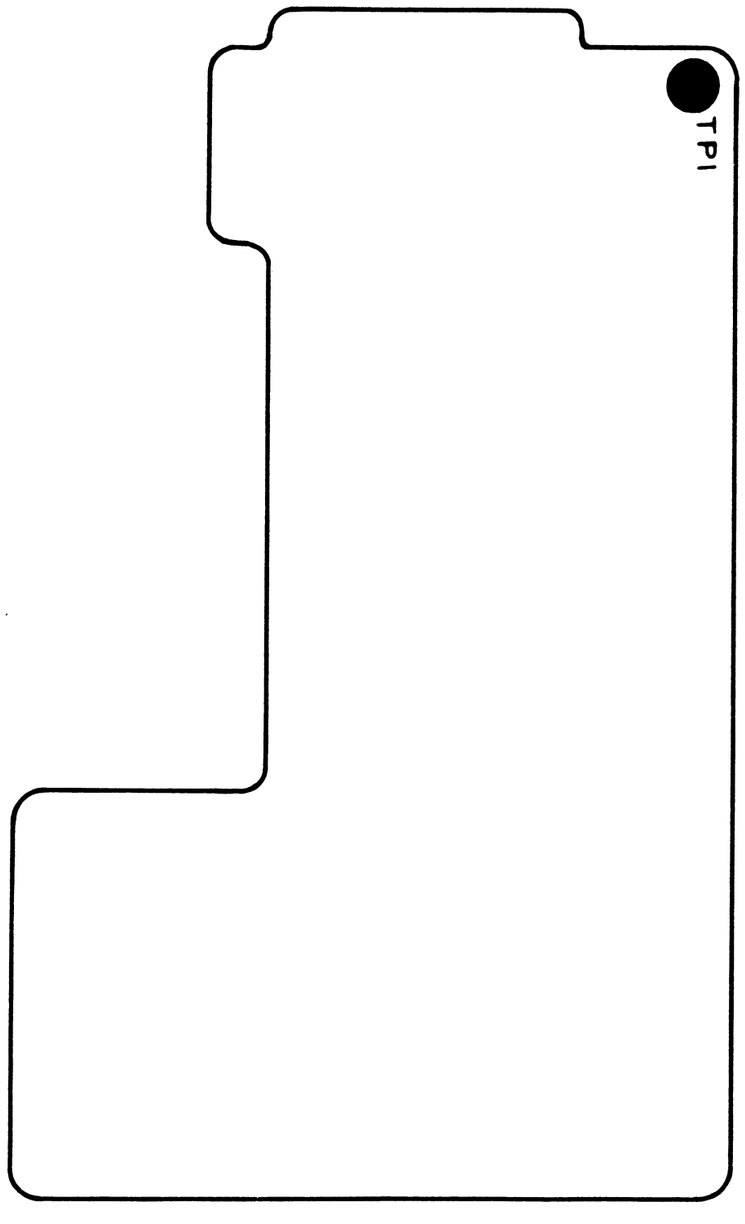

906

TIMER PCB

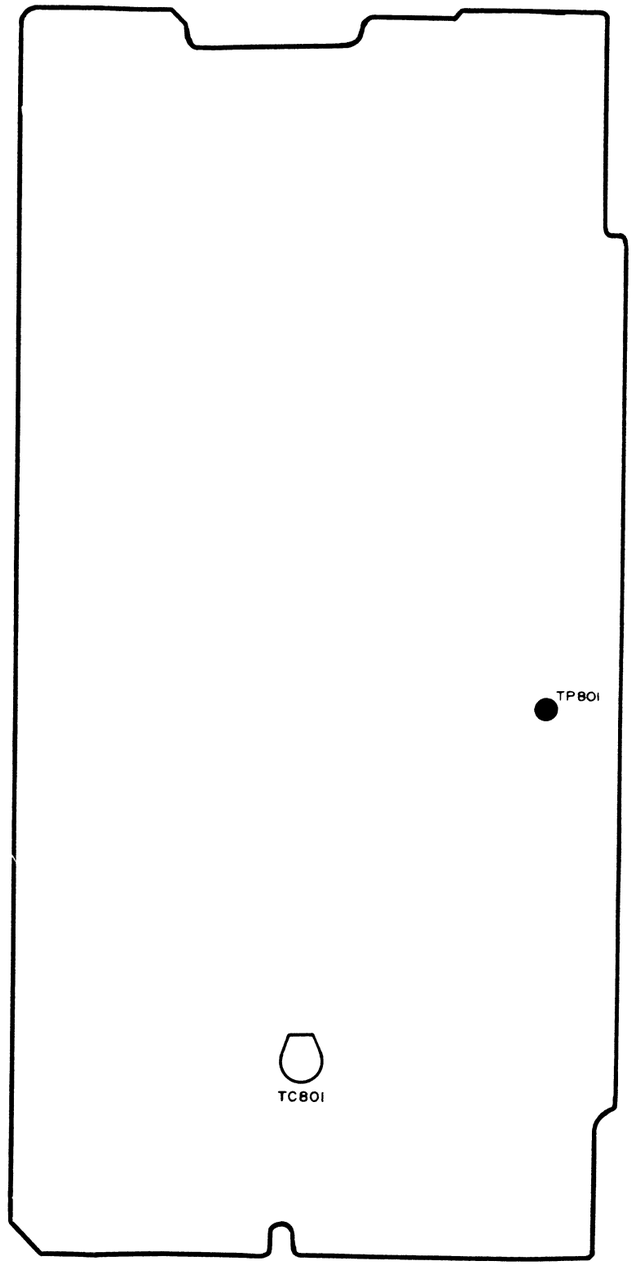

TROUBLESHOOTING GUIDE

Step 1

AC power cord into power outlet.

Step 2

Push power button.

Step 3

Set TV channel selector to receive channel.

Step 4

Set TV channel selector to RF converter channel.

Step 5

Insert cassette tape.

Step 6

Push clock /counter button to COUNTER MODE " 0000 ".
Push counter MEMORY button to " 0000 MEMO " Push REC. button.

Step 7

Tape is automatically rewound when it reached tape end.

Step 8

Push PAUSE button during recording.

Step 9

Push STOP button during recording.

Step 10

Push REW (F.F.) button.

Step 11

VCR is automatically STOP when counter shows around " 0000 ".

Step 12

Push PLAY button.

Step 13

Check Picture during playback.

Step 14

Check the Sound during playback.

Step 15

Check the special variable speed playback.

Step 16

Push STOP button during playback.
Push EJECT button.

Step 17

Set power button to OFF.

END

Step 18

Check SYSTEM CONTROL IC. (IC501)

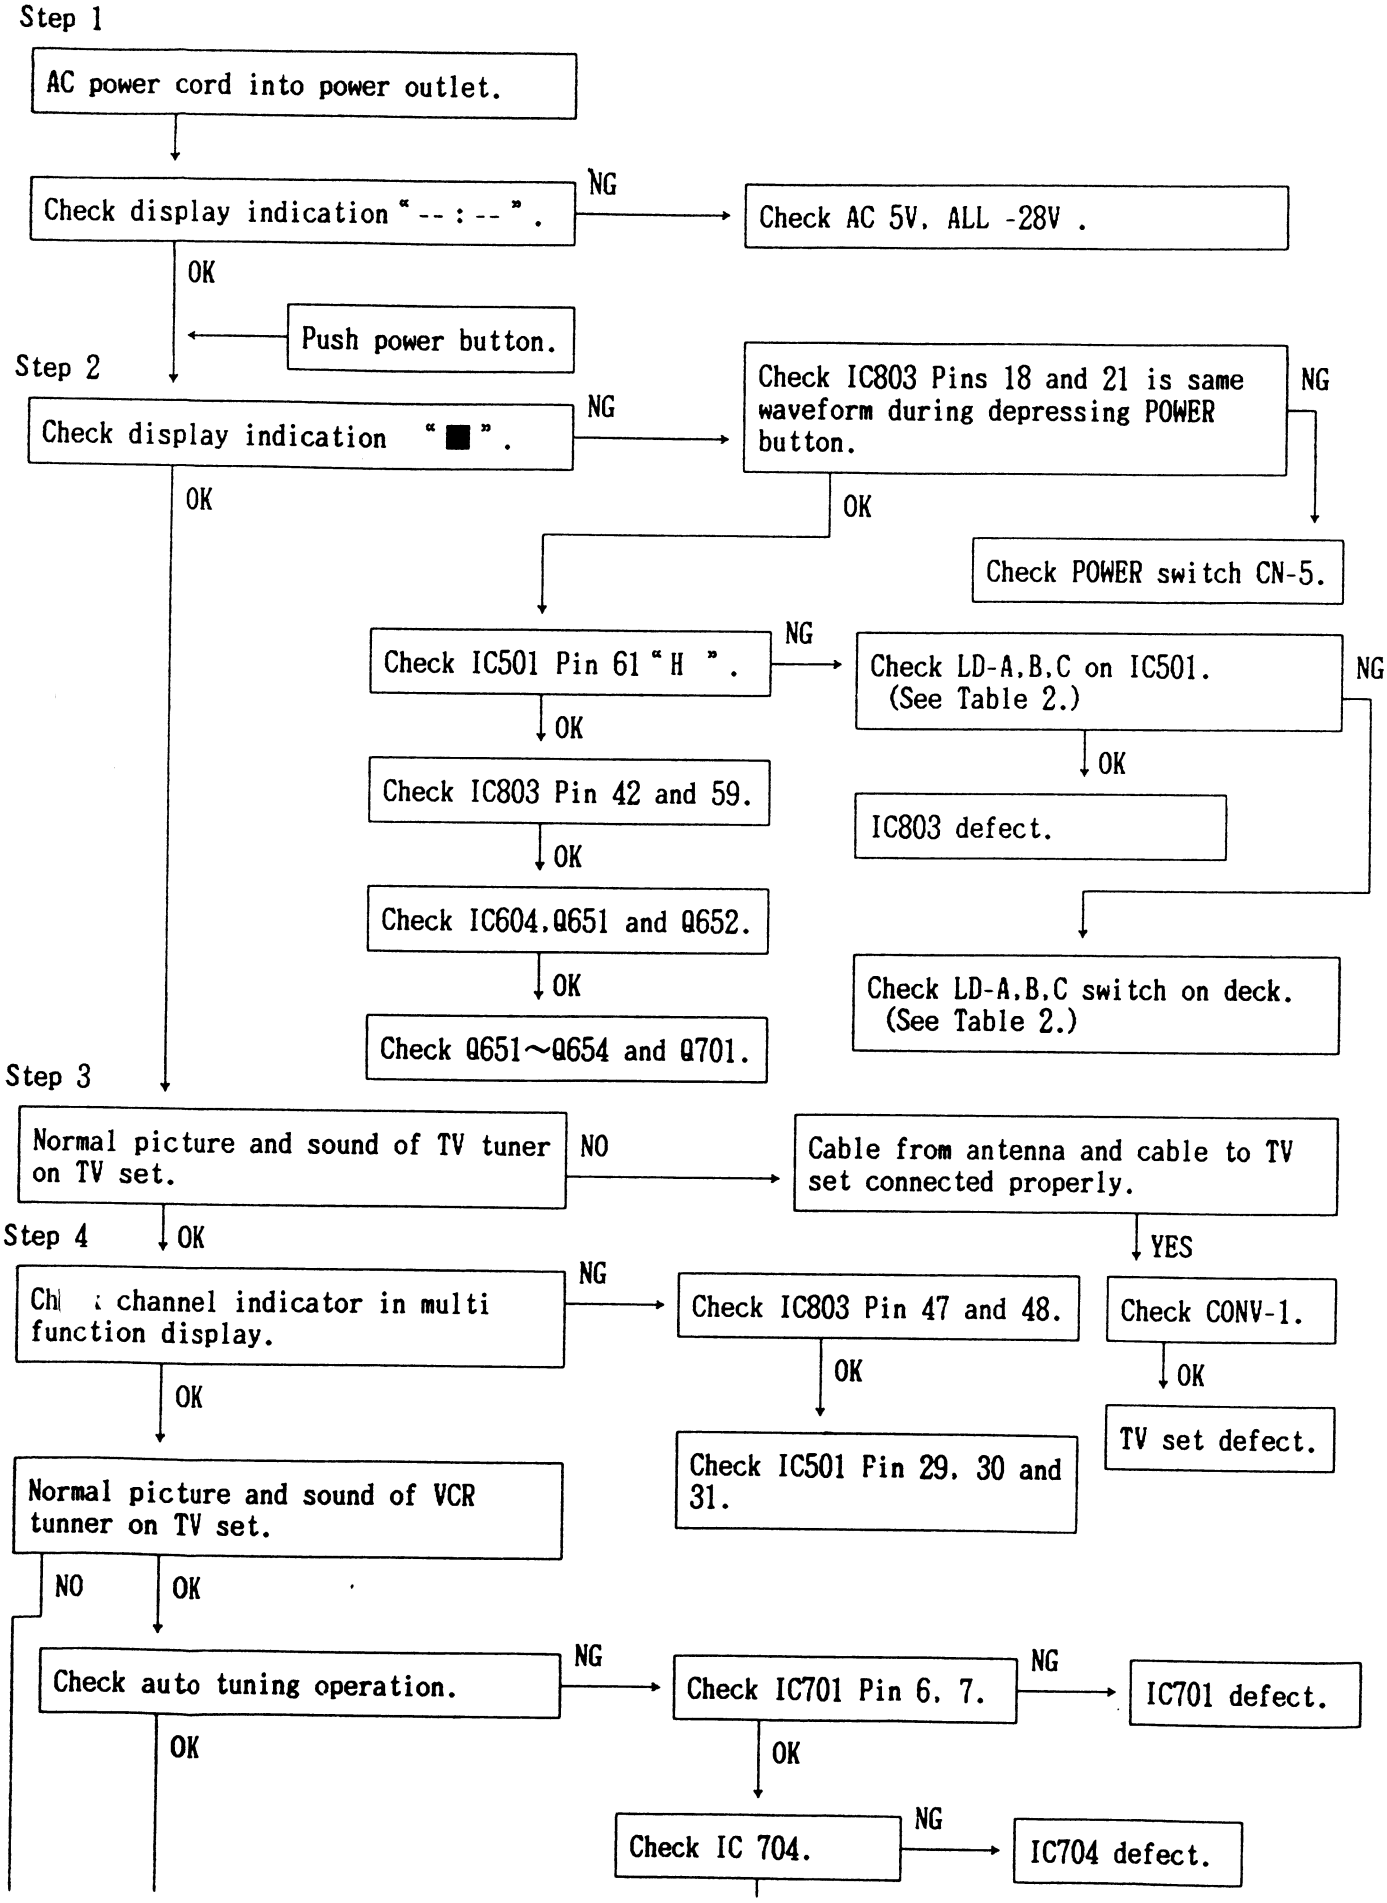
Step 1
AC power cord into power outlet.
Check display indication "--:--".
NG
Check AC 5V, ALL -28V .
OK
Push power button.
Step 2
Check display indication "■".
NG
Check IC803 Pins 18 and 21 is same waveform during depressing POWER button.
NG
OK
Check POWER switch CN-5.
OK
Check IC501 Pin 61 "H ".
NG
Check LD-A,B,C on IC501. (See Table 2.)
NG
OK
OK
Check IC803 Pin 42 and 59.
IC803 defect.
OK
Check IC604,Q651 and Q652.
OK
Check Q651~Q654 and Q701.
Check LD-A,B,C switch on deck. (See Table 2.)
Step 3
Normal picture and sound of TV tuner on TV set.
NO
Cable from antenna and cable to TV set connected properly.
Step 4
OK
YES
Ch : channel indicator in multi function display.
NG
Check IC803 Pin 47 and 48.
Check CONV-1.
OK
OK
OK
TV set defect.
Check IC501 Pin 29, 30 and 31.
Normal picture and sound of VCR tunner on TV set.
NO
OK
Check auto tuning operation.
NG
Check IC701 Pin 6, 7.
NG
IC701 defect.
OK
OK
Check IC 704.
NG
IC704 defect.

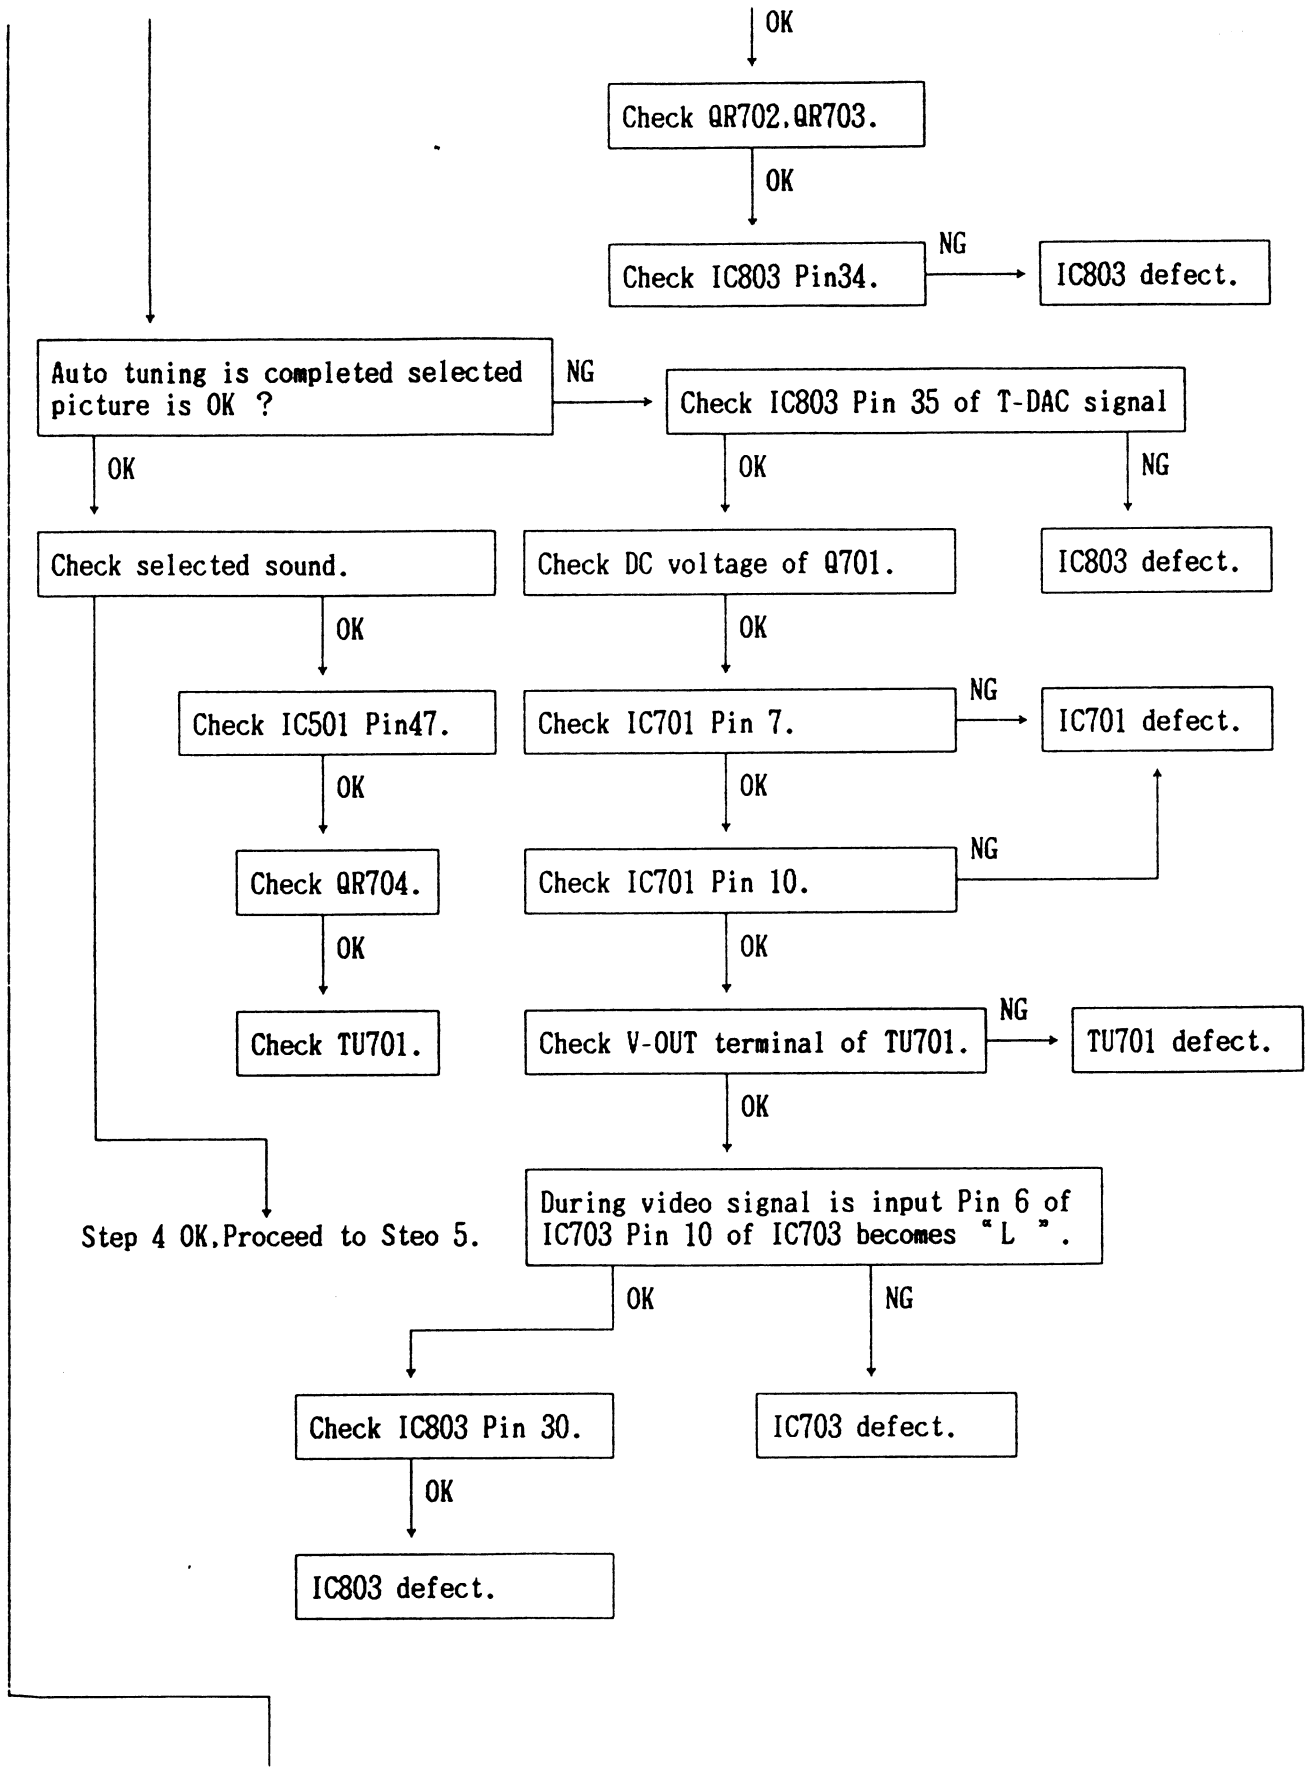
OK
Check QR702,QR703.
OK
Check IC803 Pin34.
NG
IC803 defect.
Auto tuning is completed selected picture is OK ?
NG
Check IC803 Pin 35 of T-DAC signal
OK
OK
NG
Check selected sound.
Check DC voltage of Q701.
IC803 defect.
OK
OK
Check IC501 Pin47.
Check IC701 Pin 7.
NG
IC701 defect.
OK
OK
Check QR704.
Check IC701 Pin 10.
NG
OK
OK
Check TU701.
Check V-OUT terminal of TU701.
NG
TU701 defect.
OK
Step 4 OK,Proceed to Steo 5.
During video signal is input Pin 6 of IC703 Pin 10 of IC703 becomes "L".
OK
NG
Check IC803 Pin 30.
IC703 defect.
OK
IC803 defect.

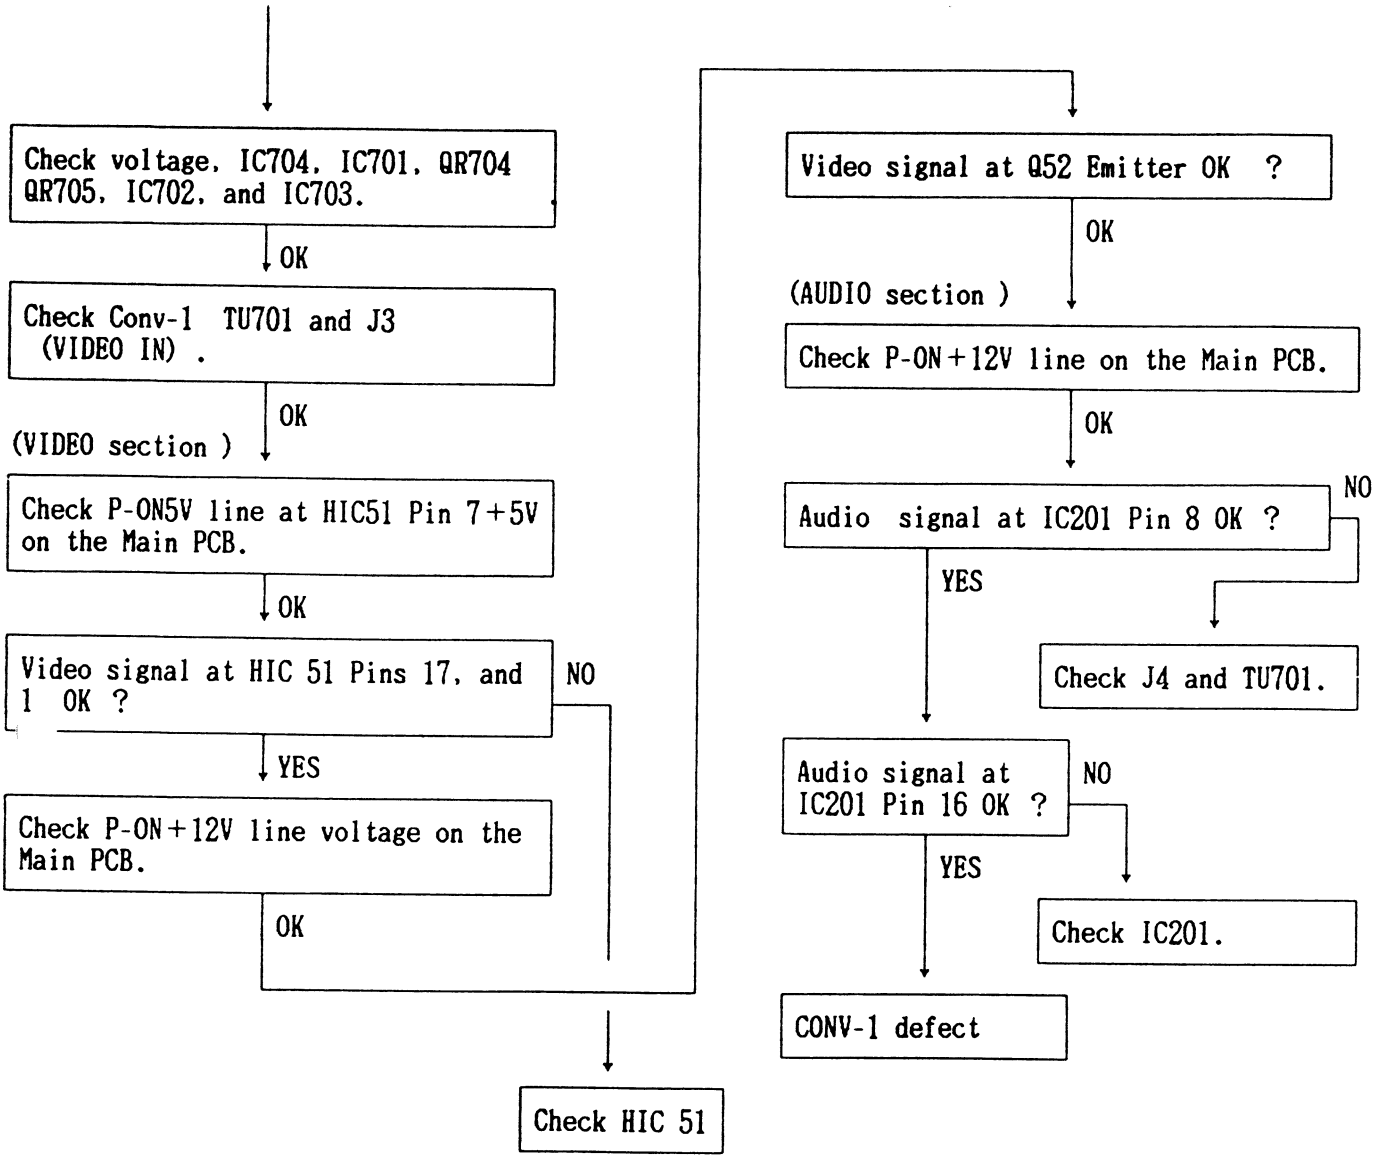
Check voltage, IC704, IC701, QR704 QR705, IC702, and IC703.
OK
Check Conv-1 TU701 and J3 (VIDEO IN) .
OK
(VIDEO section)
Check P-ON5V line at HIC51 Pin 7+5V on the Main PCB.
OK
Video signal at HIC 51 Pins 17, and 1 OK ?
NO
YES
Check P-ON+12V line voltage on the Main PCB.
OK
Check HIC 51
Video signal at Q52 Emitter OK ?
OK
(AUDIO section)
Check P-ON+12V line on the Main PCB.
OK
Audio signal at IC201 Pin 8 OK ?
NO
YES
Check J4 and TU701.
Audio signal at IC201 Pin 16 OK ?
NO
YES
Check IC201.
CONV-1 defect

Step 5

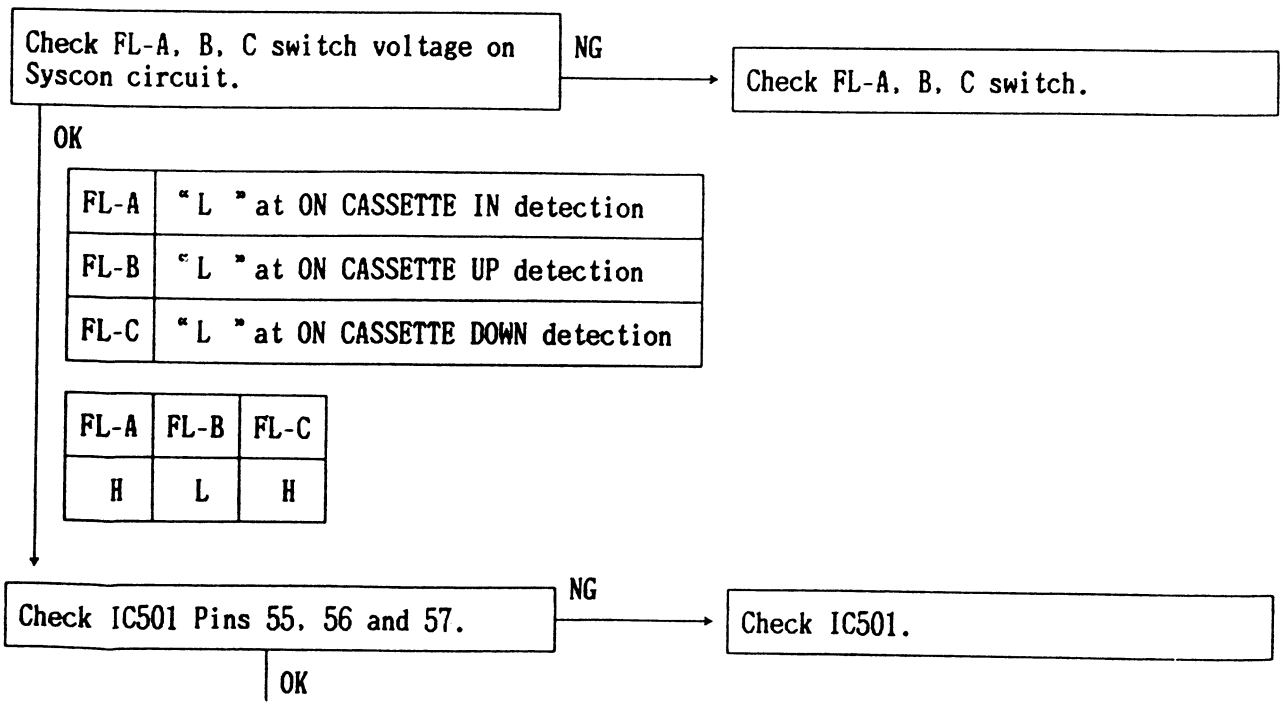
Check FL-A, B, C switch voltage on Syscon circuit.
NG
Check FL-A, B, C switch.
OK
FL-A "L" at ON CASSETTE IN detection
FL-B "L" at ON CASSETTE UP detection
FL-C "L" at ON CASSETTE DOWN detection
FL-A FL-B FL-C
H L H
Check IC501 Pins 55, 56 and 57.
NG
Check IC501.
OK

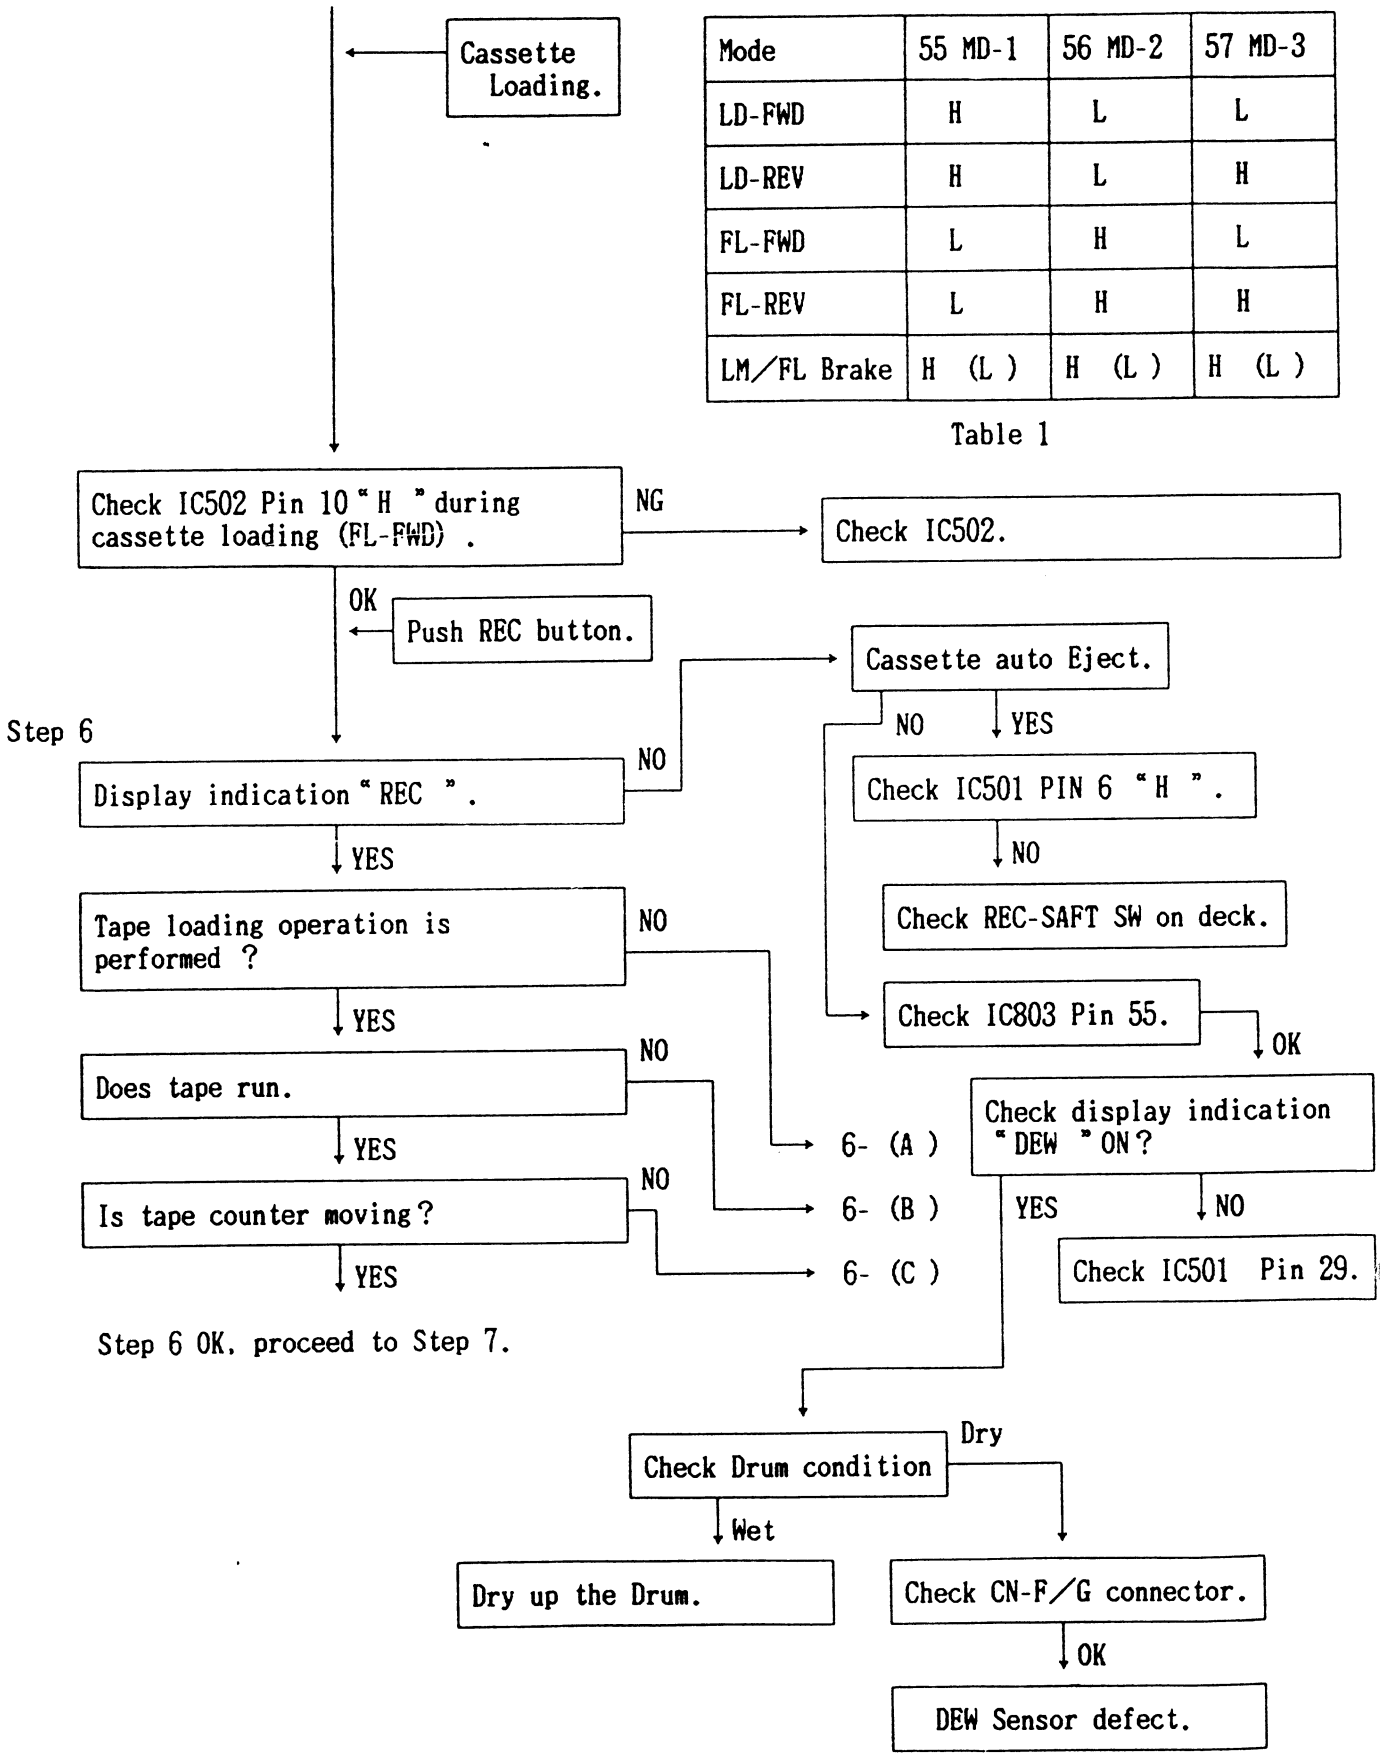

Mode	55 MD-1	56 MD-2	57 MD-3
LD-FWD	H	L	L
LD-REV	H	L	H
FL-FWD	L	H	L
FL-REV	L	H	H
LM/FL Brake	H (L)	H (L)	H (L)

Table 1

6- (A)

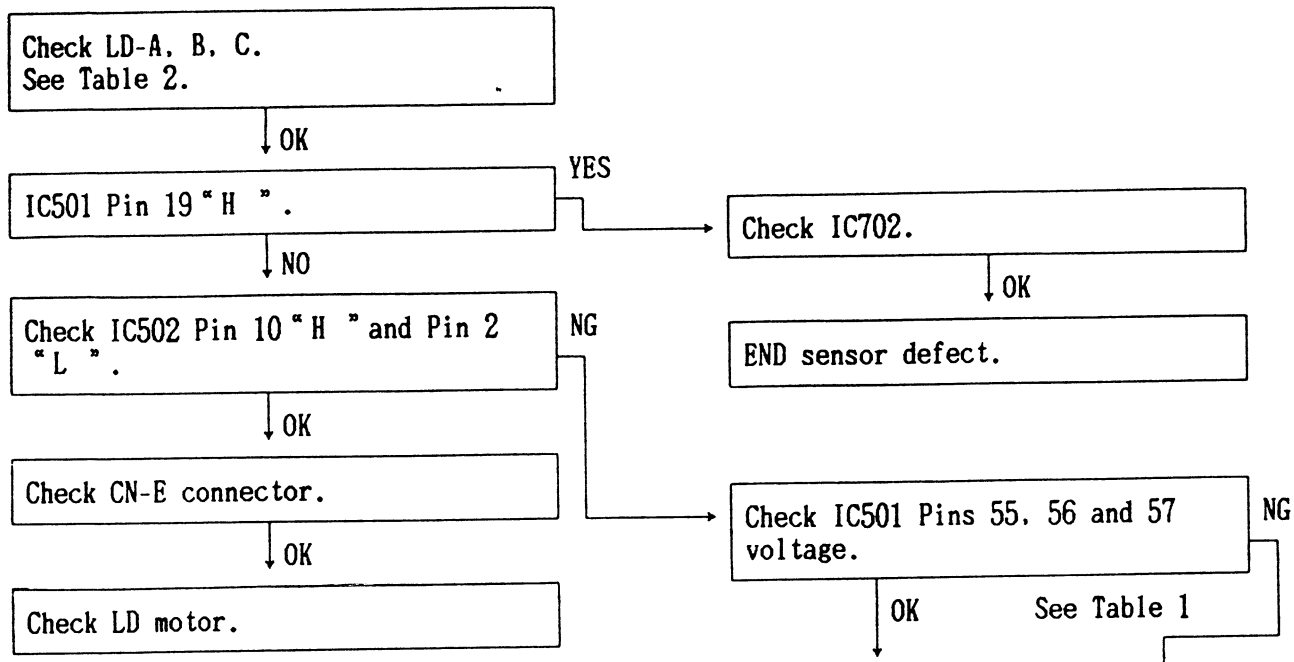
Check LD-A, B, C.
See Table 2.
OK
IC501 Pin 19 " H ".
YES
Check IC702.
OK
END sensor defect.
NO
Check IC502 Pin 10 " H " and Pin 2 " L ".
NG
OK
Check CN-E connector.
OK
Check LD motor.
Check IC501 Pins 55, 56 and 57 voltage.
NG
OK
See Table 1
IC502 defect.
Check IC501.

6- (B)

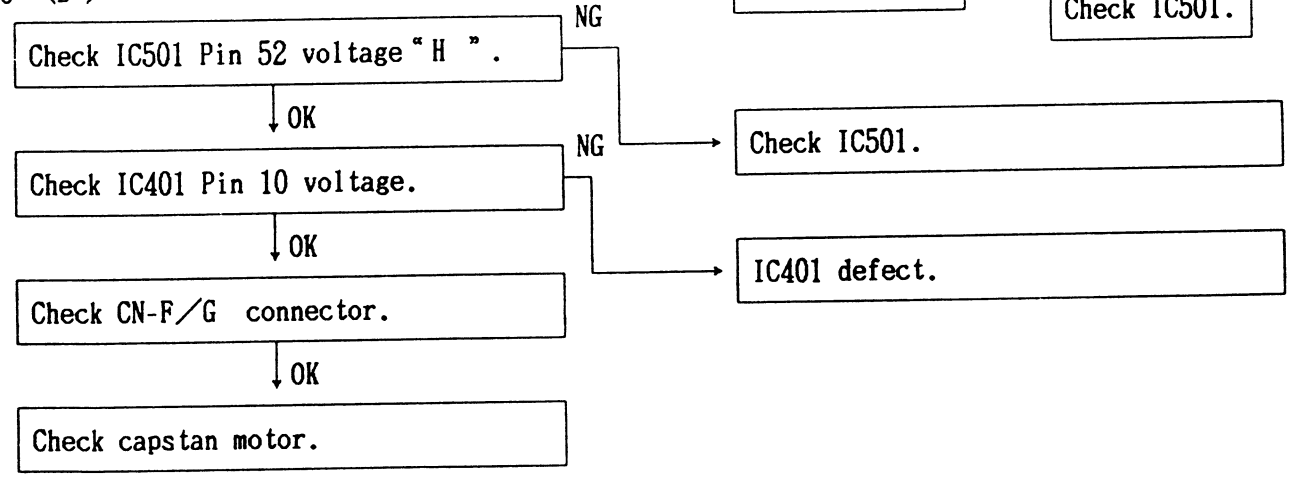
Check IC501 Pin 52 voltage " H ".
NG
OK
Check IC501.
Check IC401 Pin 10 voltage.
NG
OK
IC401 defect.
Check CN-F/G connector.
OK
Check capstan motor.

6- (C)

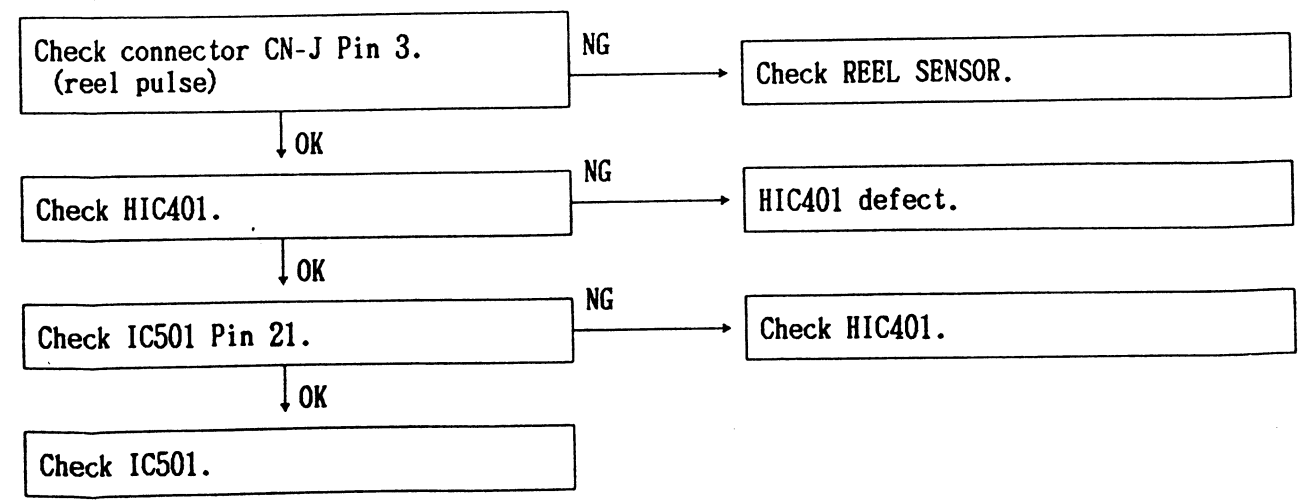
Check connector CN-J Pin 3. (reel pulse)
NG
Check REEL SENSOR.
OK
Check HIC401.
NG
HIC401 defect.
OK
Check IC501 Pin 21.
NG
Check HIC401.
OK
Check IC501.

Step 7

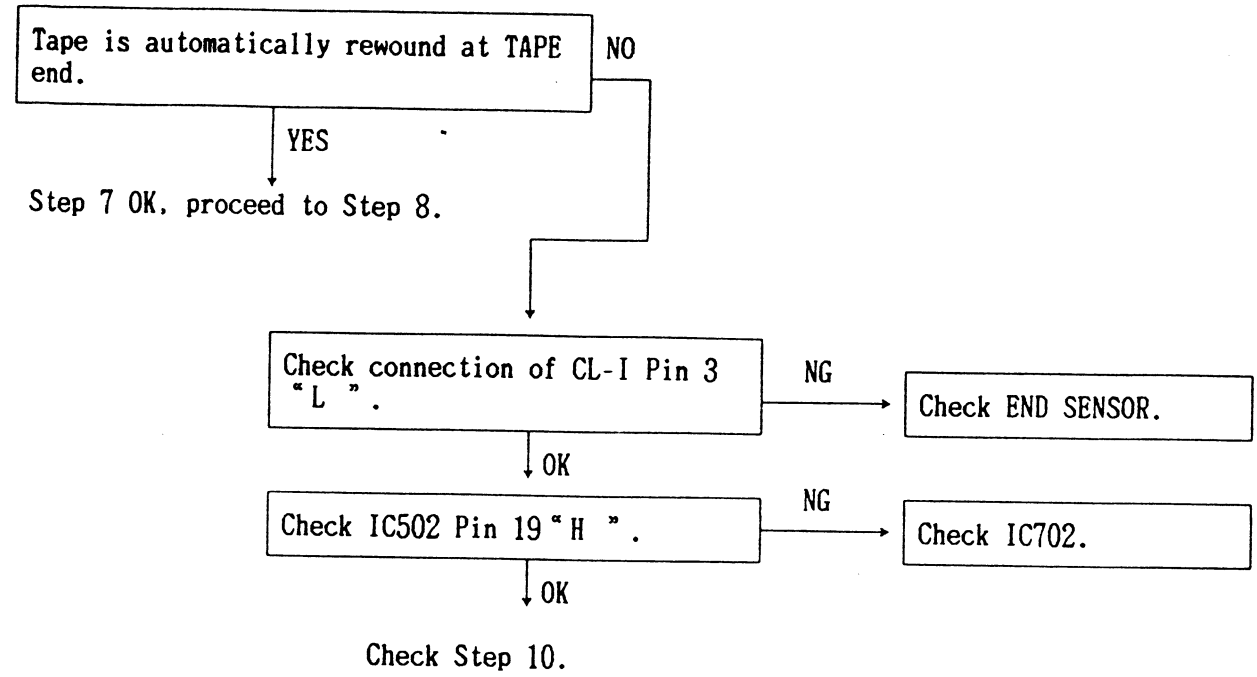
Tape is automatically rewound at TAPE end.
NO
YES
Step 7 OK, proceed to Step 8.
Check connection of CL-I Pin 3 "L".
NG
Check END SENSOR.
OK
Check IC502 Pin 19 "H".
NG
Check IC702.
OK
Check Step 10.

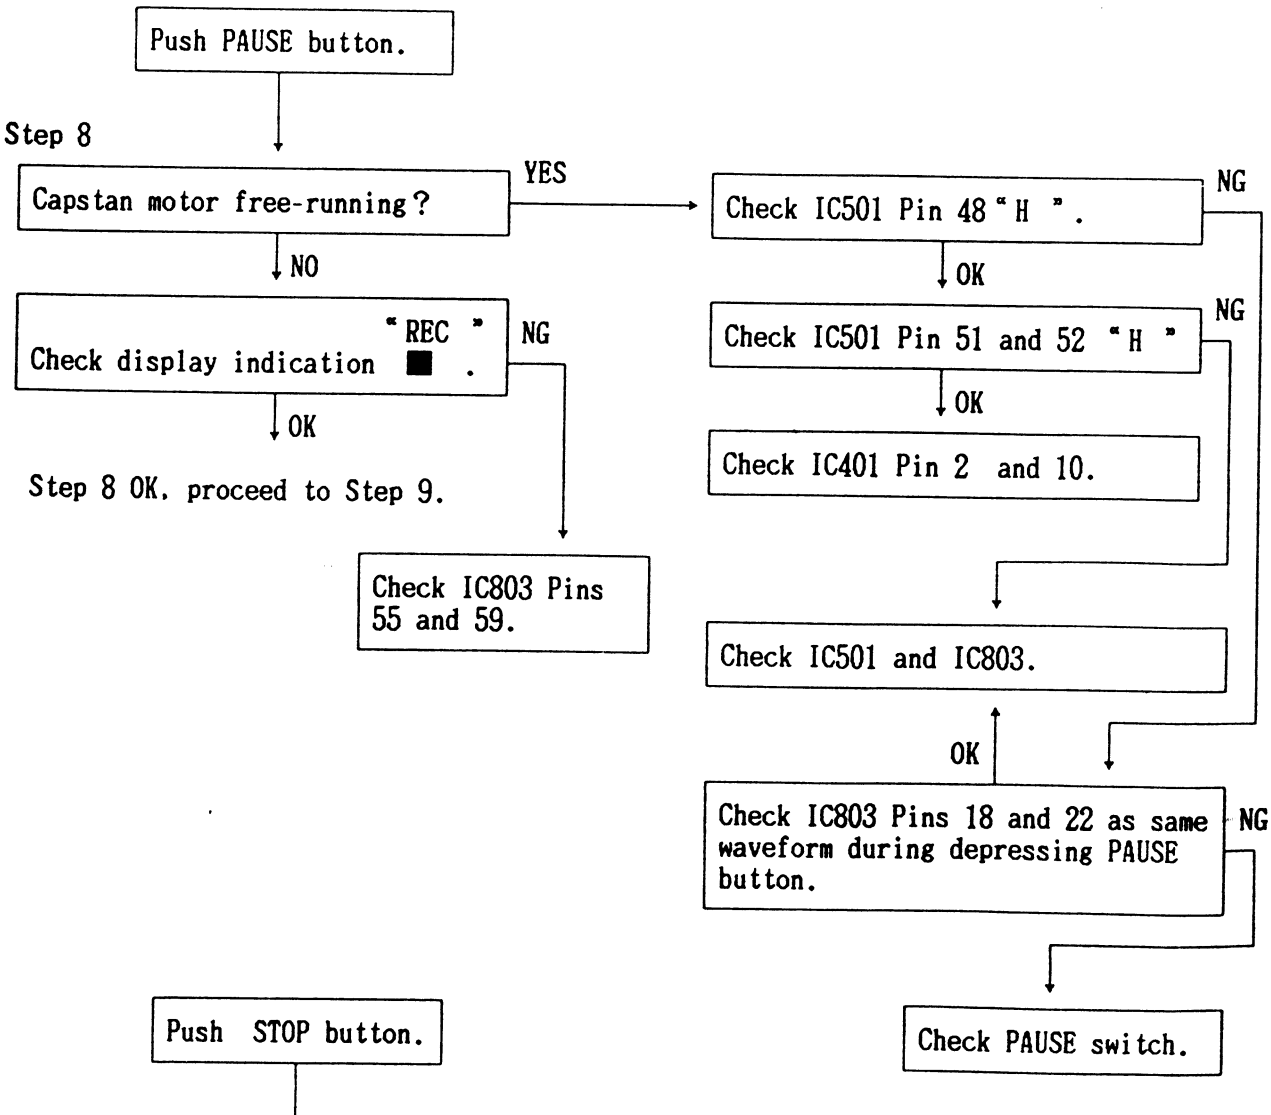
Push PAUSE button.
Step 8
Capstan motor free-running?
YES
NO
Check display indication "REC" ■.
NG
OK
Step 8 OK, proceed to Step 9.
Check IC803 Pins 55 and 59.
Check IC501 Pin 48 "H".
NG
OK
Check IC501 Pin 51 and 52 "H"
NG
OK
Check IC401 Pin 2 and 10.
Check IC501 and IC803.
OK
Check IC803 Pins 18 and 22 as same waveform during depressing PAUSE button.
NG
Check PAUSE switch.
Push STOP button.

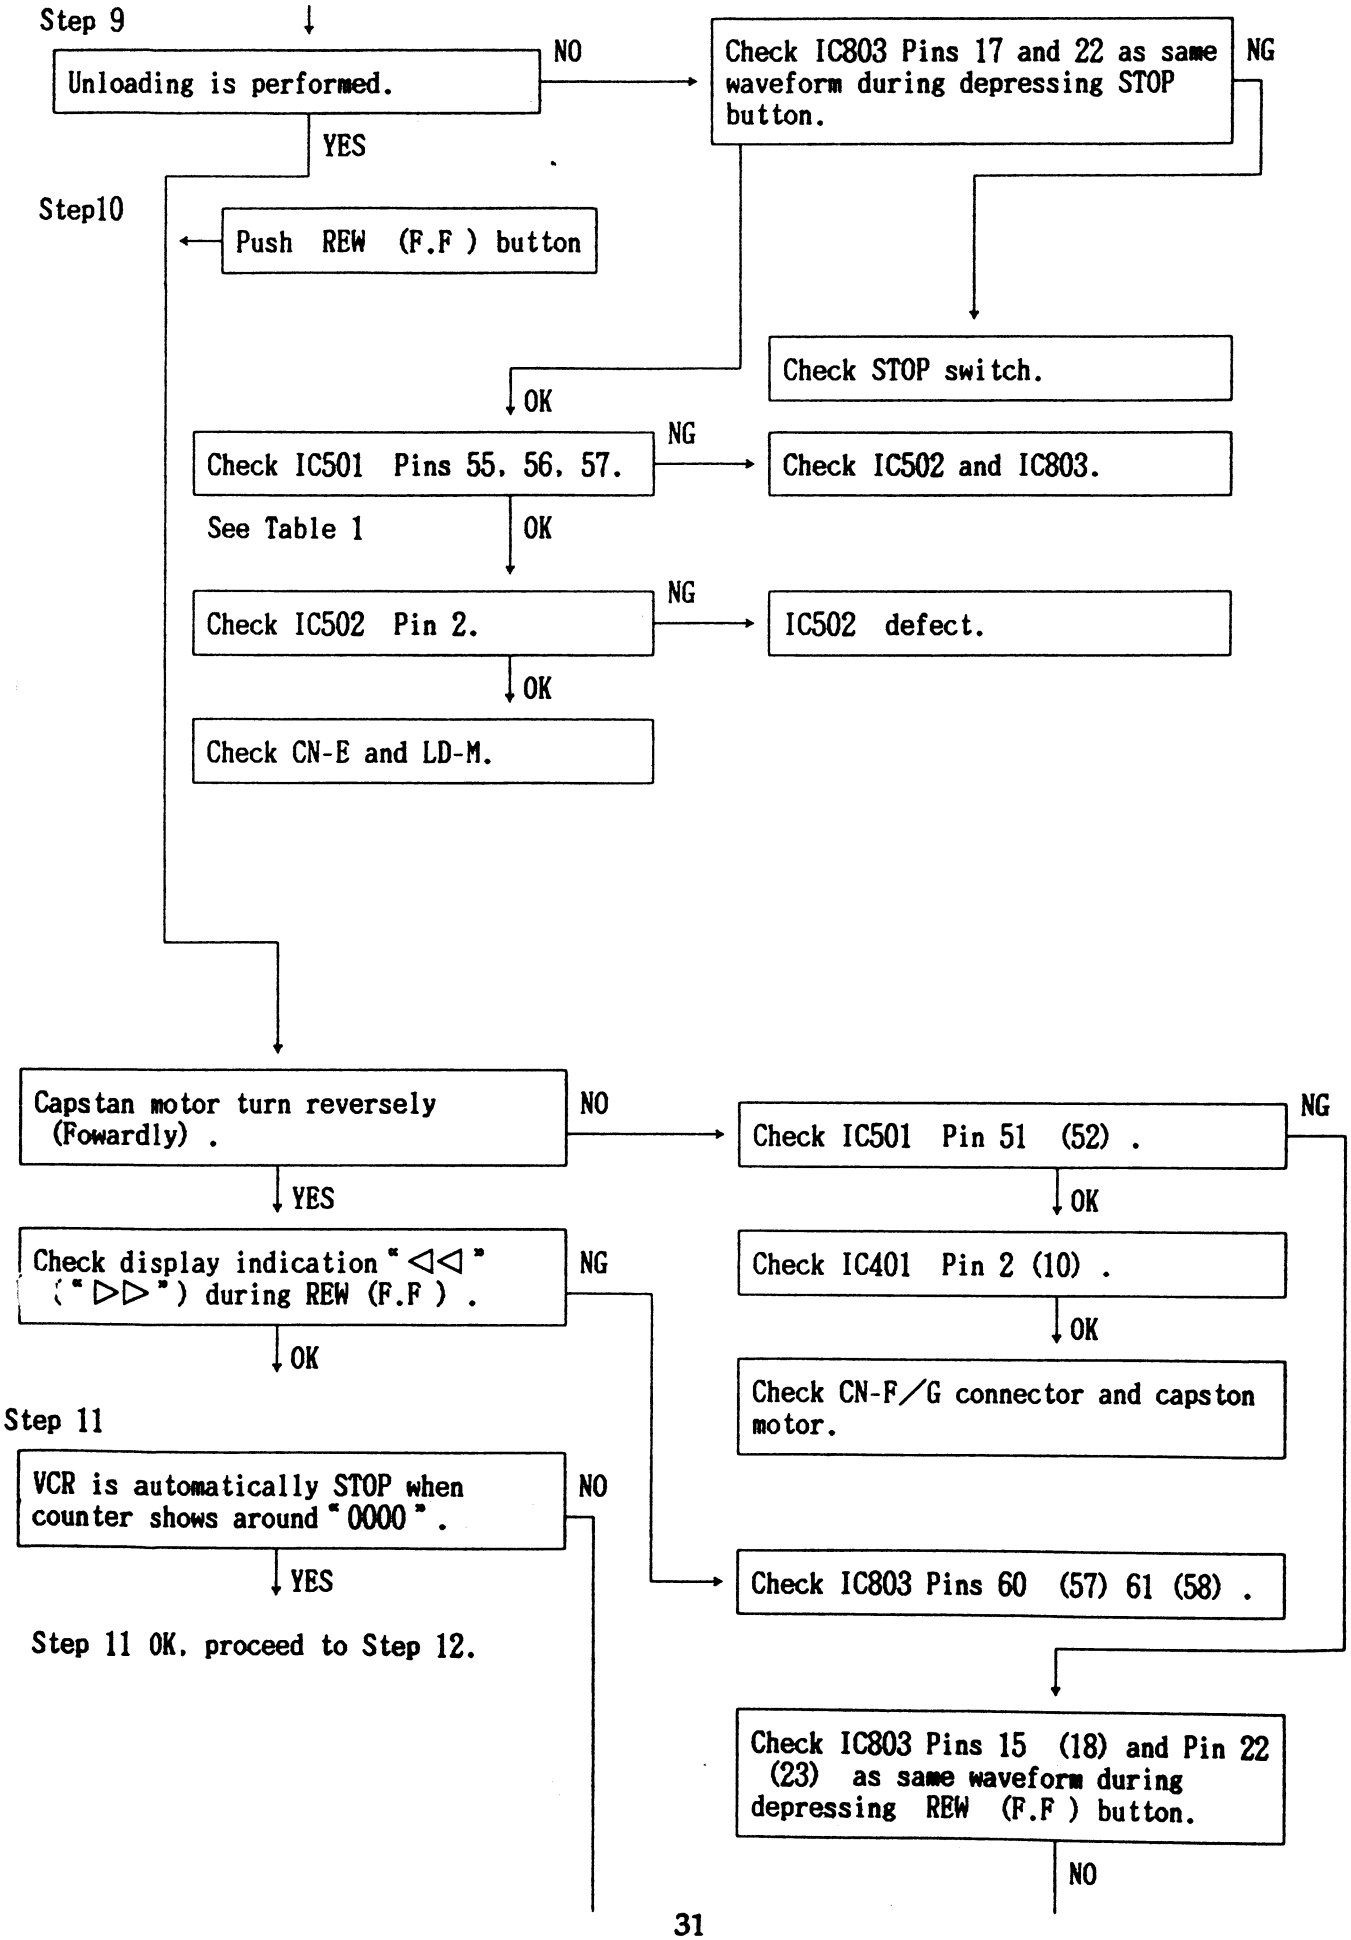
Step 9
Unloading is performed.
NO
Check IC803 Pins 17 and 22 as same waveform during depressing STOP button.
NG
YES
Step10
Push REW (F.F) button
Check STOP switch.
OK
Check IC501 Pins 55, 56, 57.
NG
Check IC502 and IC803.
See Table 1
OK
Check IC502 Pin 2.
NG
IC502 defect.
OK
Check CN-E and LD-M.
Capstan motor turn reversely (Fowardly) .
NO
Check IC501 Pin 51 (52) .
NG
YES
OK
Check display indication "◁◁" ("▷▷") during REW (F.F) .
NG
Check IC401 Pin 2 (10) .
OK
OK
Check CN-F/G connector and capston motor.
Step 11
VCR is automatically STOP when counter shows around "0000" .
NO
YES
Check IC803 Pins 60 (57) 61 (58) .
Step 11 OK, proceed to Step 12.
Check IC803 Pins 15 (18) and Pin 22 (23) as same waveform during depressing REW (F.F) button.
NO

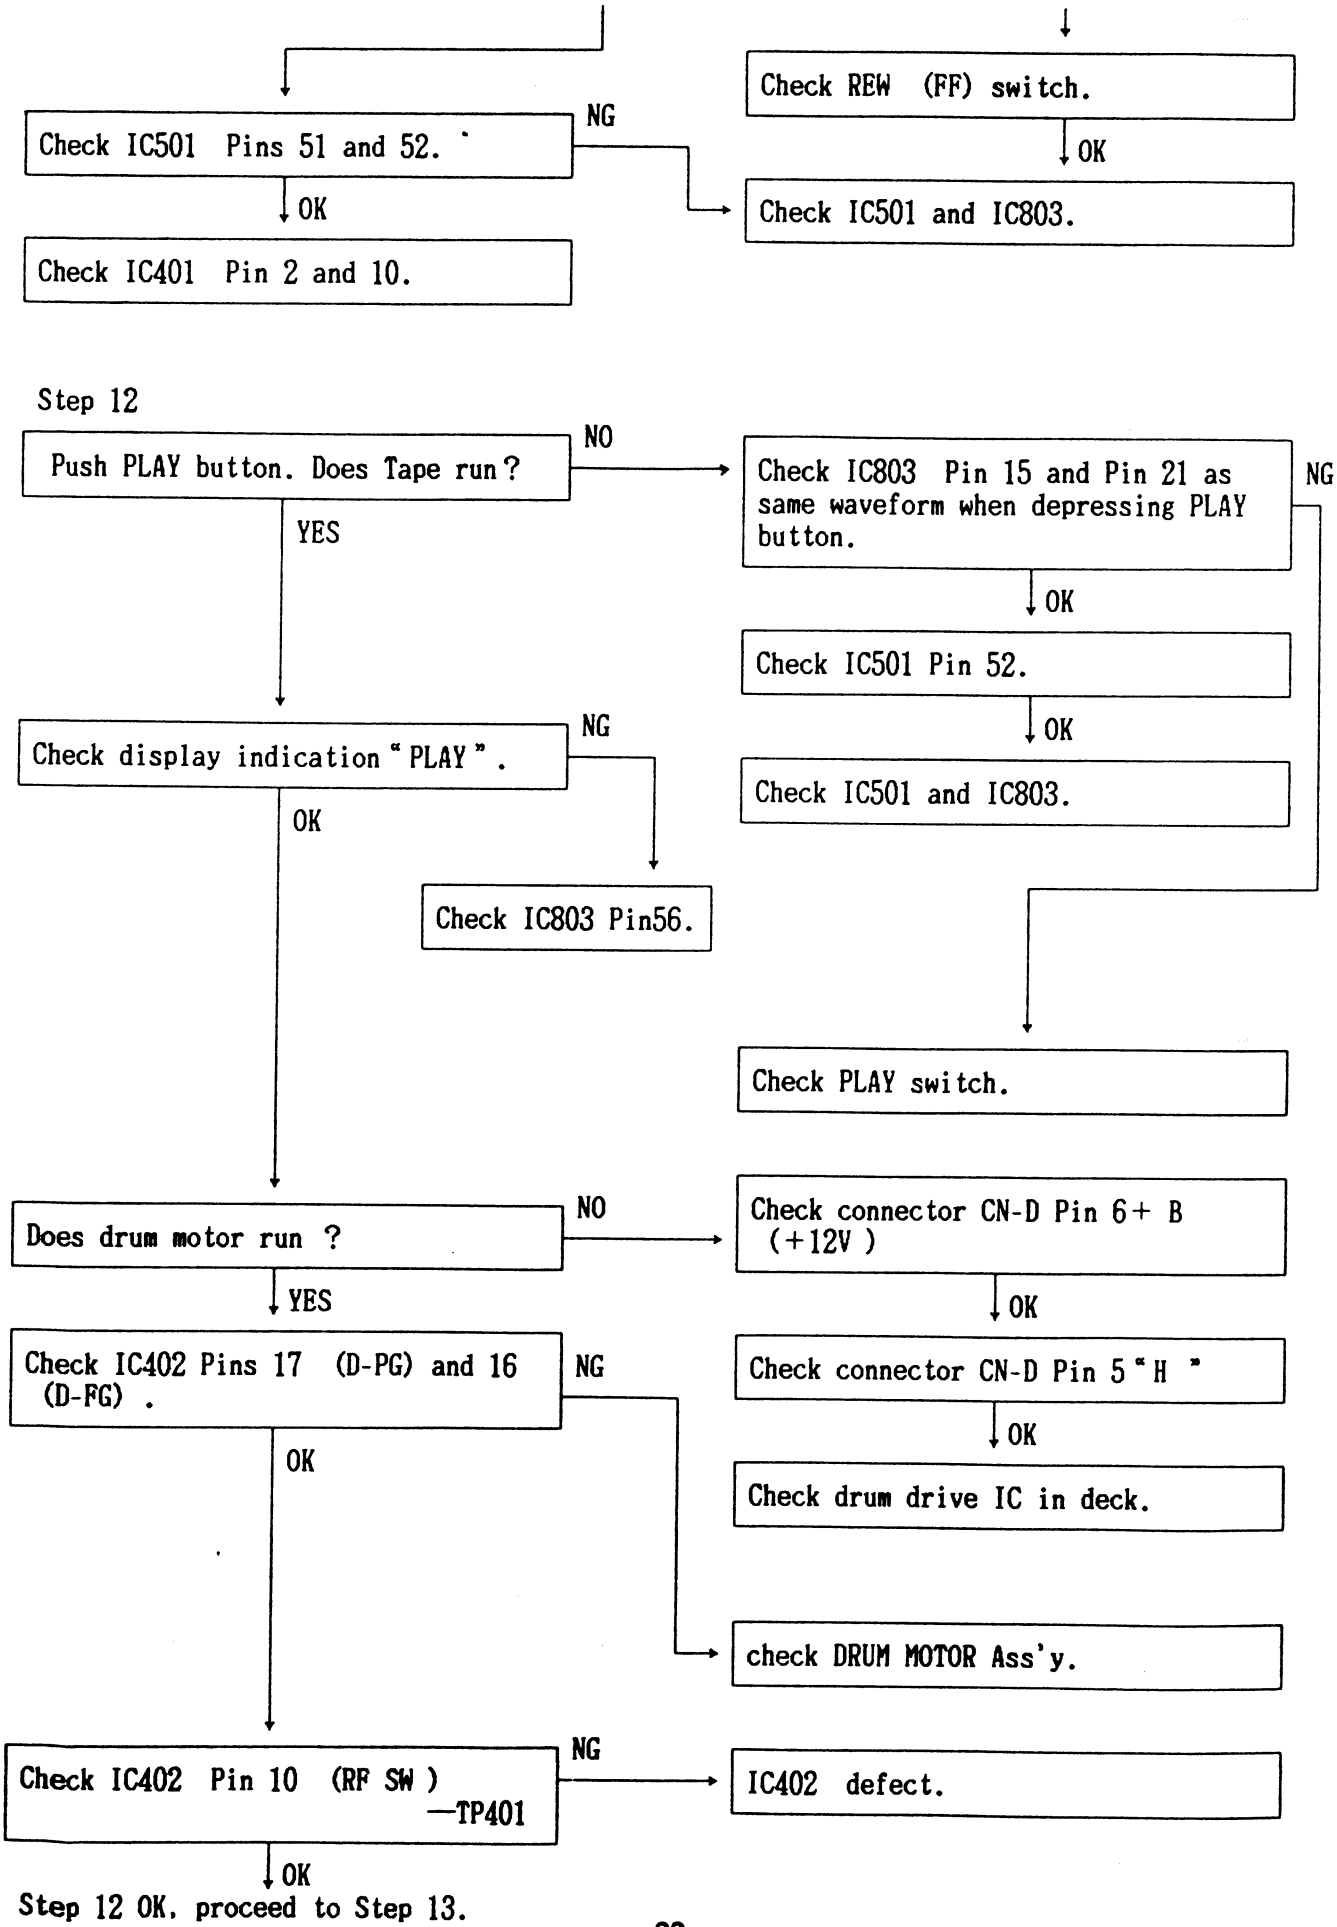
Check REW (FF) switch.
OK
Check IC501 and IC803.
Check IC501 Pins 51 and 52.
NG
OK
Check IC401 Pin 2 and 10.
Step 12
Push PLAY button. Does Tape run?
NO
YES
Check IC803 Pin 15 and Pin 21 as same waveform when depressing PLAY button.
NG
OK
Check IC501 Pin 52.
OK
Check IC501 and IC803.
Check display indication "PLAY".
NG
OK
Check IC803 Pin56.
Check PLAY switch.
Does drum motor run ?
NO
YES
Check connector CN-D Pin 6+ B (+12V)
OK
Check connector CN-D Pin 5 "H"
OK
Check drum drive IC in deck.
Check IC402 Pins 17 (D-PG) and 16 (D-FG).
NG
OK
check DRUM MOTOR Ass'y.
Check IC402 Pin 10 (RF SW) —TP401
NG
OK
IC402 defect.
Step 12 OK, proceed to Step 13.

Step 13

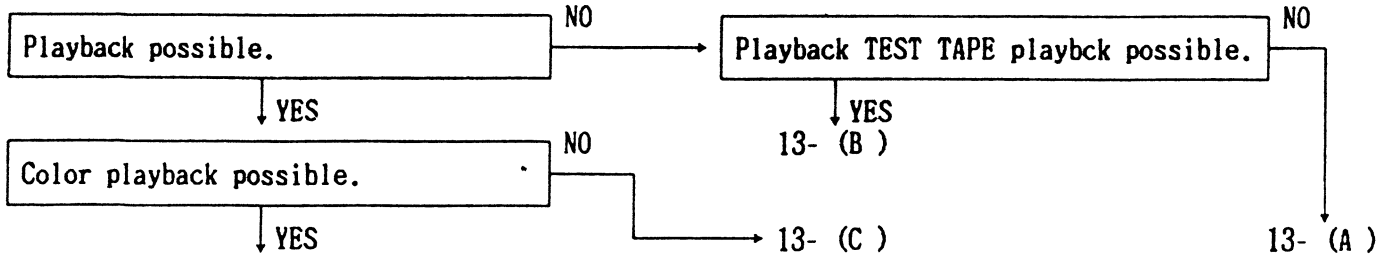

Step 13 OK, proceed to Step 14.

13- (A)

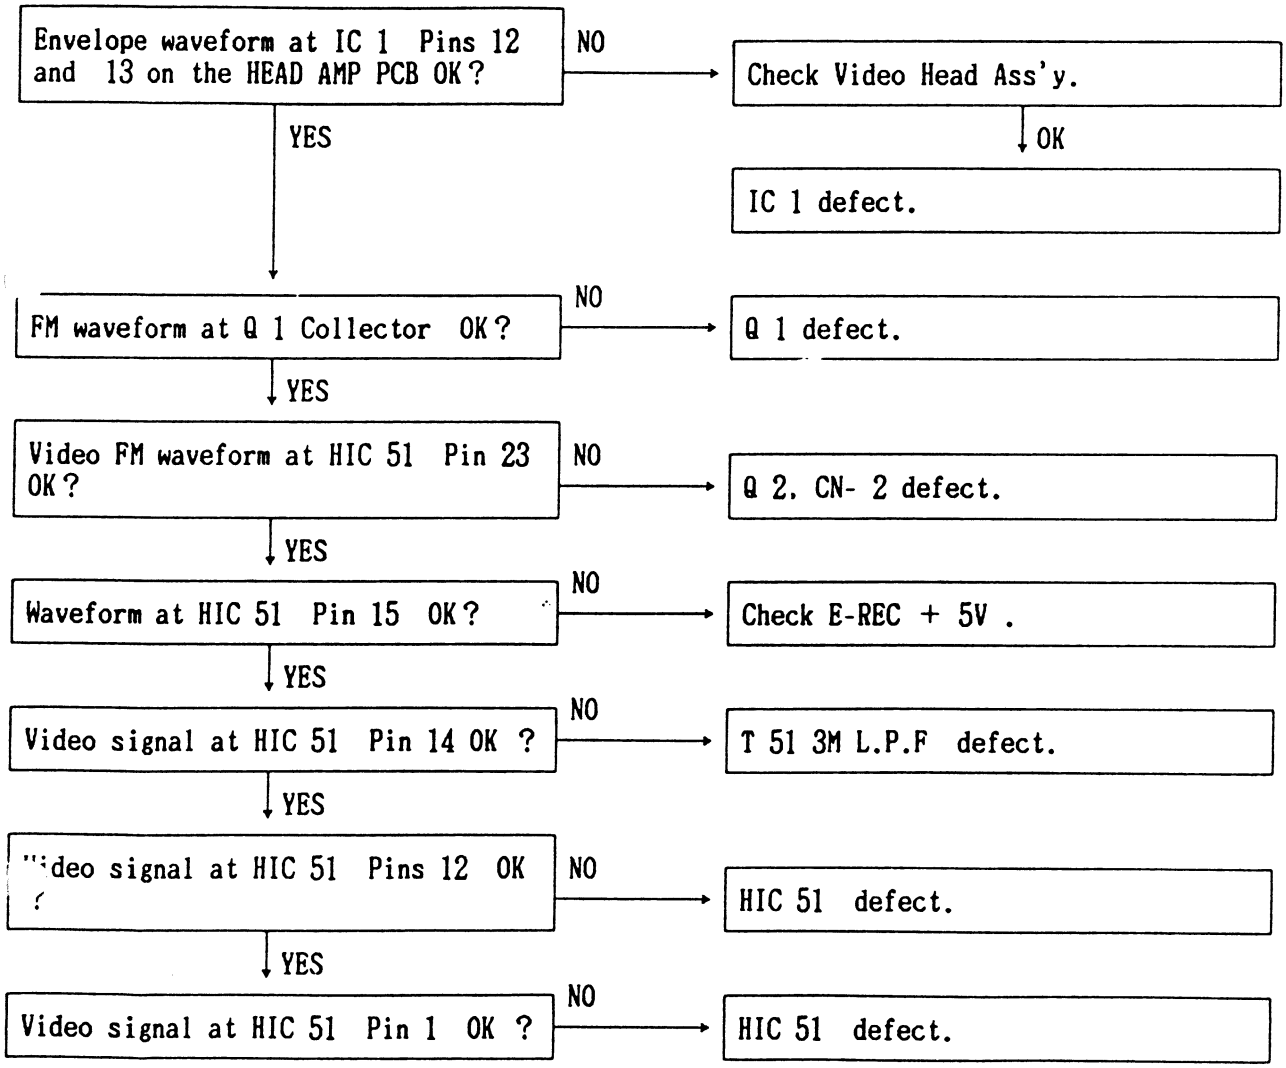

Step 13- (B)

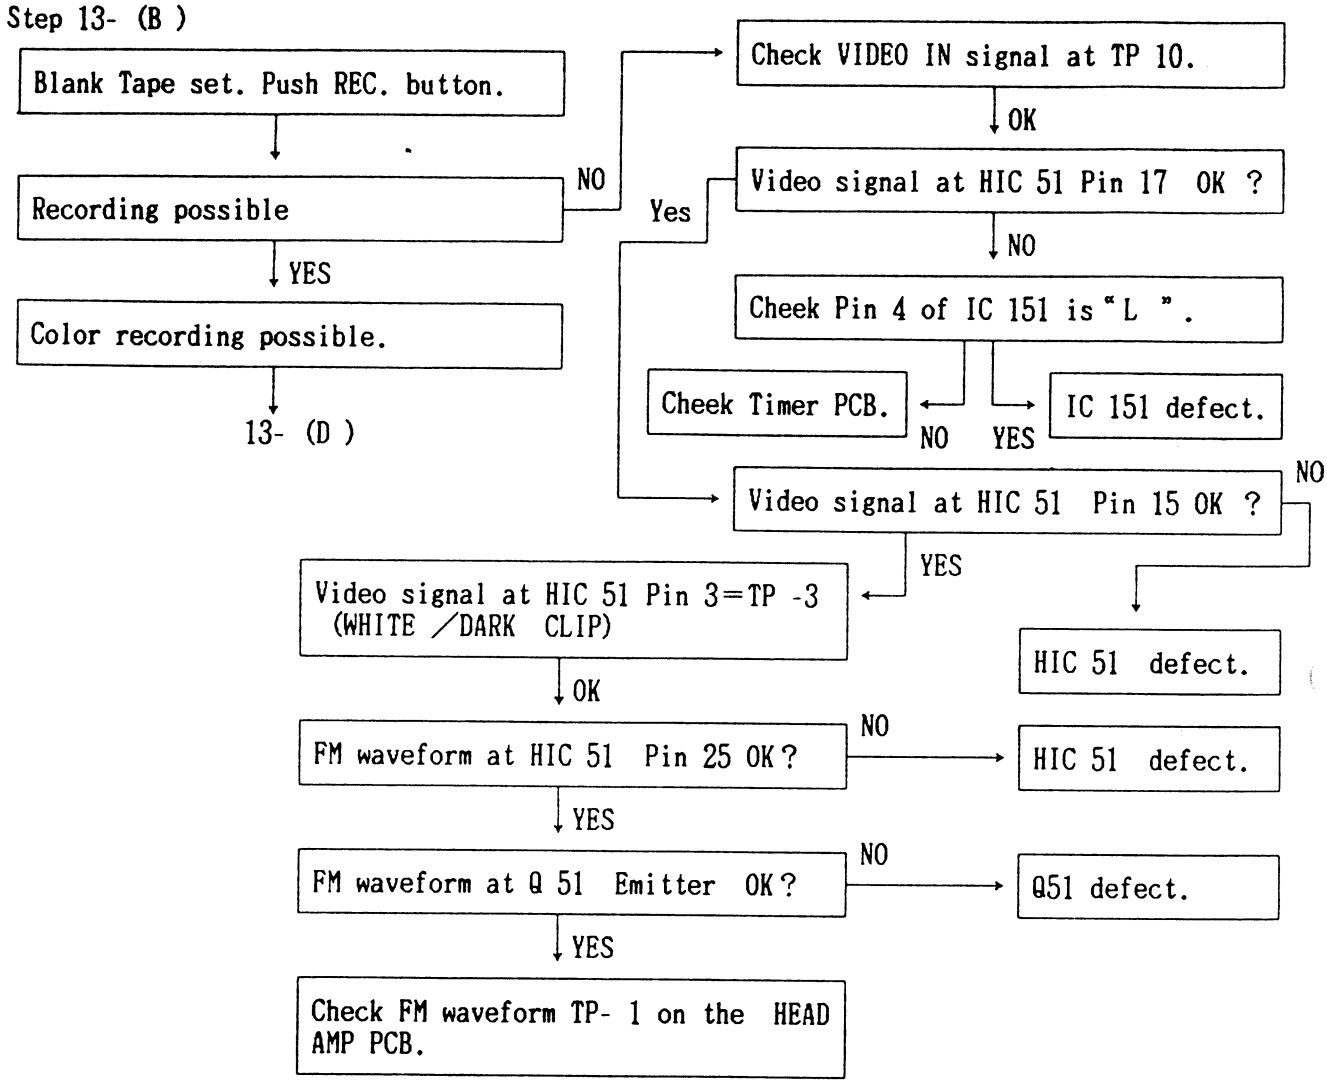
Blank Tape set. Push REC. button.
Recording possible
NO
YES
Color recording possible.
13- (D)
Check VIDEO IN signal at TP 10.
OK
Video signal at HIC 51 Pin 17 OK ?
Yes
NO
Cheek Pin 4 of IC 151 is " L ".
Cheek Timer PCB.
NO
YES
IC 151 defect.
Video signal at HIC 51 Pin 15 OK ?
NO
YES
HIC 51 defect.
Video signal at HIC 51 Pin 3=TP -3
(WHITE /DARK CLIP)
OK
FM waveform at HIC 51 Pin 25 OK?
NO
HIC 51 defect.
YES
FM waveform at Q 51 Emitter OK?
NO
Q51 defect.
YES
Check FM waveform TP- 1 on the HEAD AMP PCB.

13- (C)

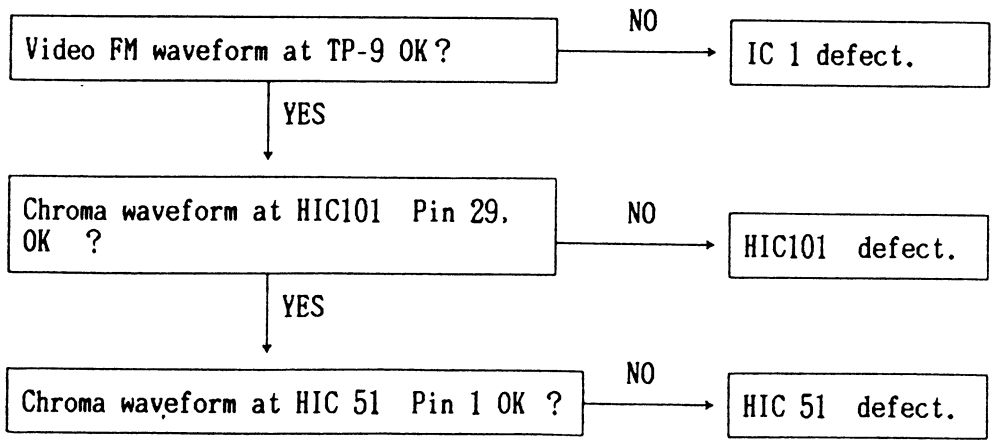
Video FM waveform at TP-9 OK?
NO
IC 1 defect.
YES
Chroma waveform at HIC101 Pin 29, OK ?
NO
HIC101 defect.
YES
Chroma waveform at HIC 51 Pin 1 OK ?
NO
HIC 51 defect.

13- (D)

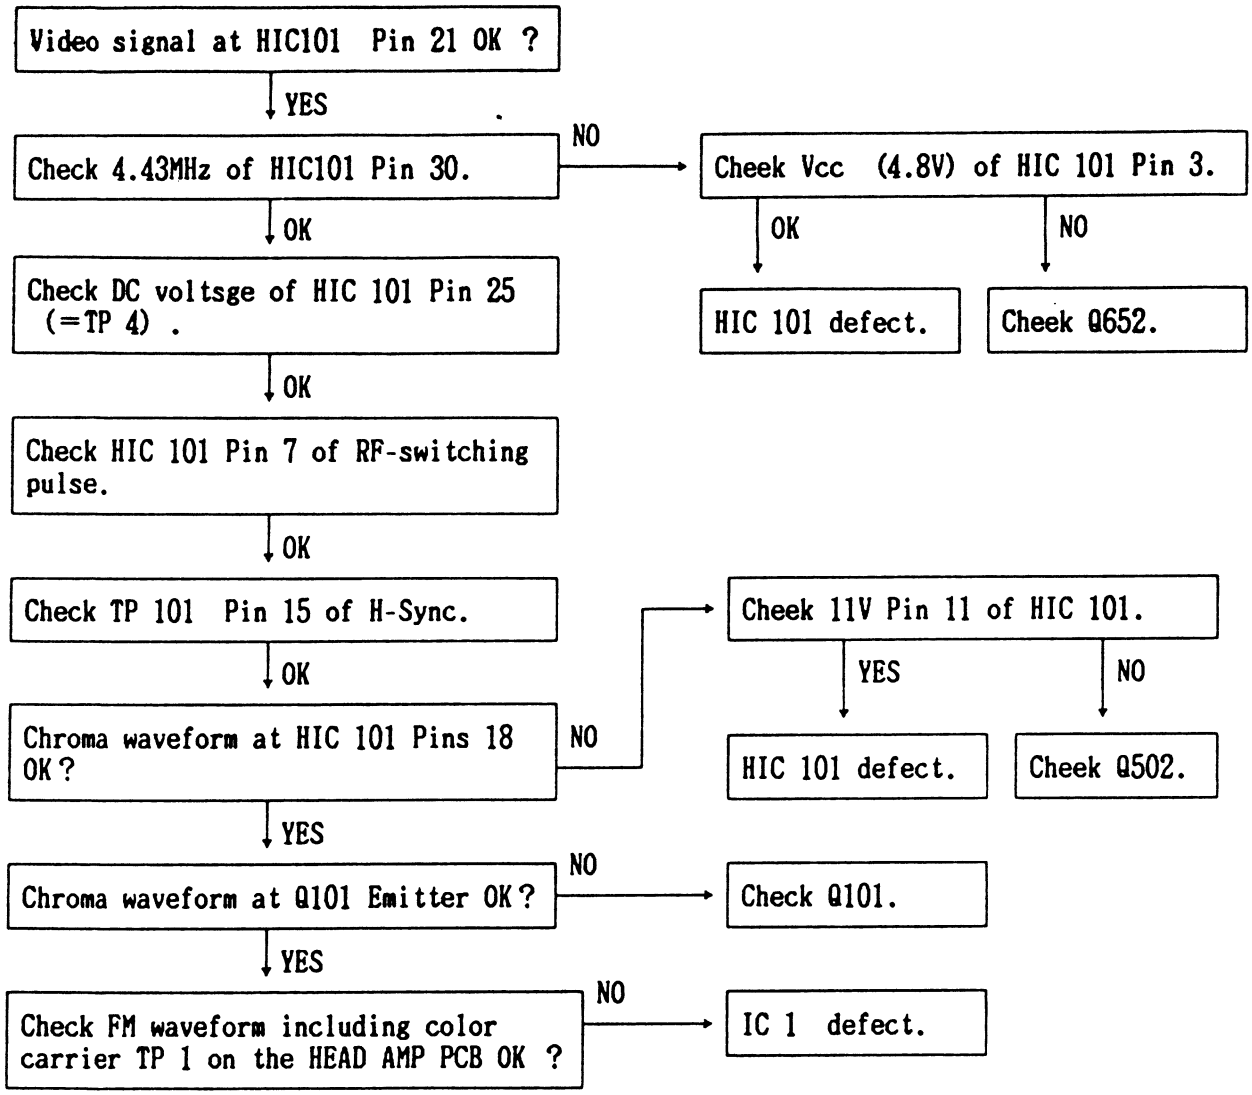
Video signal at HIC101 Pin 21 OK ?
YES
Check 4.43MHz of HIC101 Pin 30.
NO
Cheek Vcc (4.8V) of HIC 101 Pin 3.
OK
NO
HIC 101 defect.
Cheek Q652.
OK
Check DC voltsge of HIC 101 Pin 25 (=TP 4) .
OK
Check HIC 101 Pin 7 of RF-switching pulse.
OK
Check TP 101 Pin 15 of H-Sync.
OK
Cheek 11V Pin 11 of HIC 101.
YES
NO
HIC 101 defect.
Cheek Q502.
Chroma waveform at HIC 101 Pins 18 OK?
NO
YES
Chroma waveform at Q101 Emitter OK?
NO
Check Q101.
YES
Check FM waveform including color carrier TP 1 on the HEAD AMP PCB OK ?
NO
IC 1 defect.

Step 14

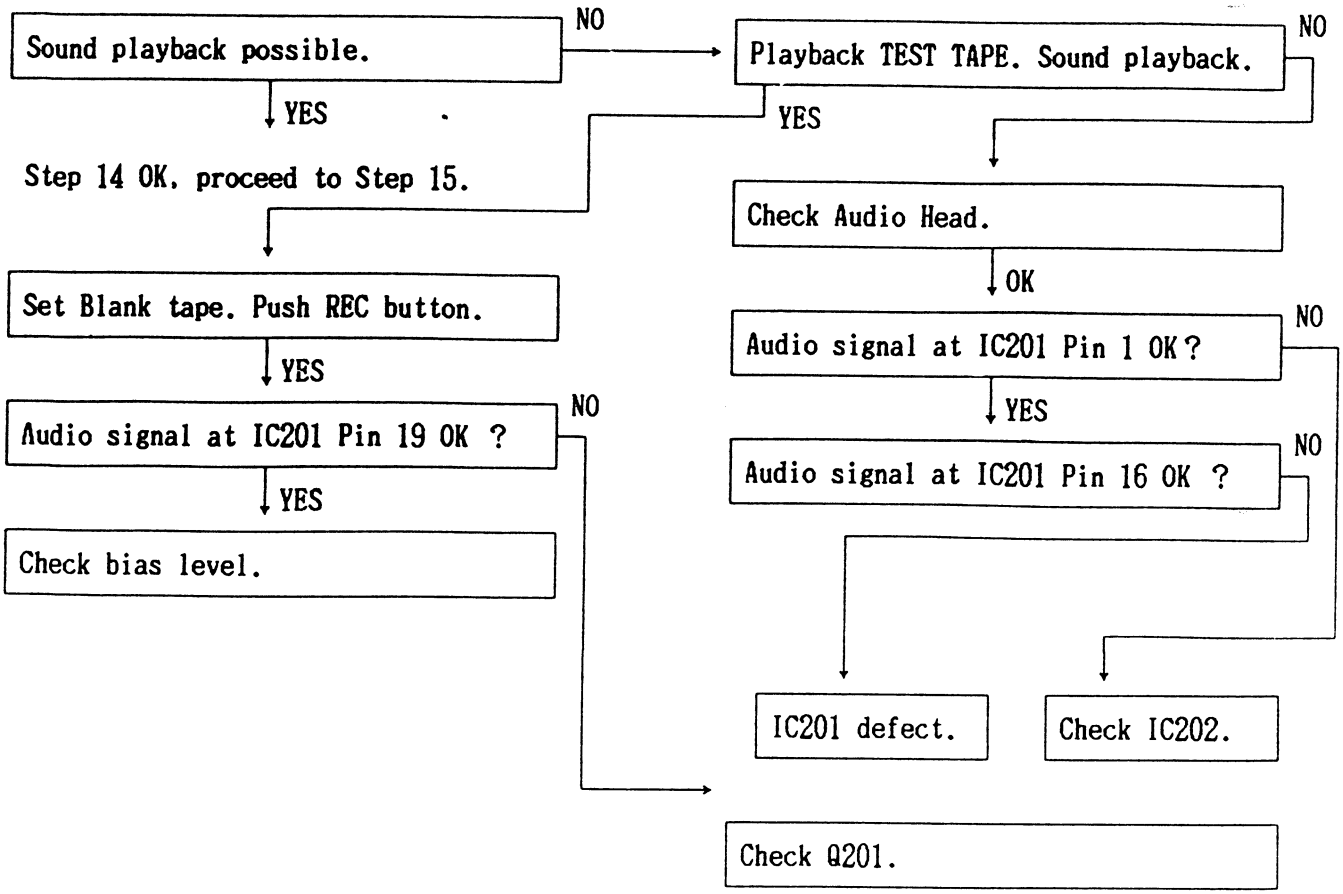

Step 15

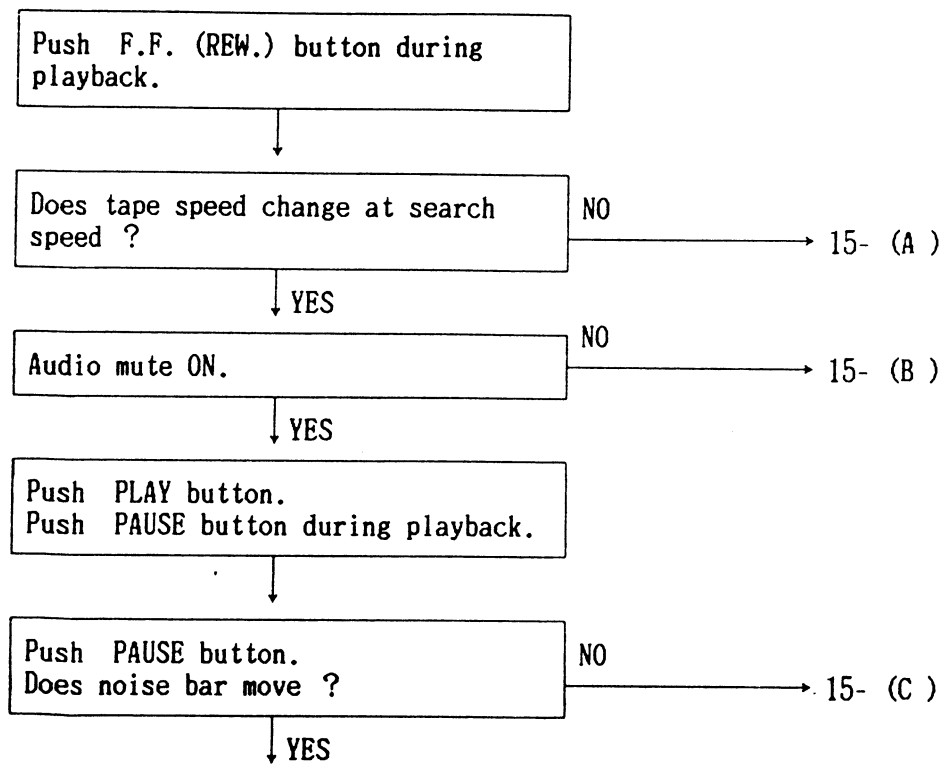

Step 15 OK, proceed to step 16.

15- (A)

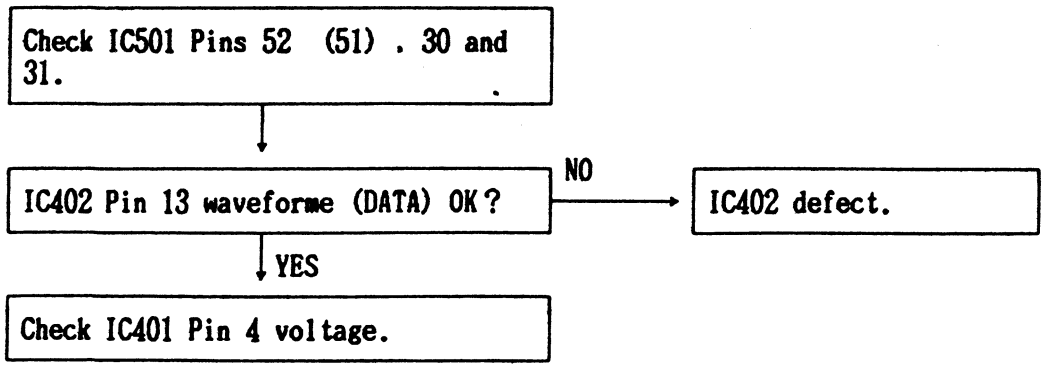
Check IC501 Pins 52 (51) . 30 and 31.
IC402 Pin 13 waveforme (DATA) OK?
NO
IC402 defect.
YES
Check IC401 Pin 4 voltage.

15- (B)

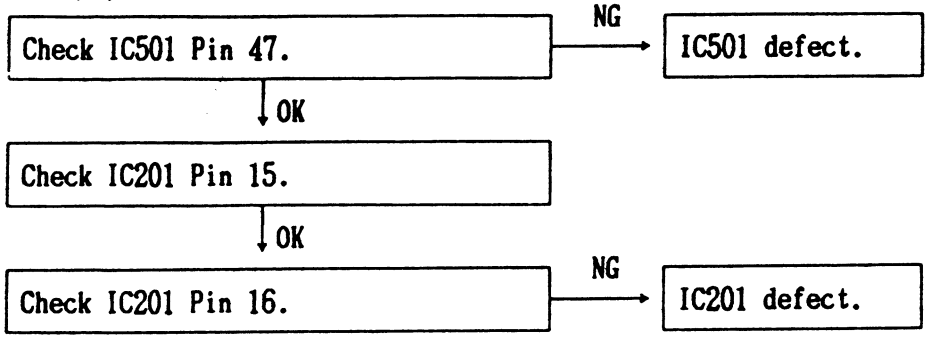
Check IC501 Pin 47.
NG
IC501 defect.
OK
Check IC201 Pin 15.
OK
Check IC201 Pin 16.
NG
IC201 defect.

15- (C)

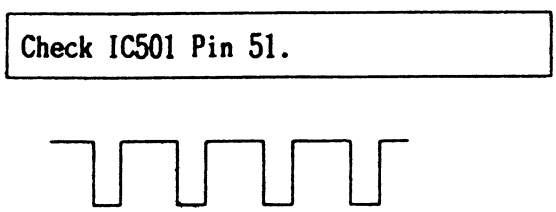
Check IC501 Pin 51.

Step 16

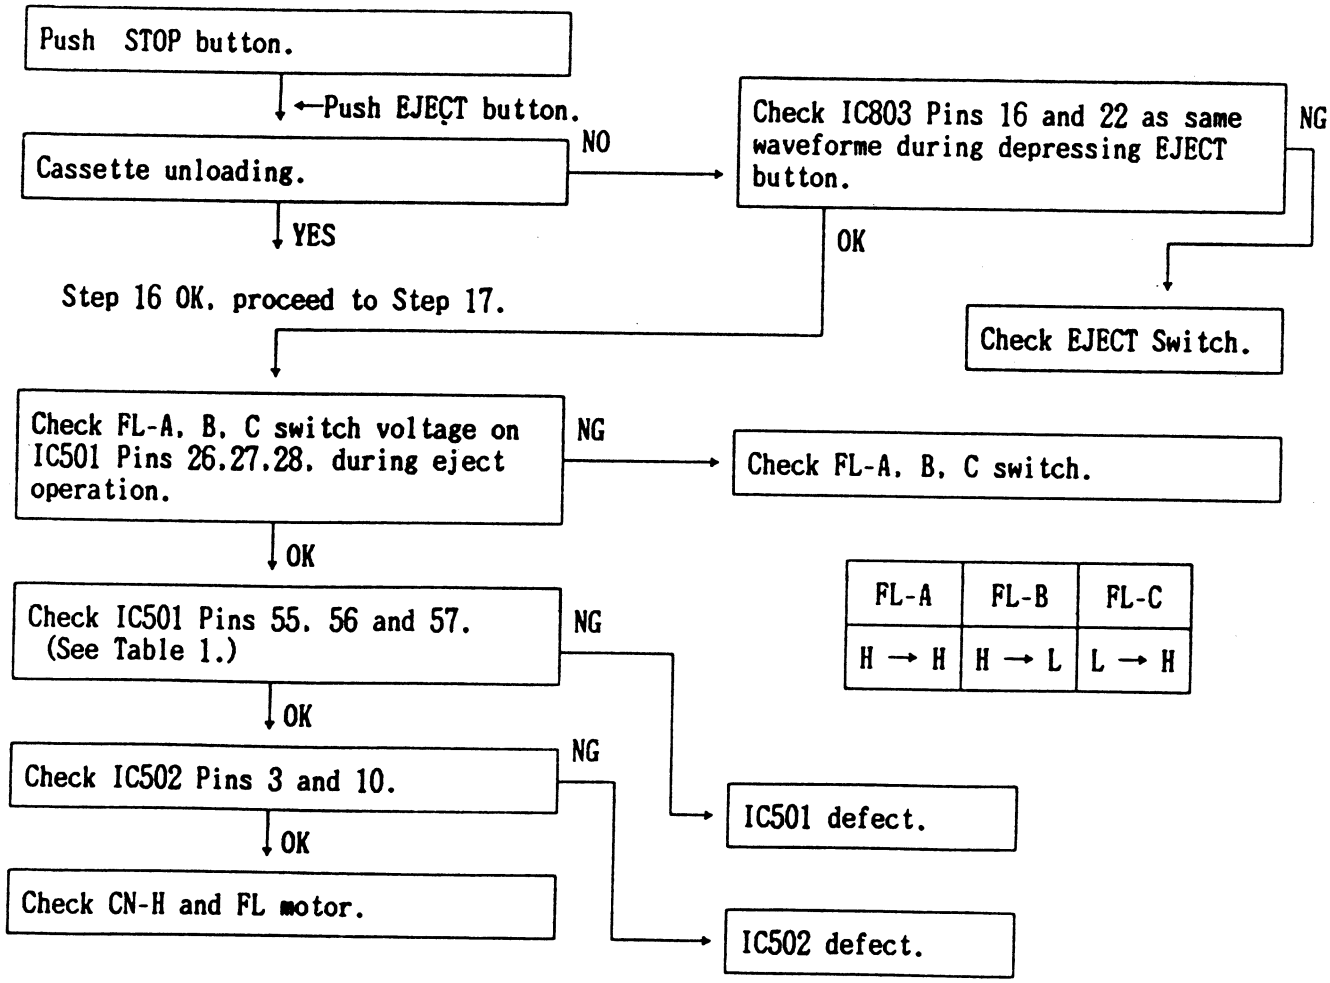

FL-A	FL-B	FL-C
H → H	H → L	L → H

Step 17

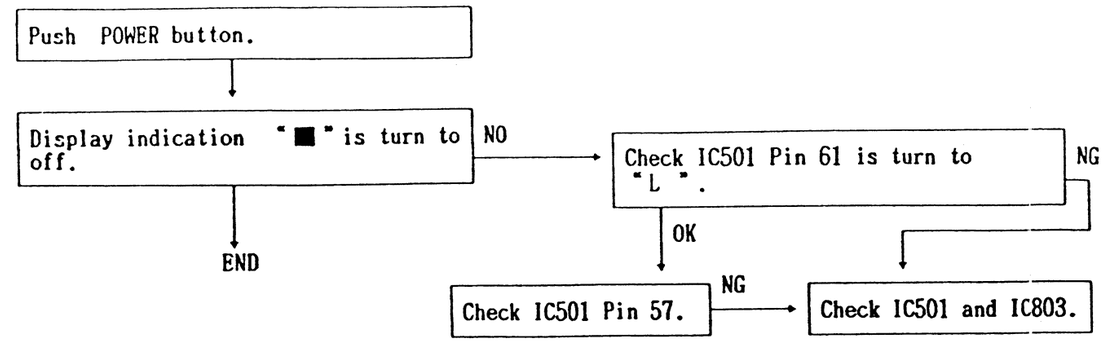

Step 18

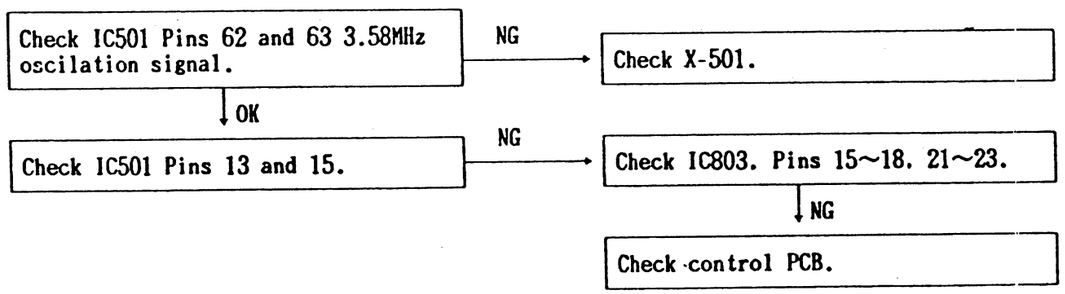

* When SYSTEM CONTROL IC has run away SYSTEM CONTROL IC will not accept any mode. At this time, must AC CORD disconnect to reset the SYSTEM CONTROL IC.

Position of loading switch

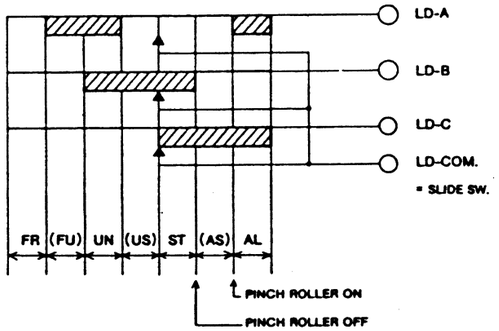

LD SW			Symbol	Position
A	B	C		
I	I	I	FR (FR LOADING)	FF. REW
O	I	I	(FU)	
O	O	I	UN (UN-LOADING)	STOP EJECT
I	O	I	(US)	
I	O	O	ST (SHORT STOP)	Loading motor is stopped temporarily at unloading.
I	I	O	(AS)	
O	I	O	AL (AFTER-LOADING)	PLAY RECPAUSE SHORT REW

O:MAKE I:BREAK
Break means intermediate position.

Table 2.

P.C. BOARD (TOP & BOTTOM VIEWS)

TIMER PCB (TOP VIEW)

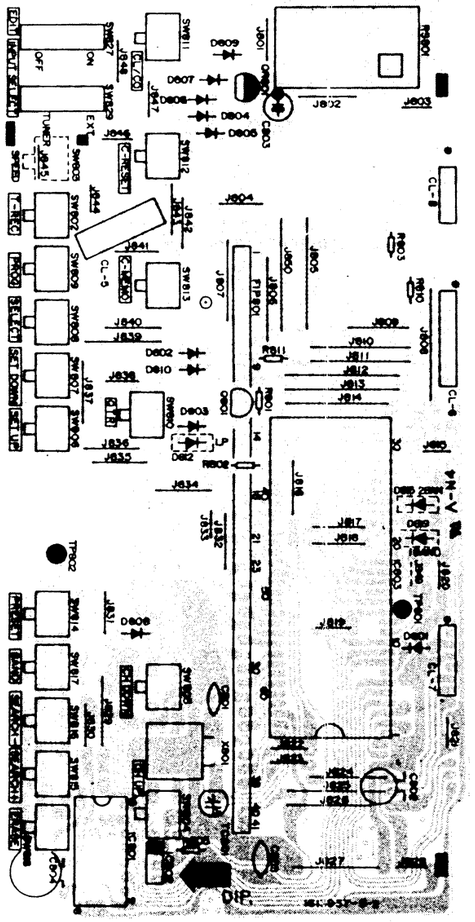

MAIN PCB (TOP VIEW)

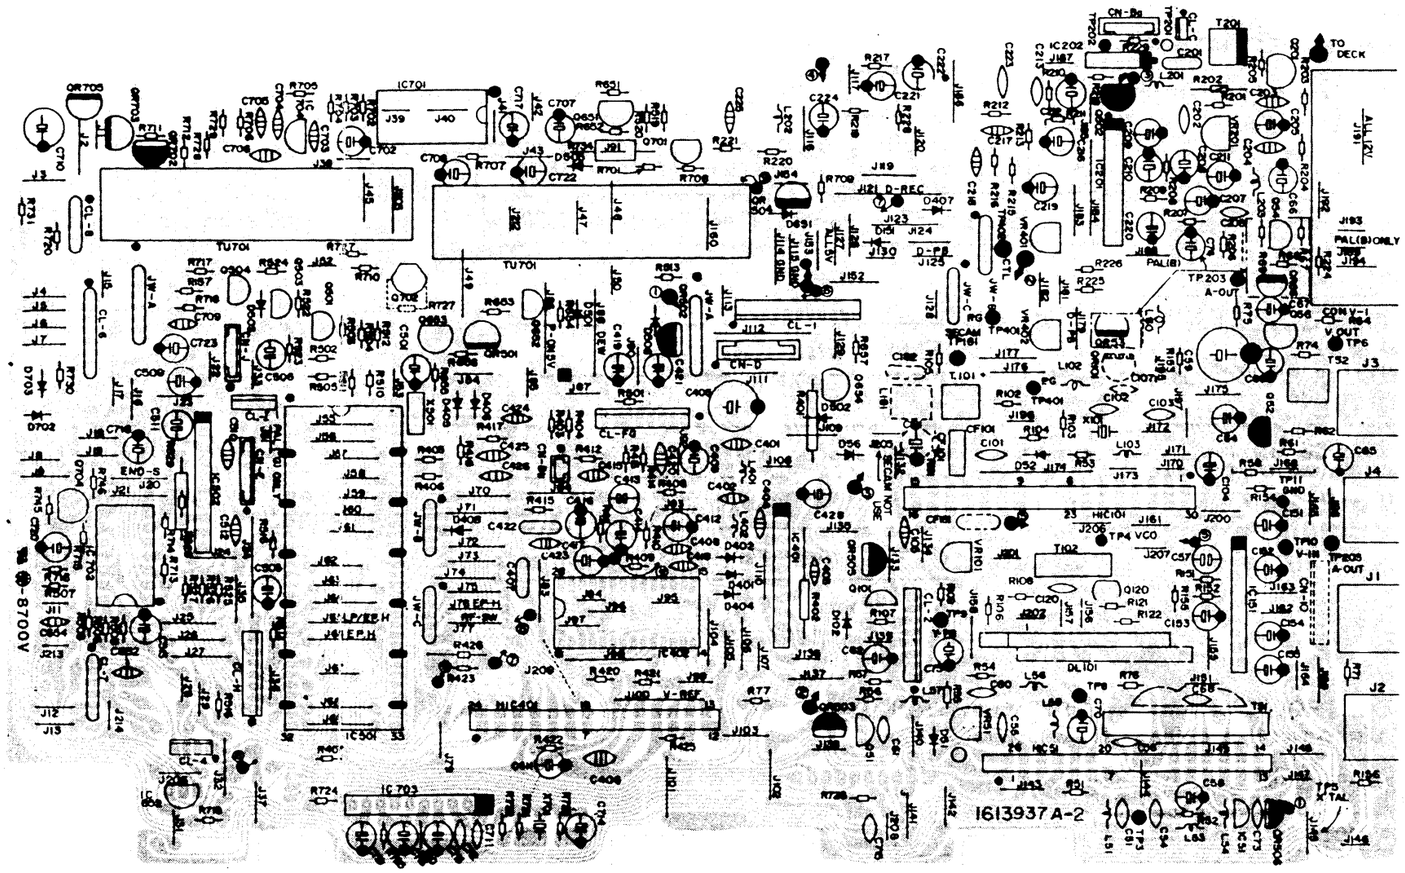

CONTROL PCB (TOP VIEW)

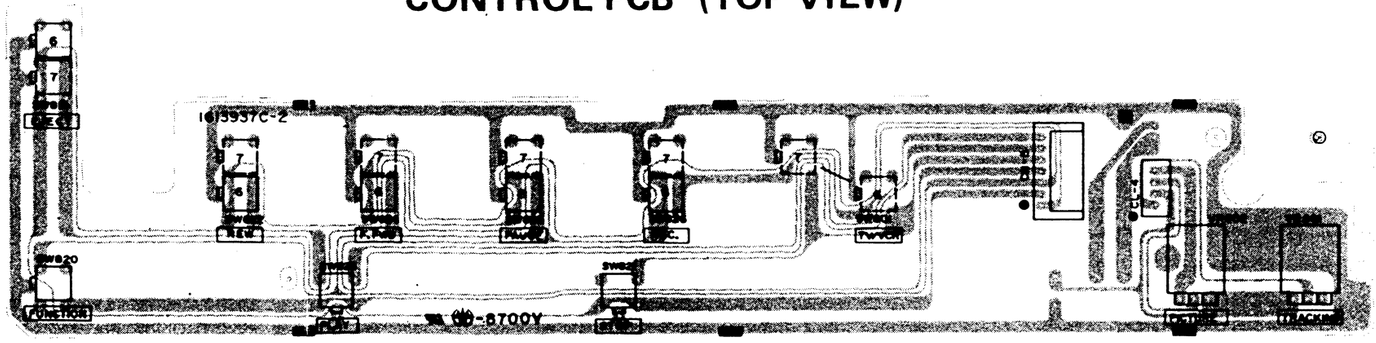

937

MAIN PCB (BOTTOM VIEW)

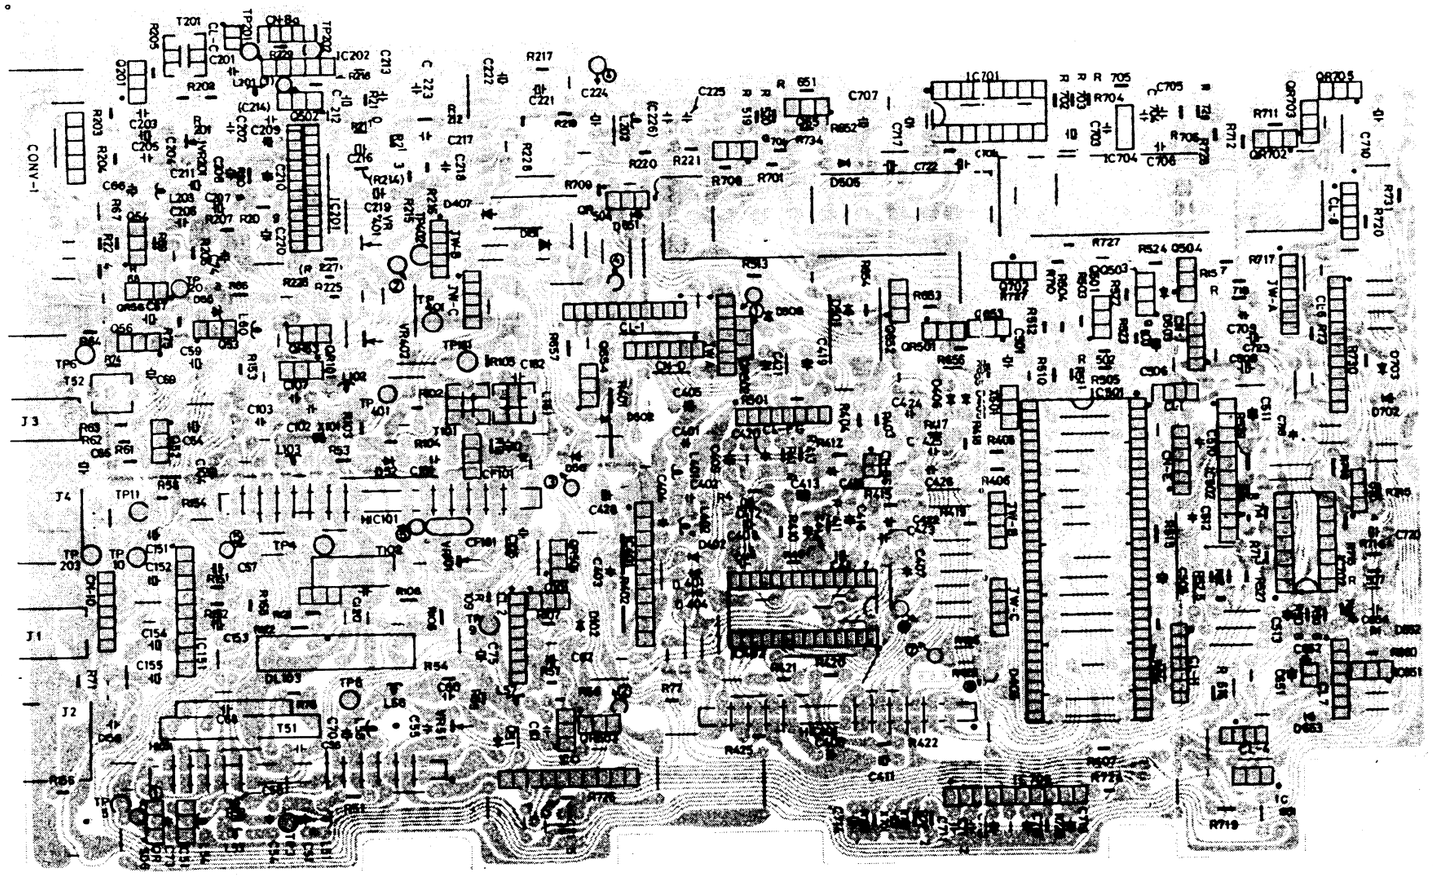

TIMER PCB (BOTTOM VIEW)

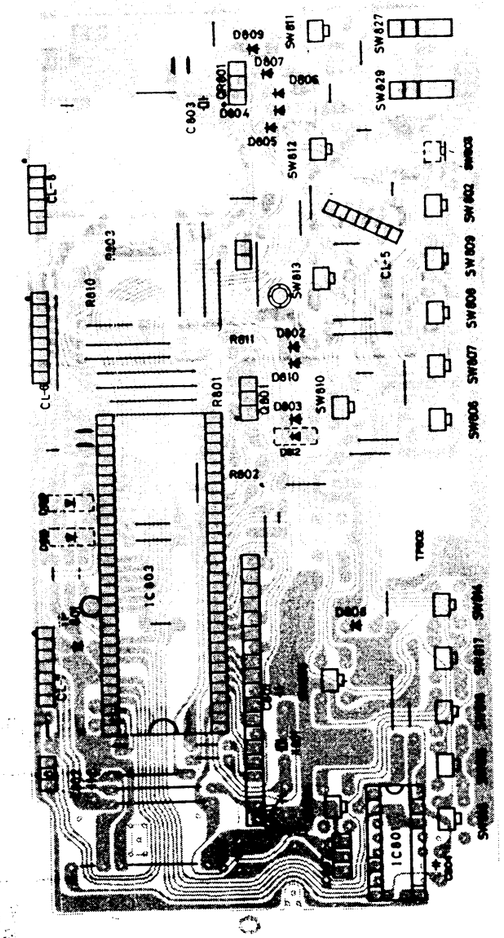

CONTROL PCB (BOTTOM VIEW)

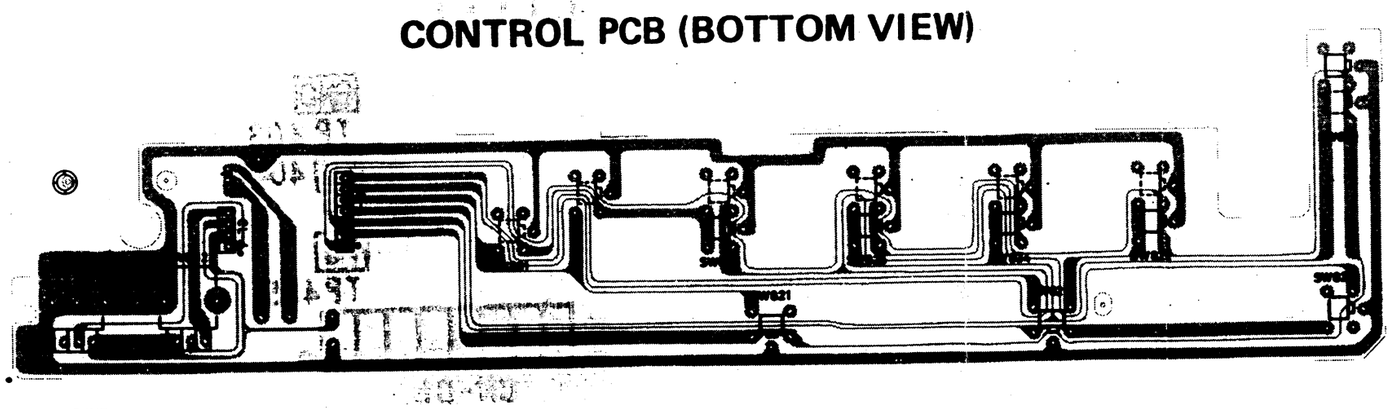

HEADAMP PCB

(TOP VIEW)

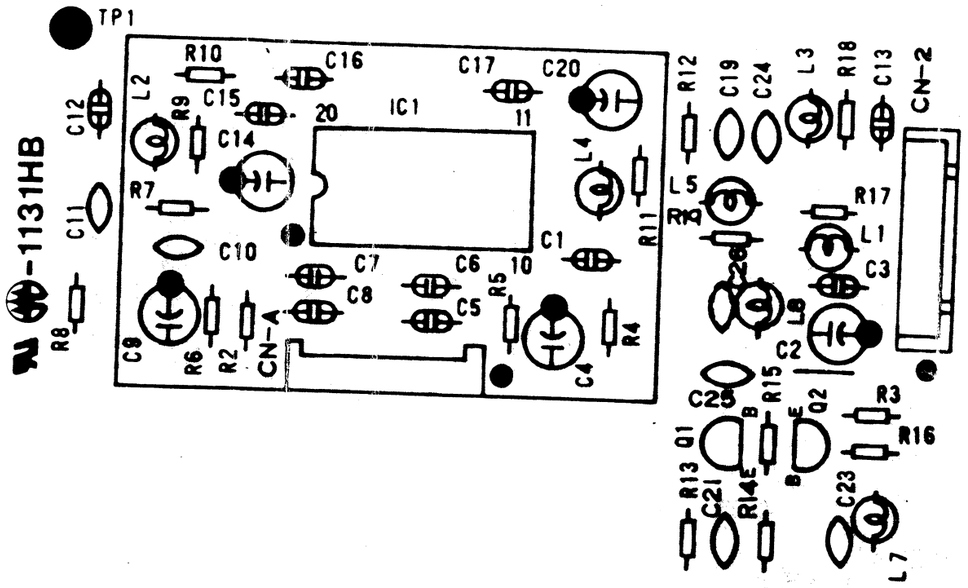

(BOTTOM VIEW)

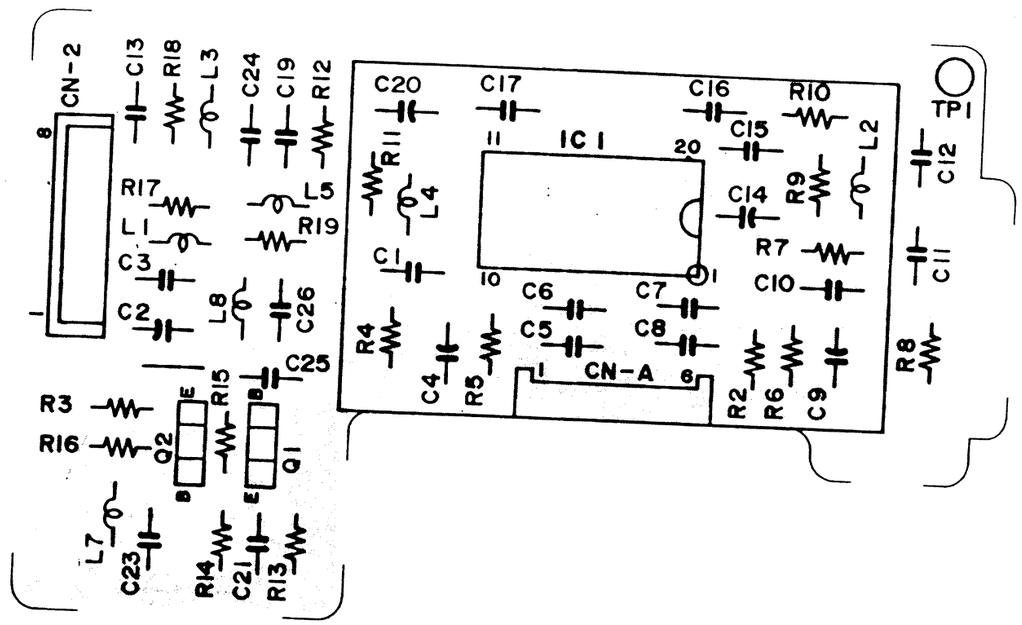

SWITCH PCB

(TOP VIEW)

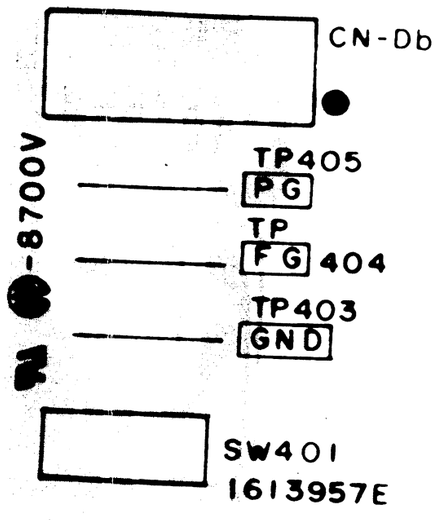

(BOTTOM VIEW)

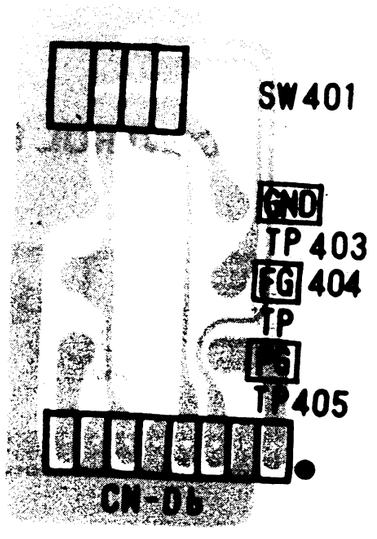

WIRING DIAGRAM

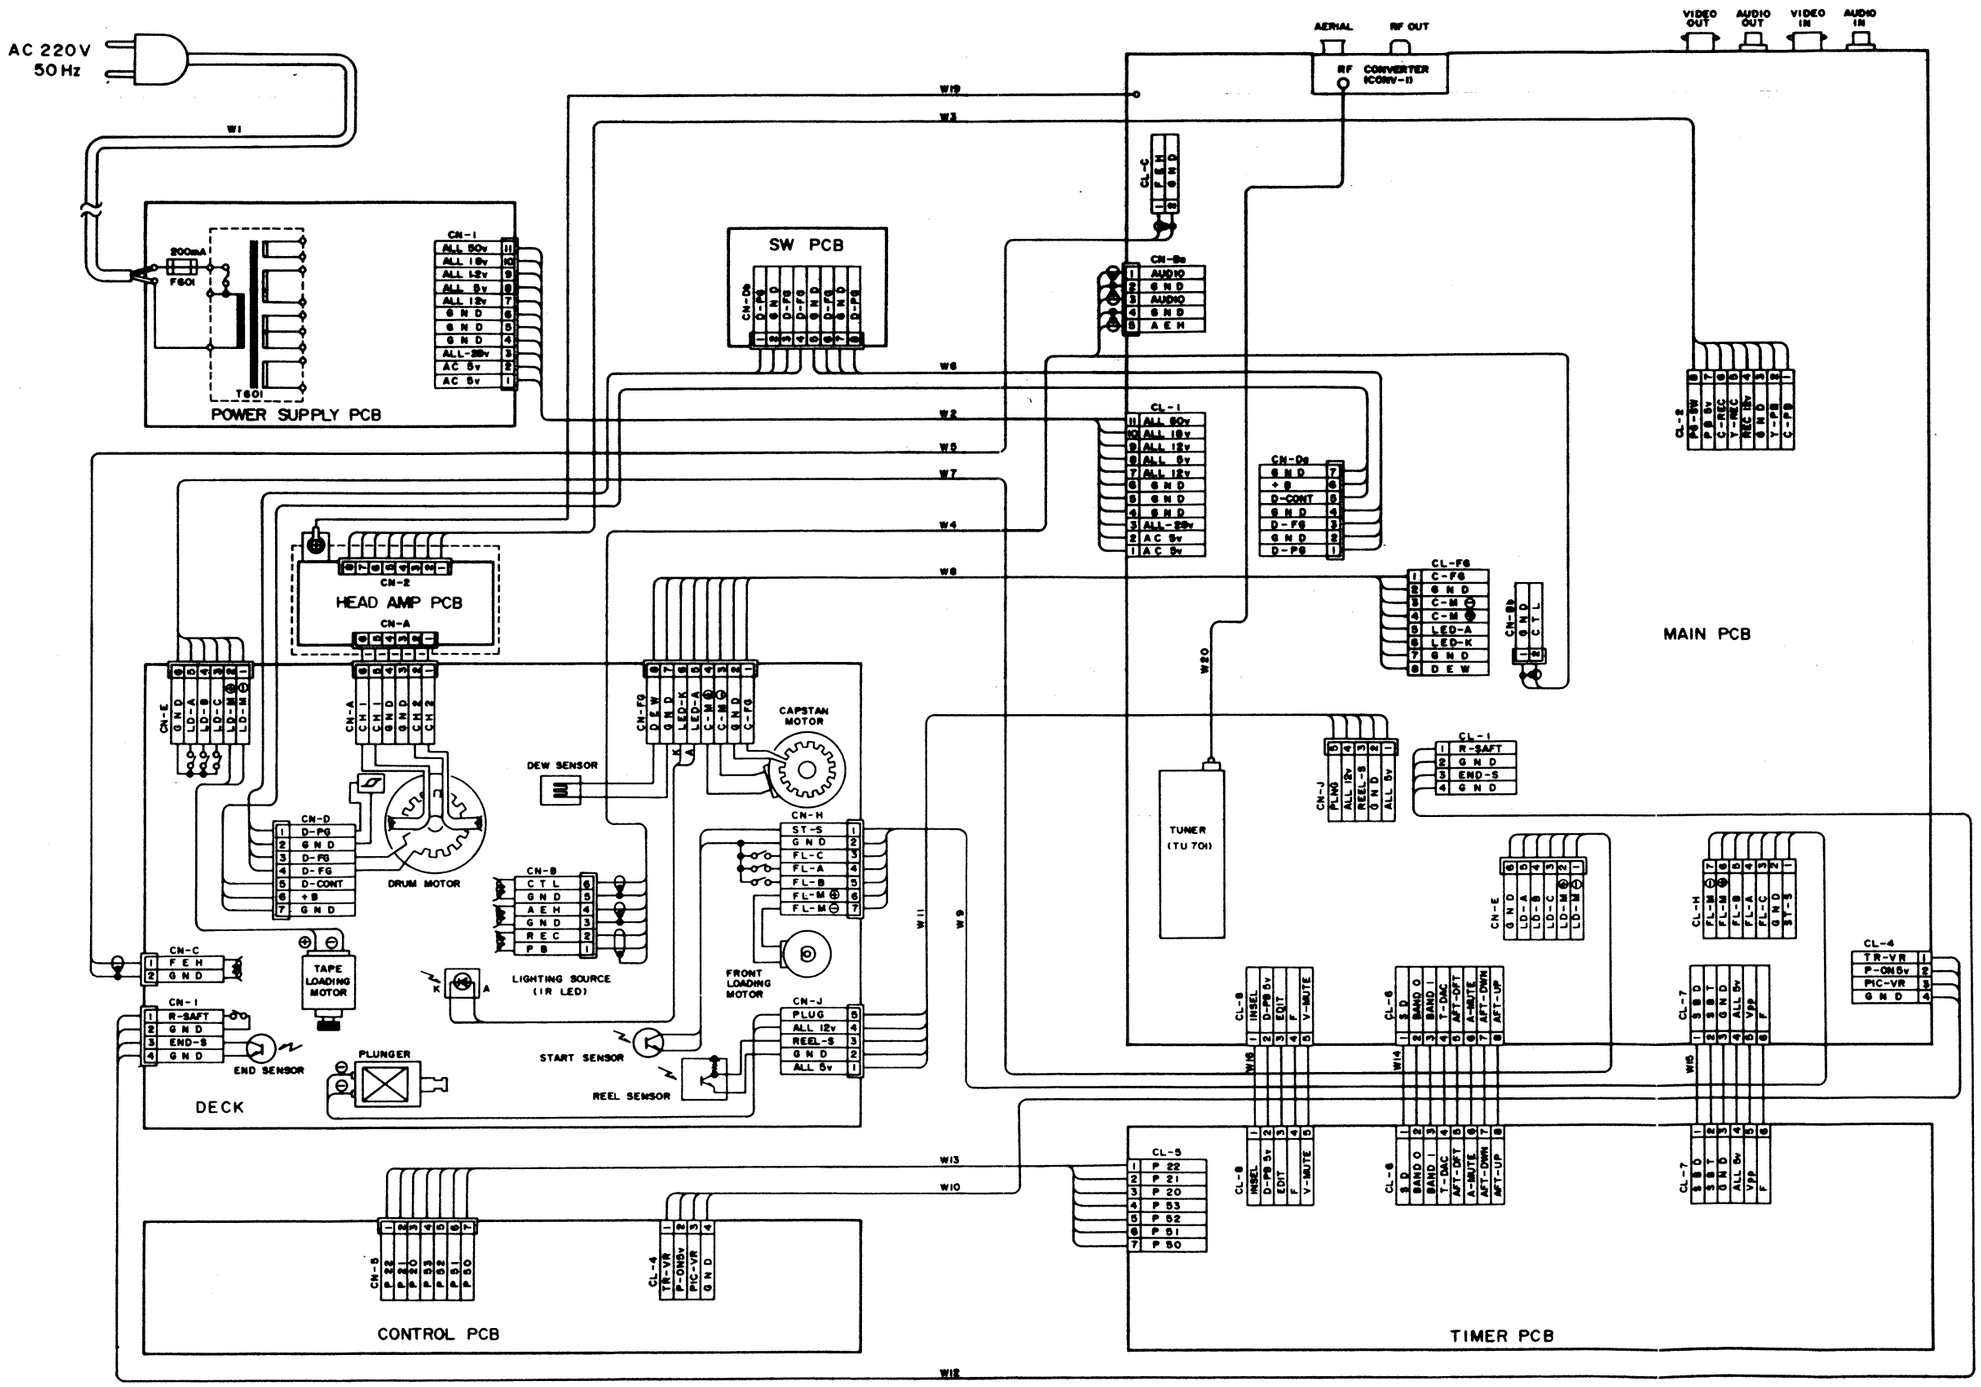

POWER SUPPLY PCB (TOP VIEW)

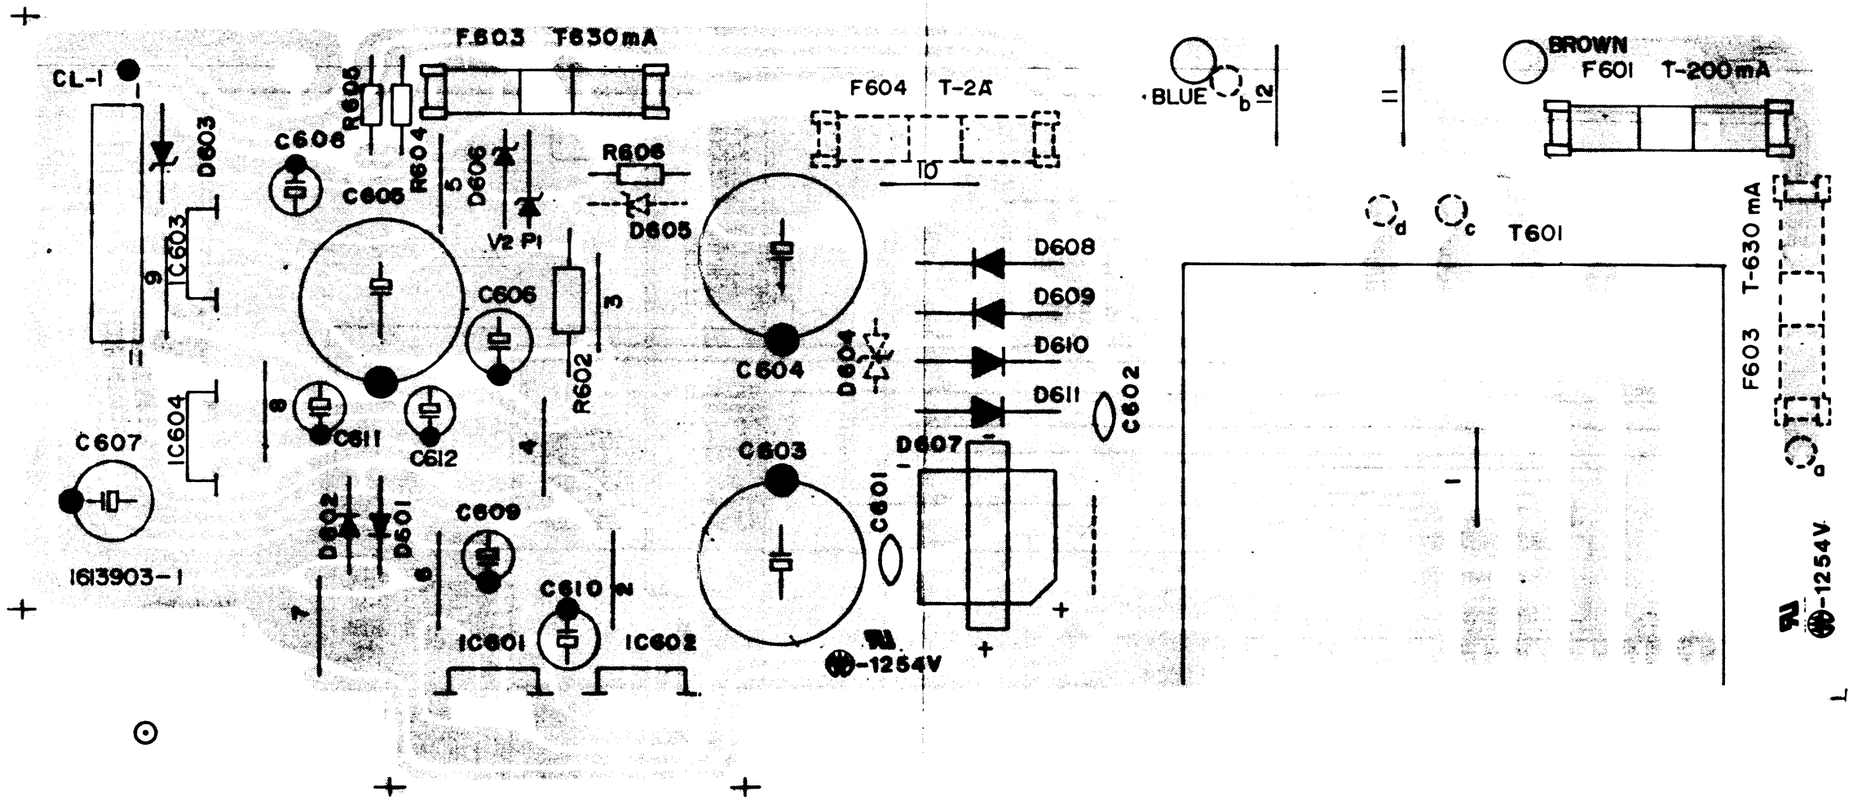

EXPLODED VIEW (CABINET)

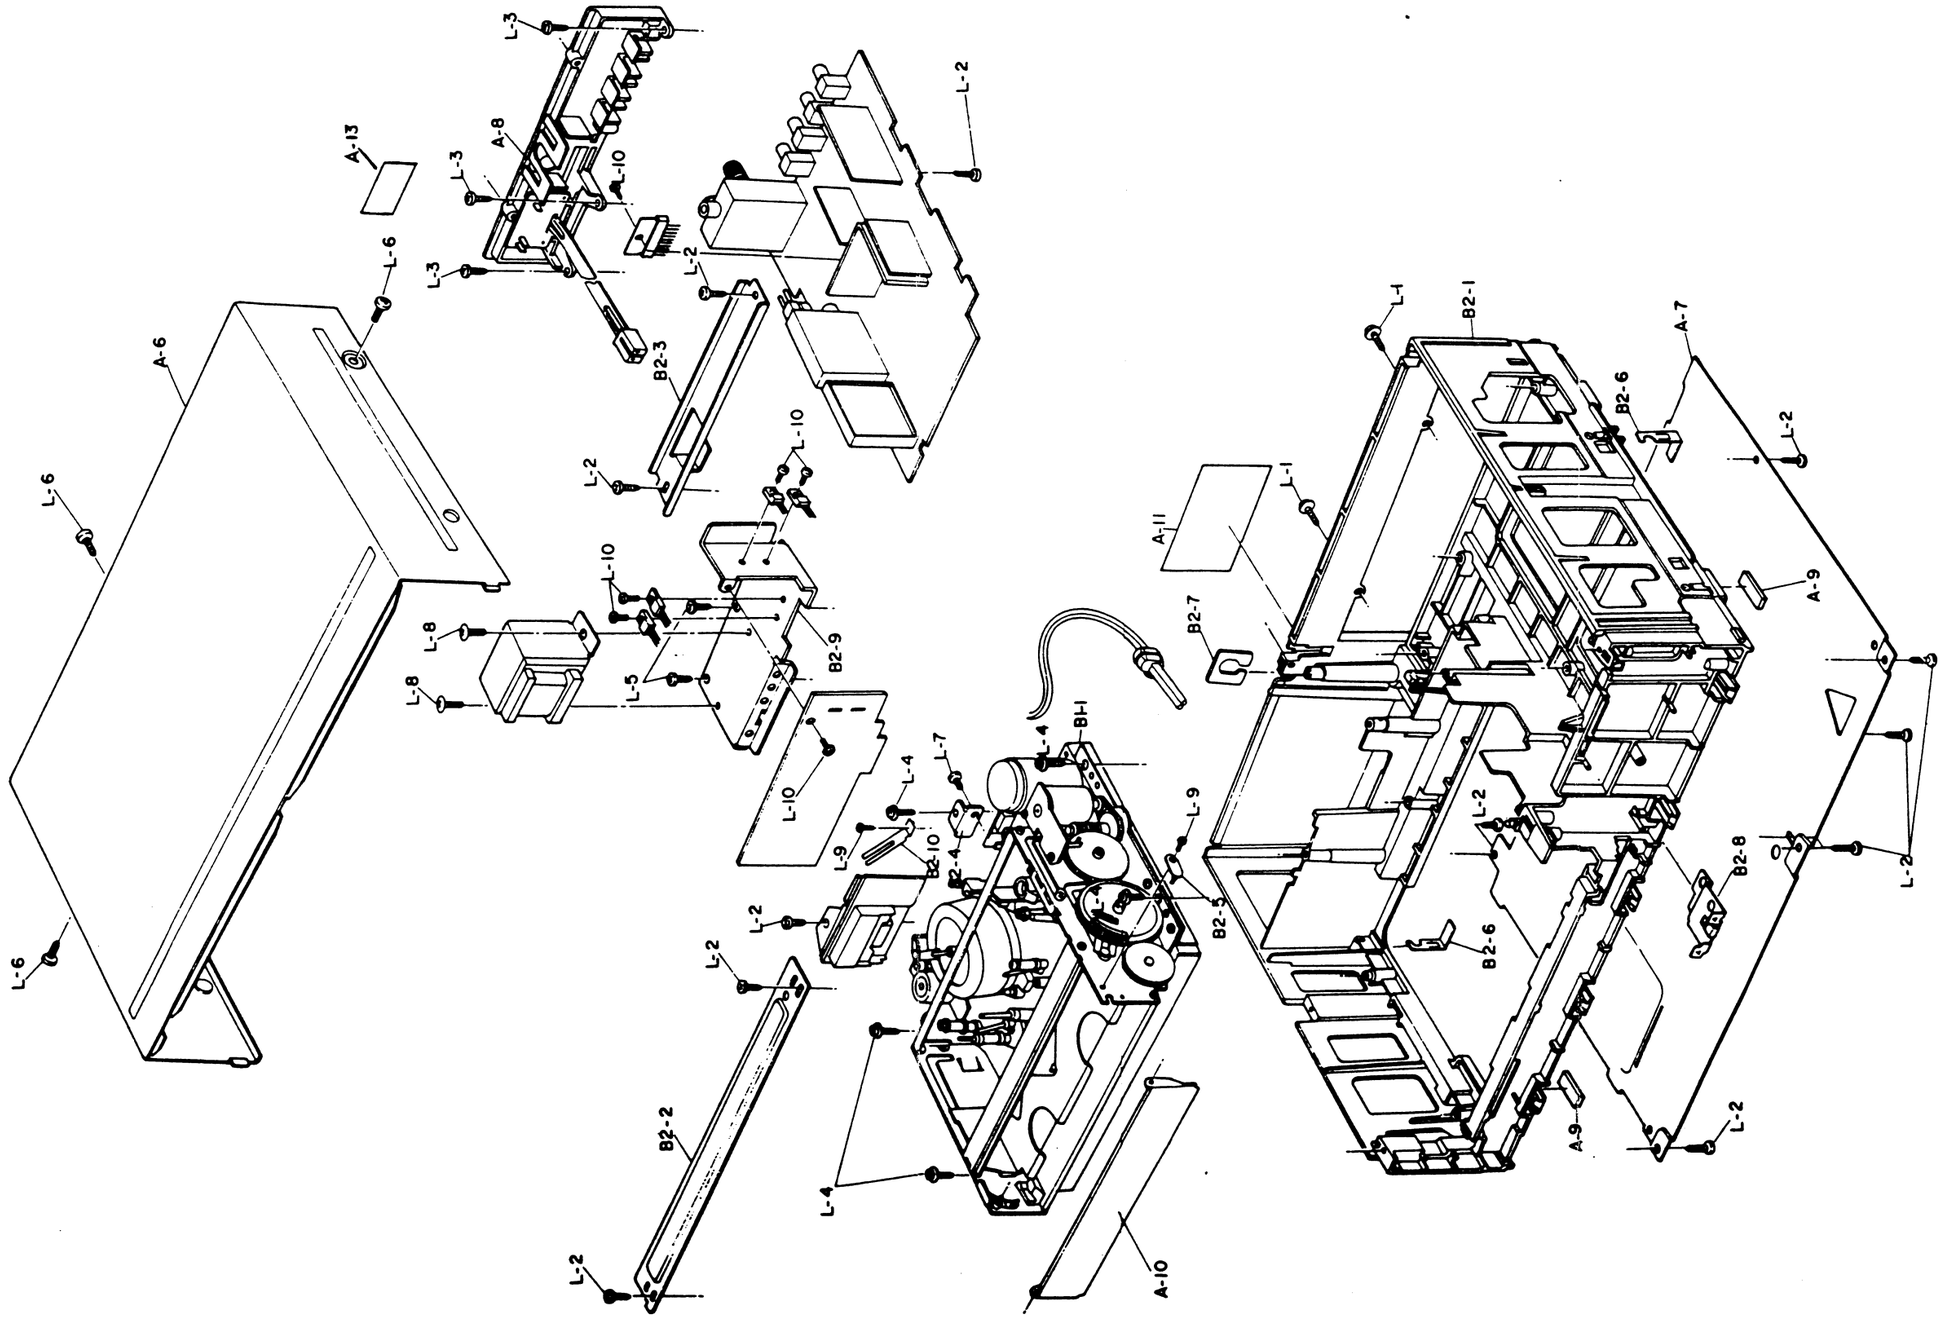

EXPLODED VIEW (CABINET 2)

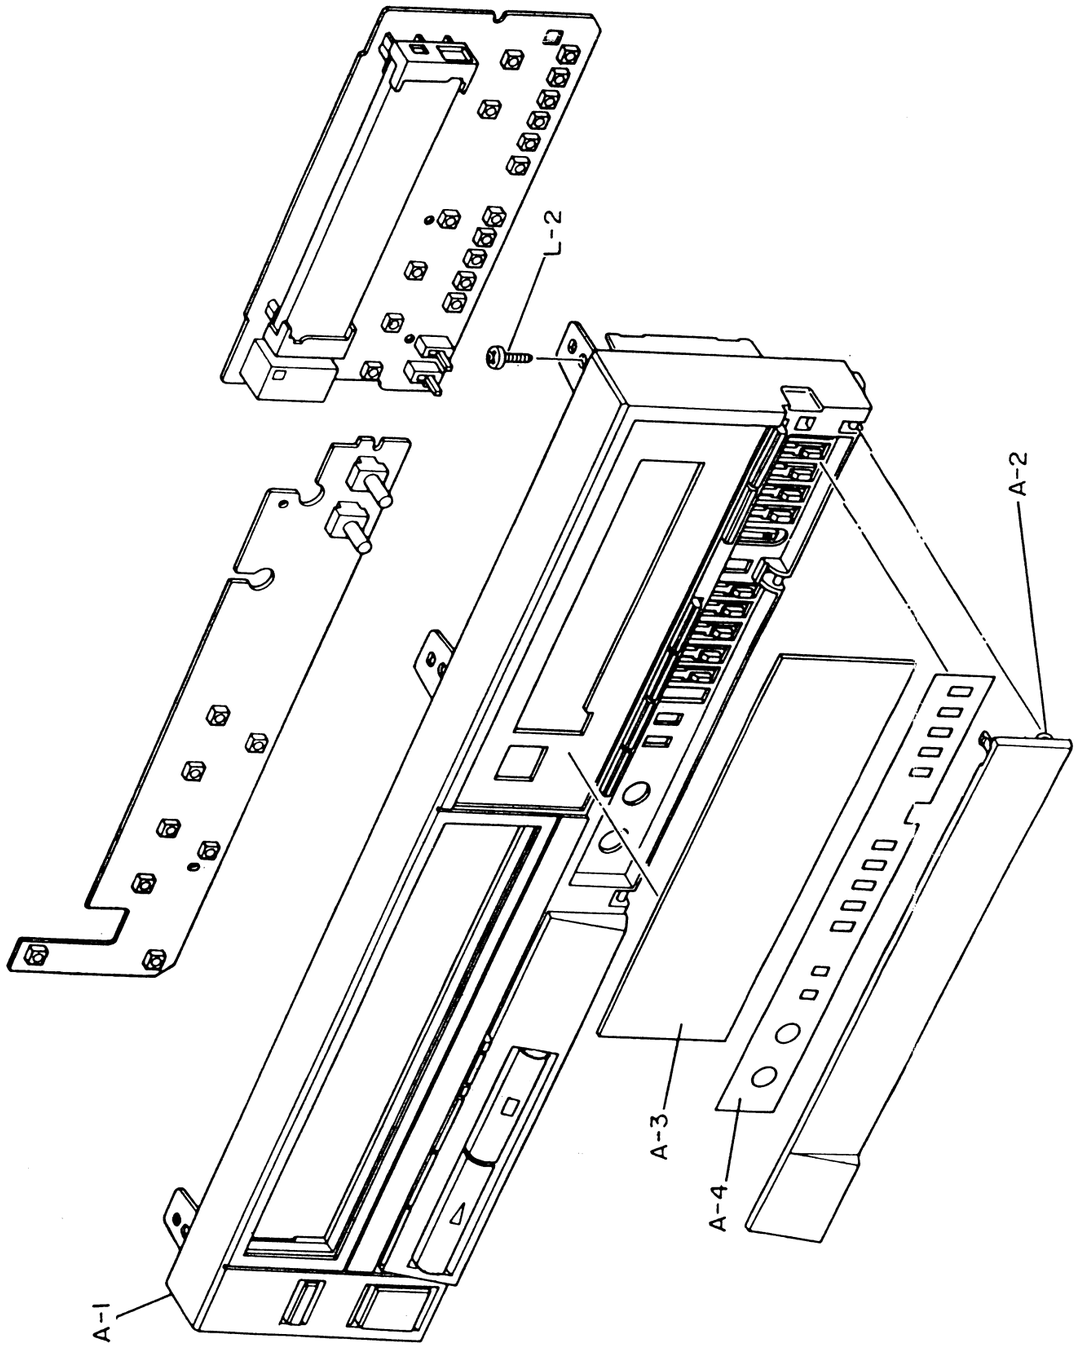

EXPLODED VIEW (DECK 1)

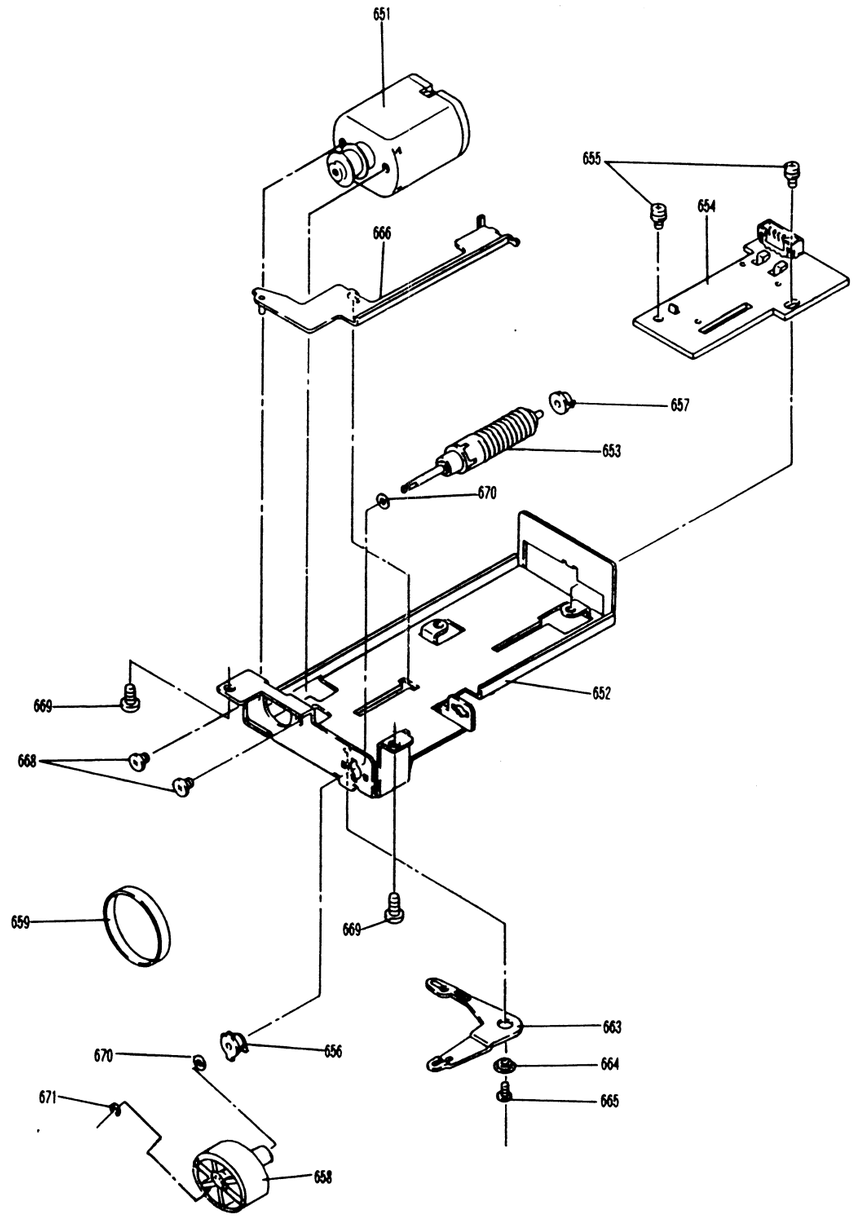

060

EXPLODED VIEW (DECK 2)

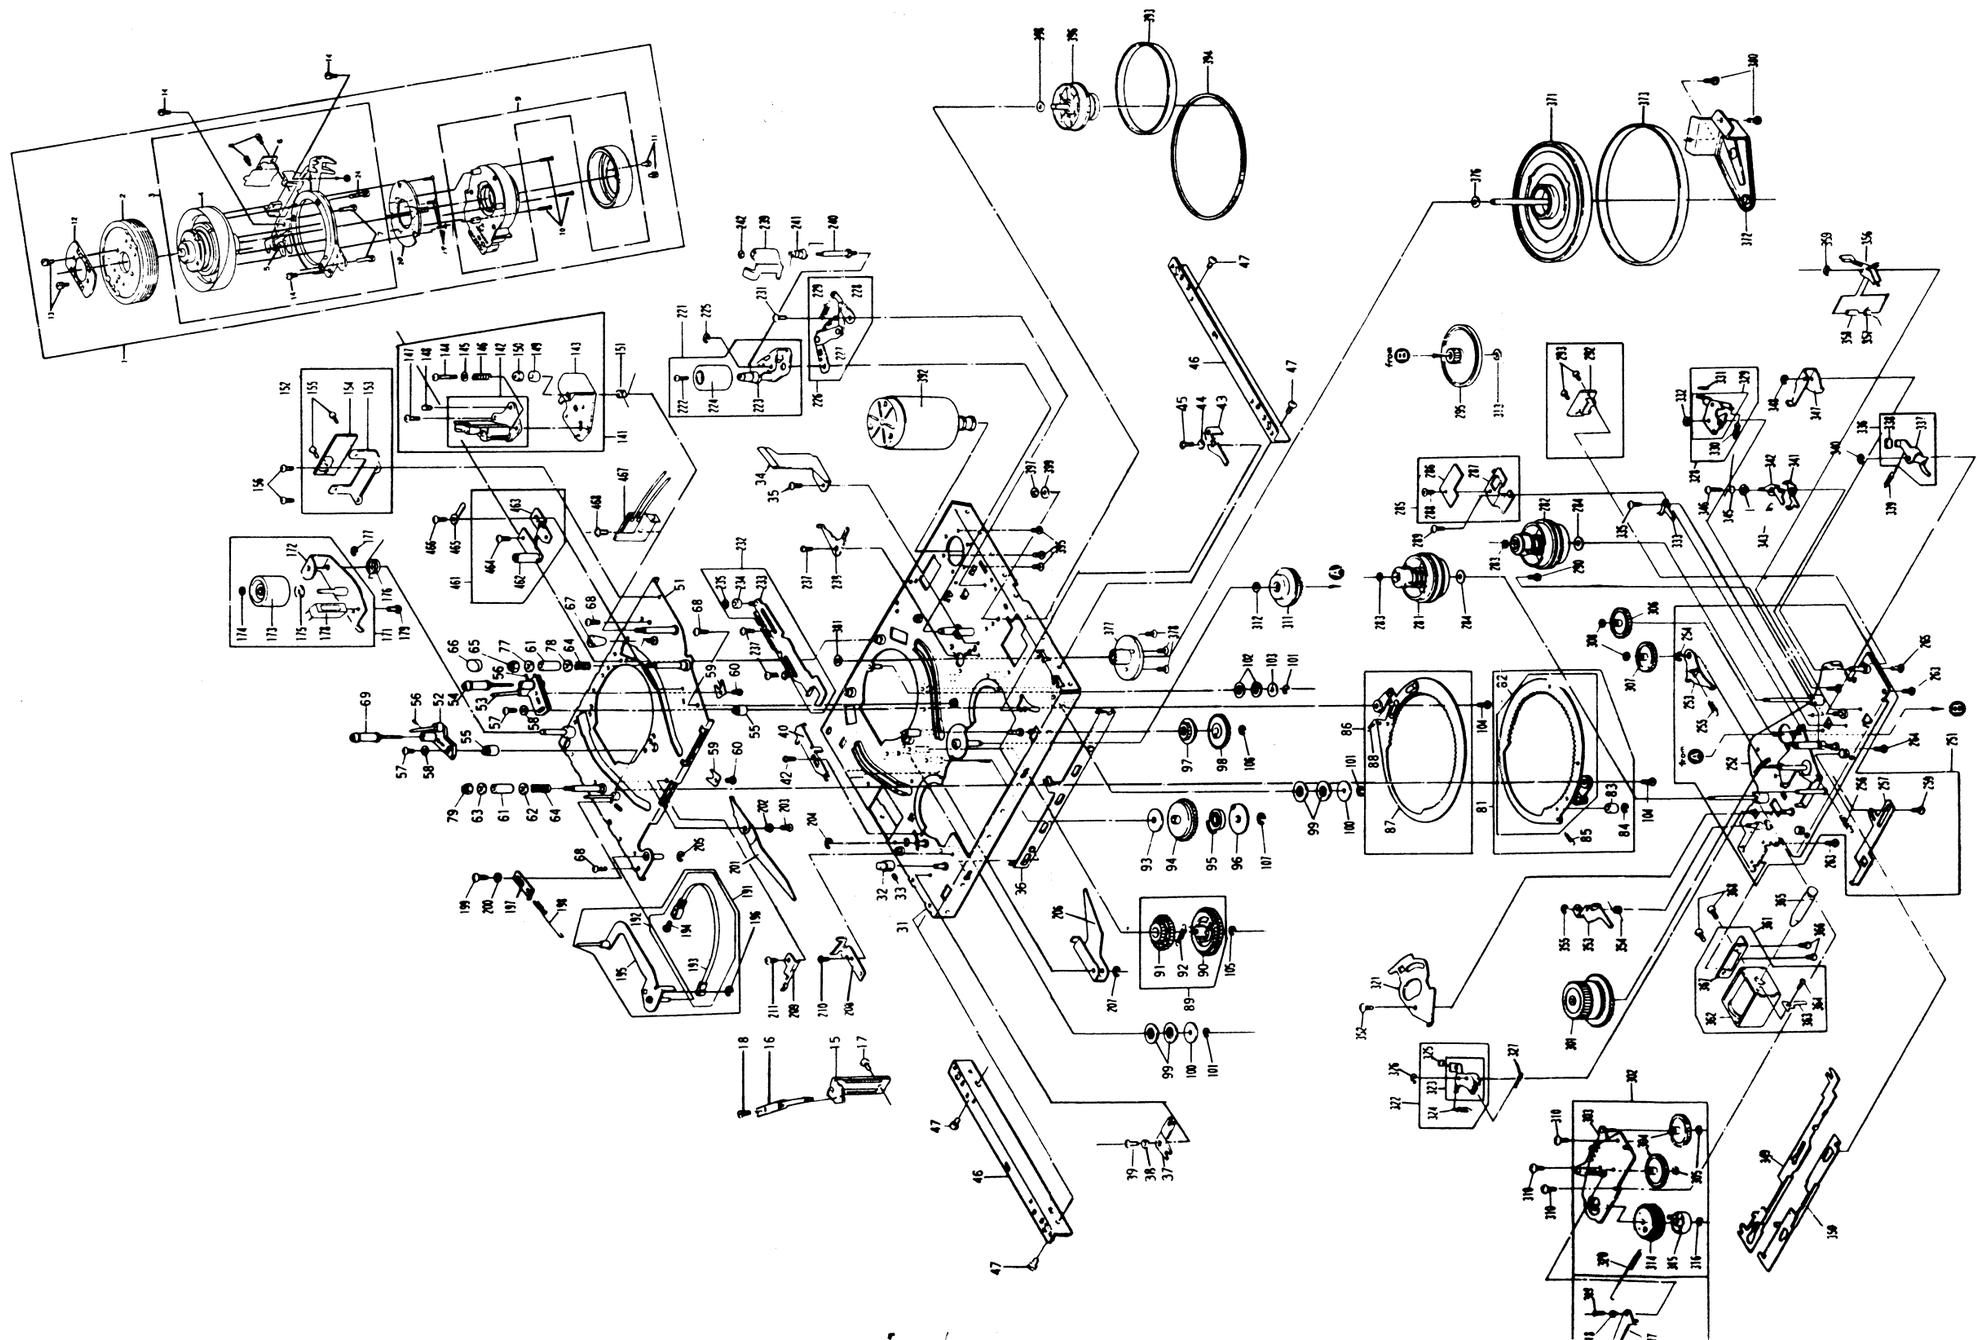

EXPLODED VIEW (DECK 3)

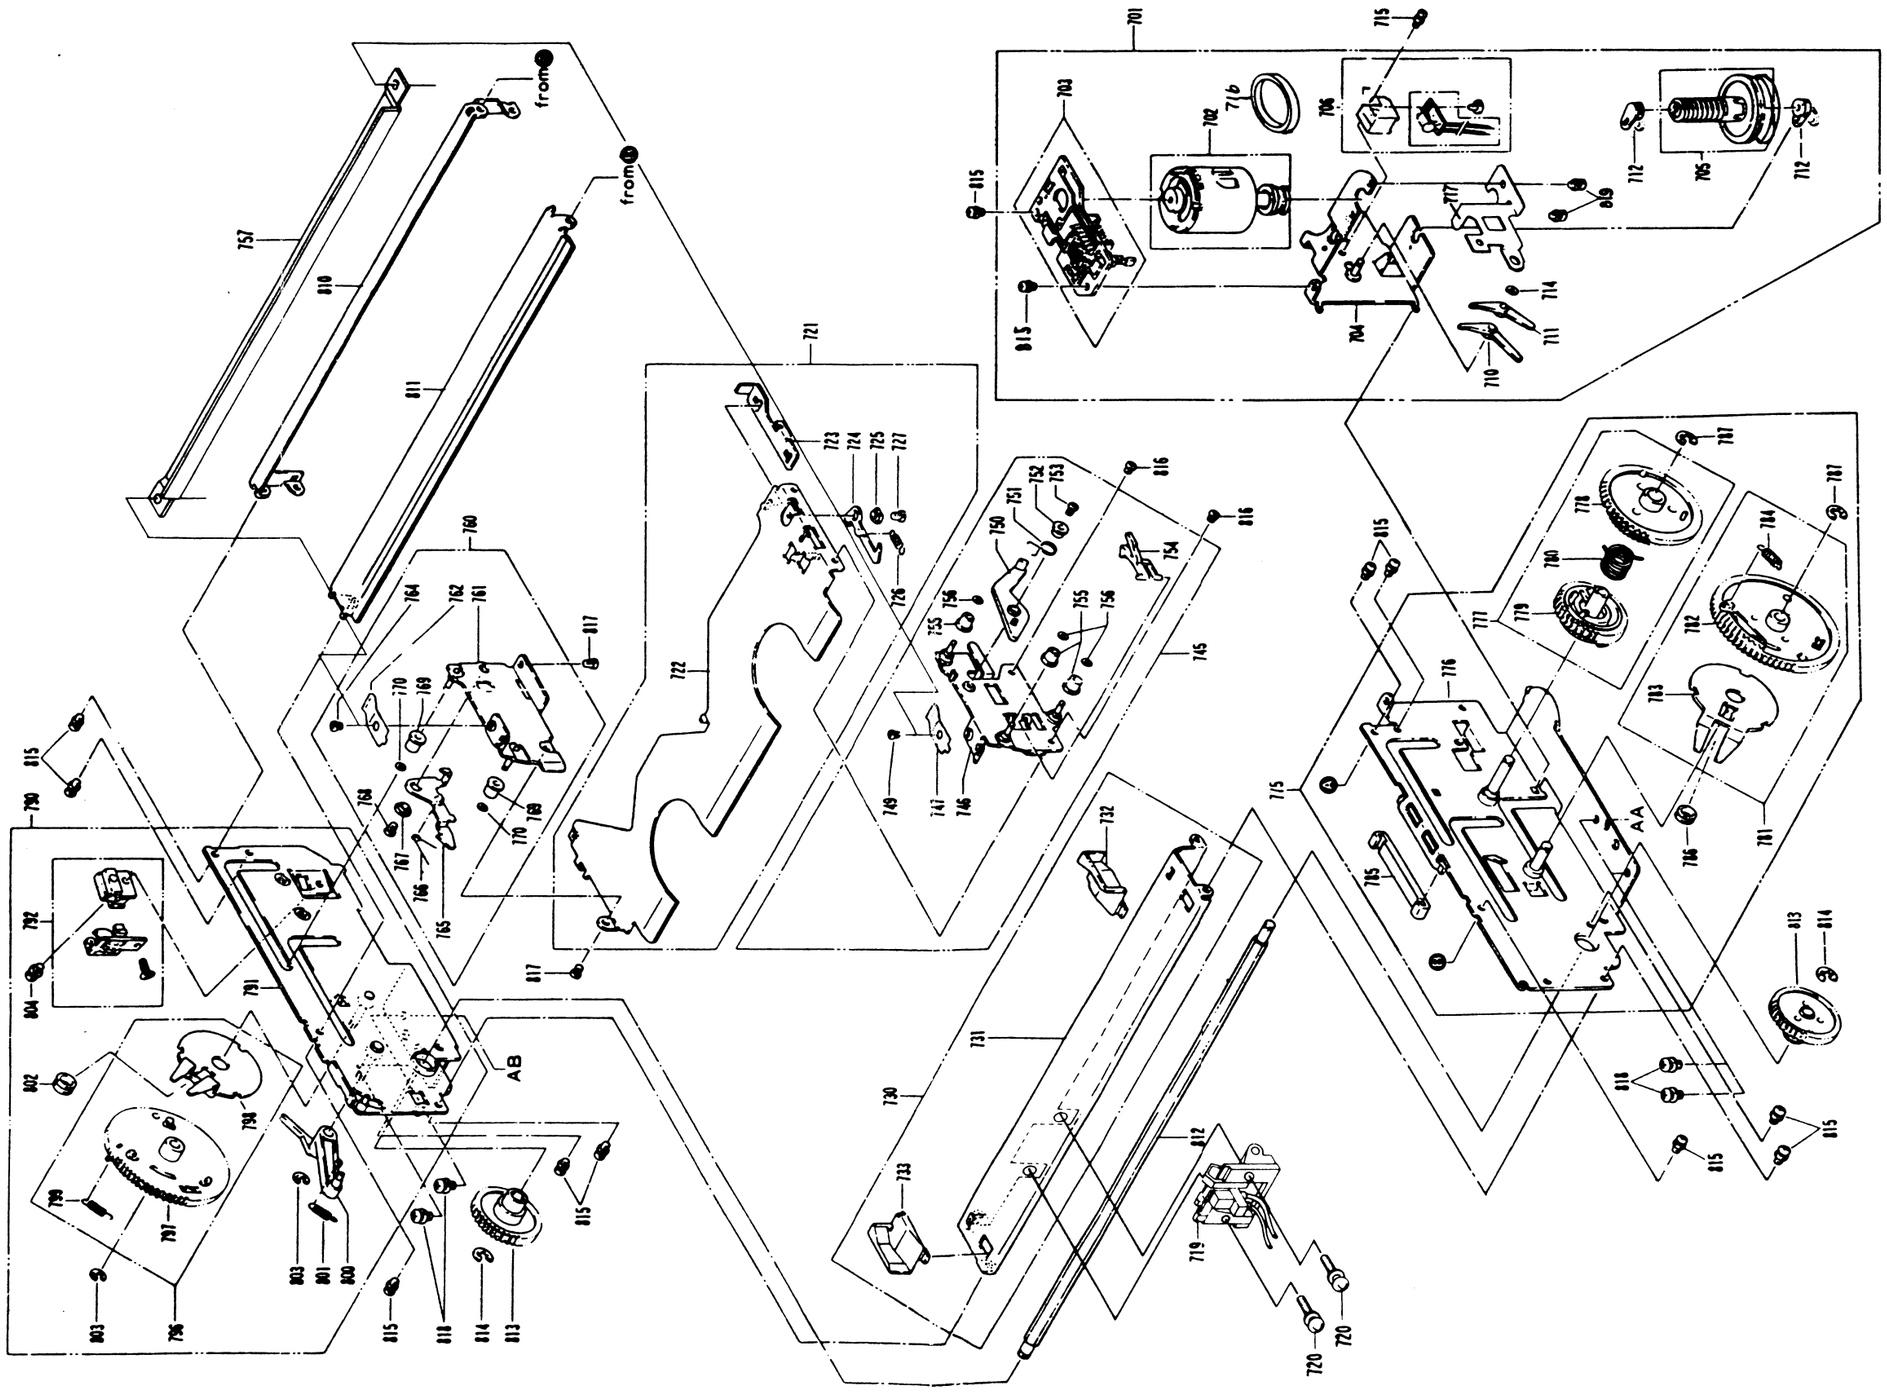

LEAD IDENTIFICATION 2 (IC, Transistor)

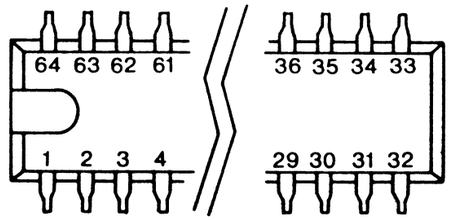

14DN244 C
14DN260

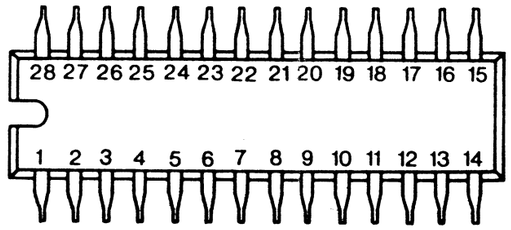

14DN300

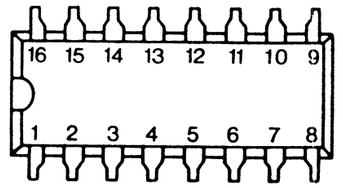

LA7913
MN1225

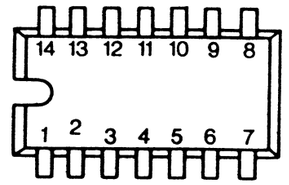

AN6912
LA6339
BA10339
NJM2901N

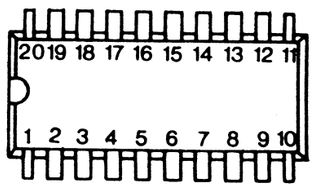

AN3331K

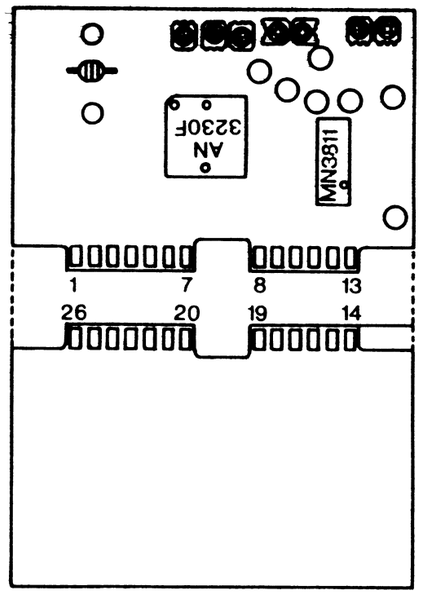

1812119
(VIDEO- Y)
HIC 51

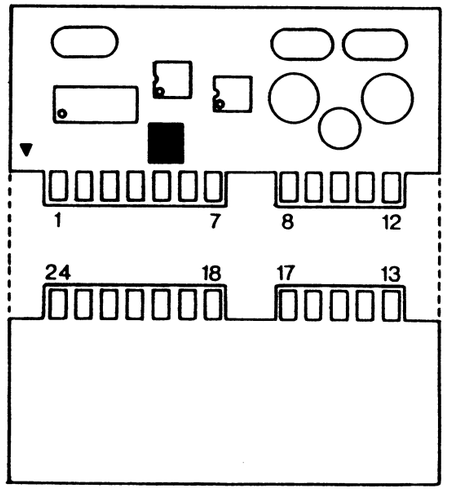

1812120
(SERVO)
HIC 401

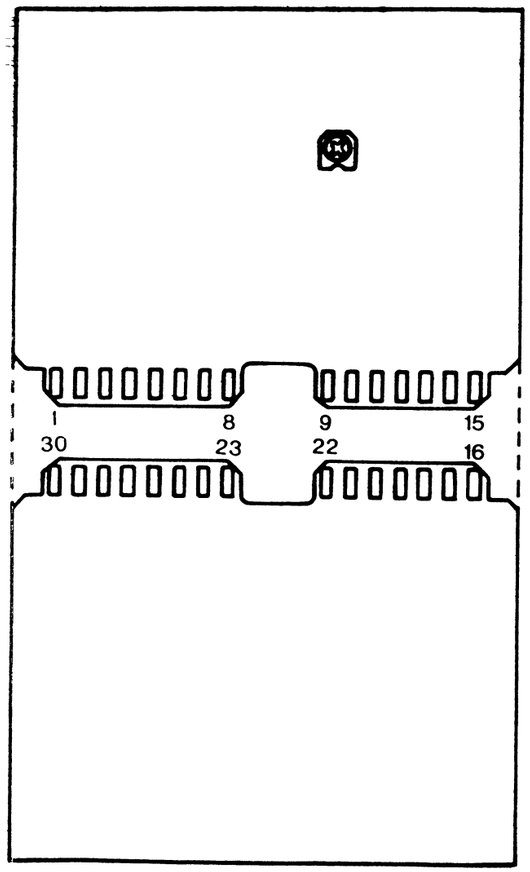

1812117
(VIDEO- C)
HIC 101

LEAD IDENTIFICATION 1 (IC, Transistor)

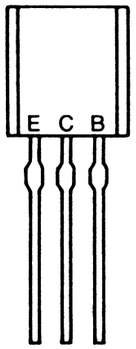

2SA933
2SC1740
2SA608SP
2SA1317
2SC536SP
2SC2839
2SK128
2SD1468SP
2SD1012

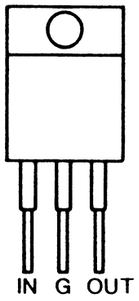

AN78M05F
NJM78M05FA
AN7812F
NJM7812FA
AN7818F
NJM7818FA

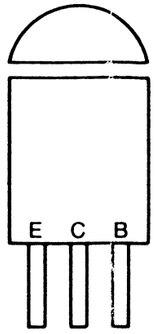

2SC1741A
2SC2058
2SA1038
2SA1016 K

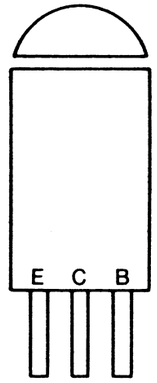

2SA934
2SC2060
2SB1010
2SD1384
2SB892
2SD400
2SD1207

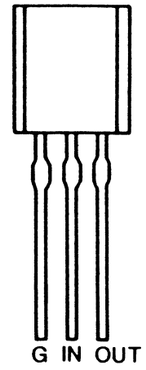

DTA124
DTC124
DTA143X
DTC144
2SC3400
2SA1346

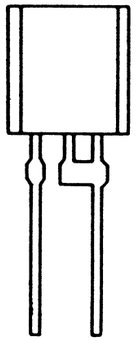

μPC574J

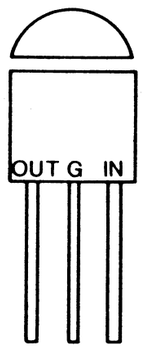

AN78L05
NJM78L05A

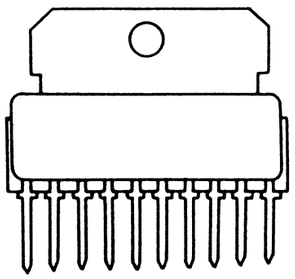

BA6219B
BA6238A
TA7288P

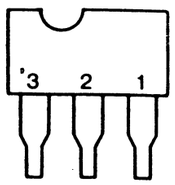

MN1280Q

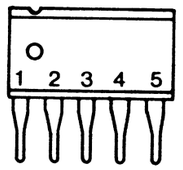

BA7755

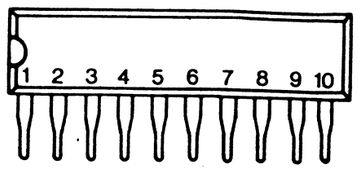

LA7210

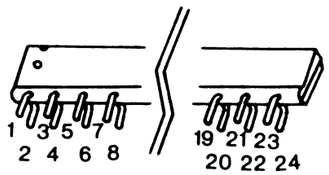

BA7751LS
BA7751ALS

SYSTEM CONTROL TIMING CHARTS

1 POWER→TV/VCR→TAPE INSERT→REC→PAUSE→REC→STOP→REW→FF→STOP

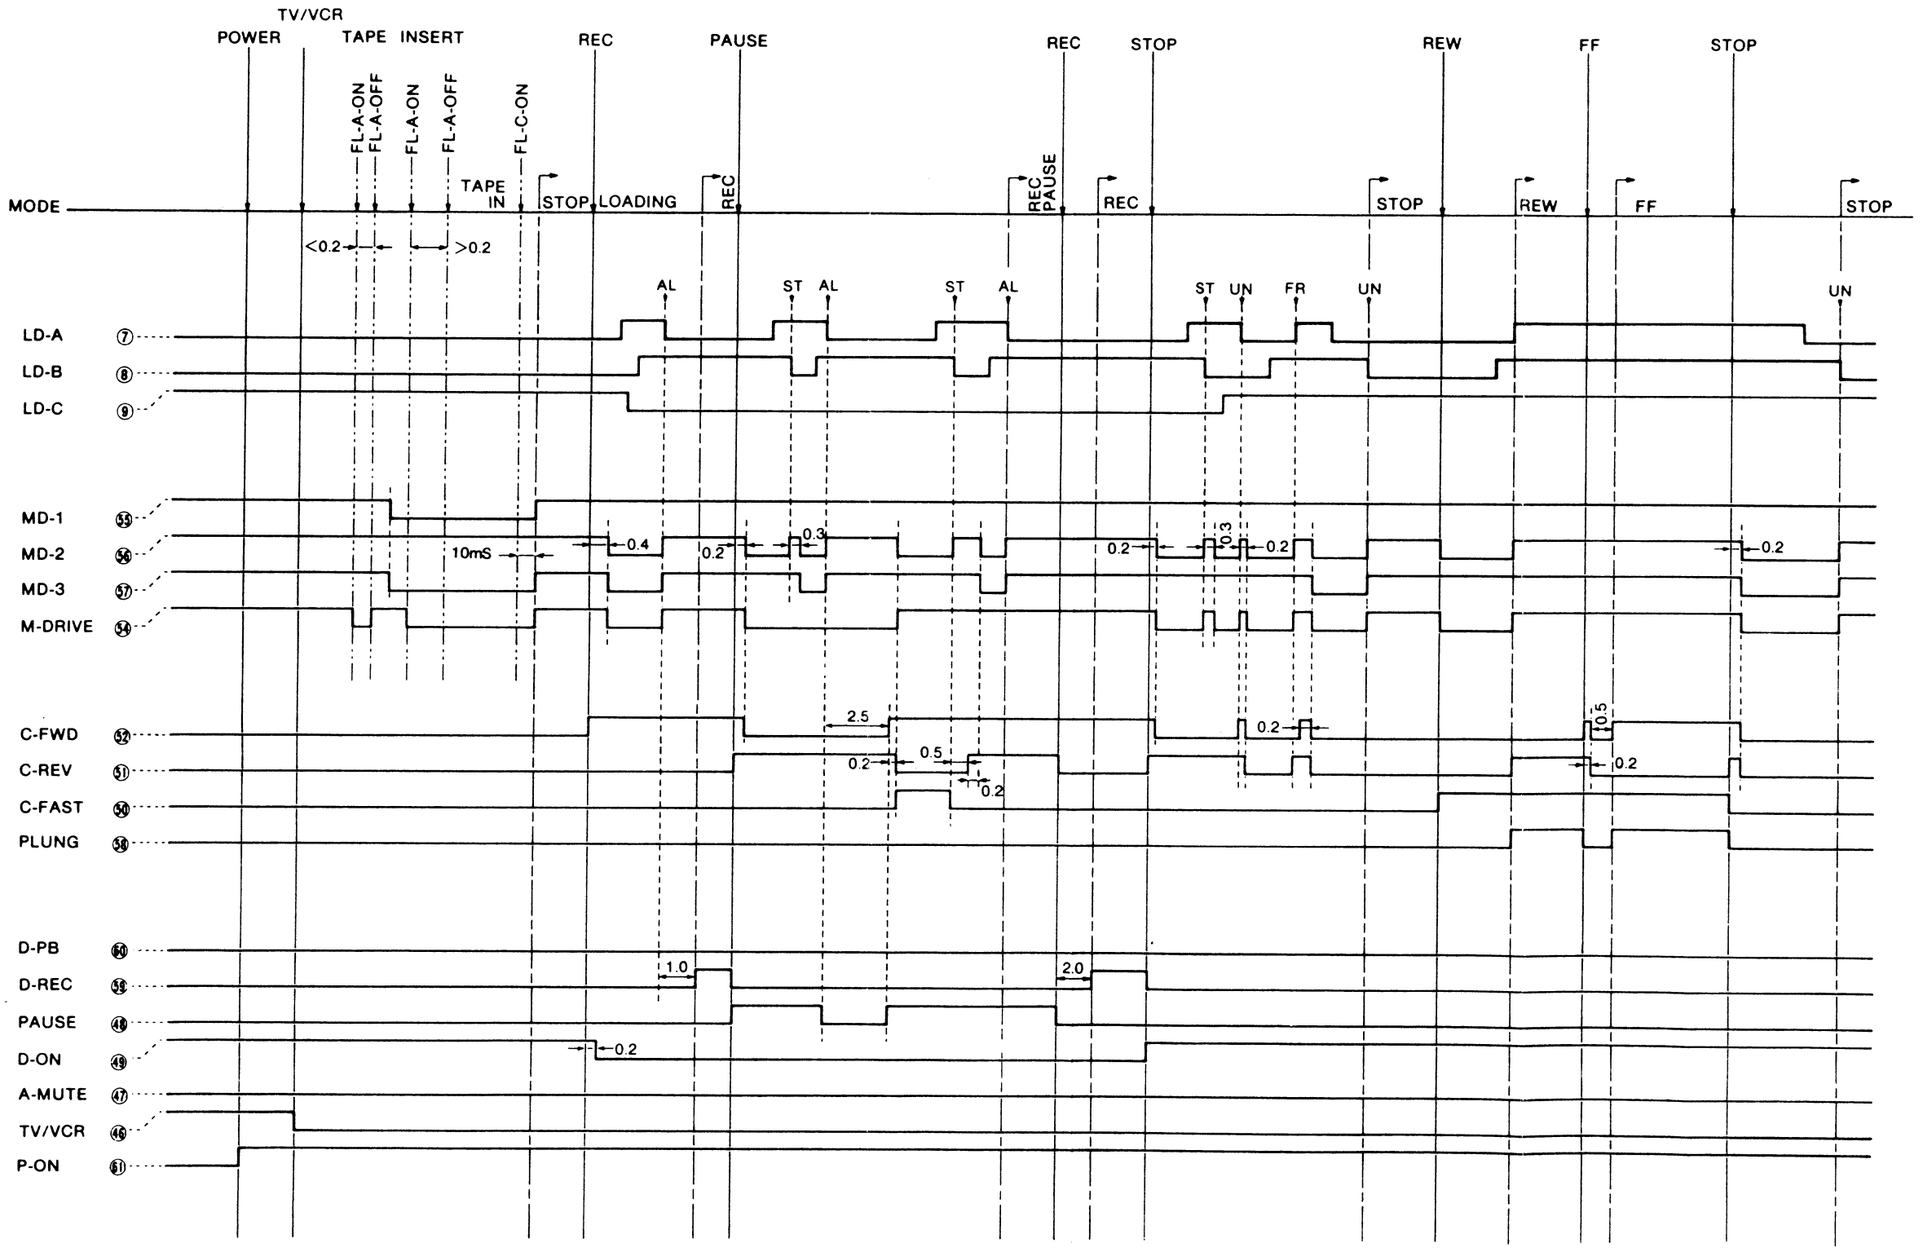

NOTICE

All time values are in second.

2 STOP→PLAY→FF(FS)→REW(RS)→PLAY→ PAUSE→NOISE CANCEL→PAUSE→PLAY→STOP→EJECT→POWER

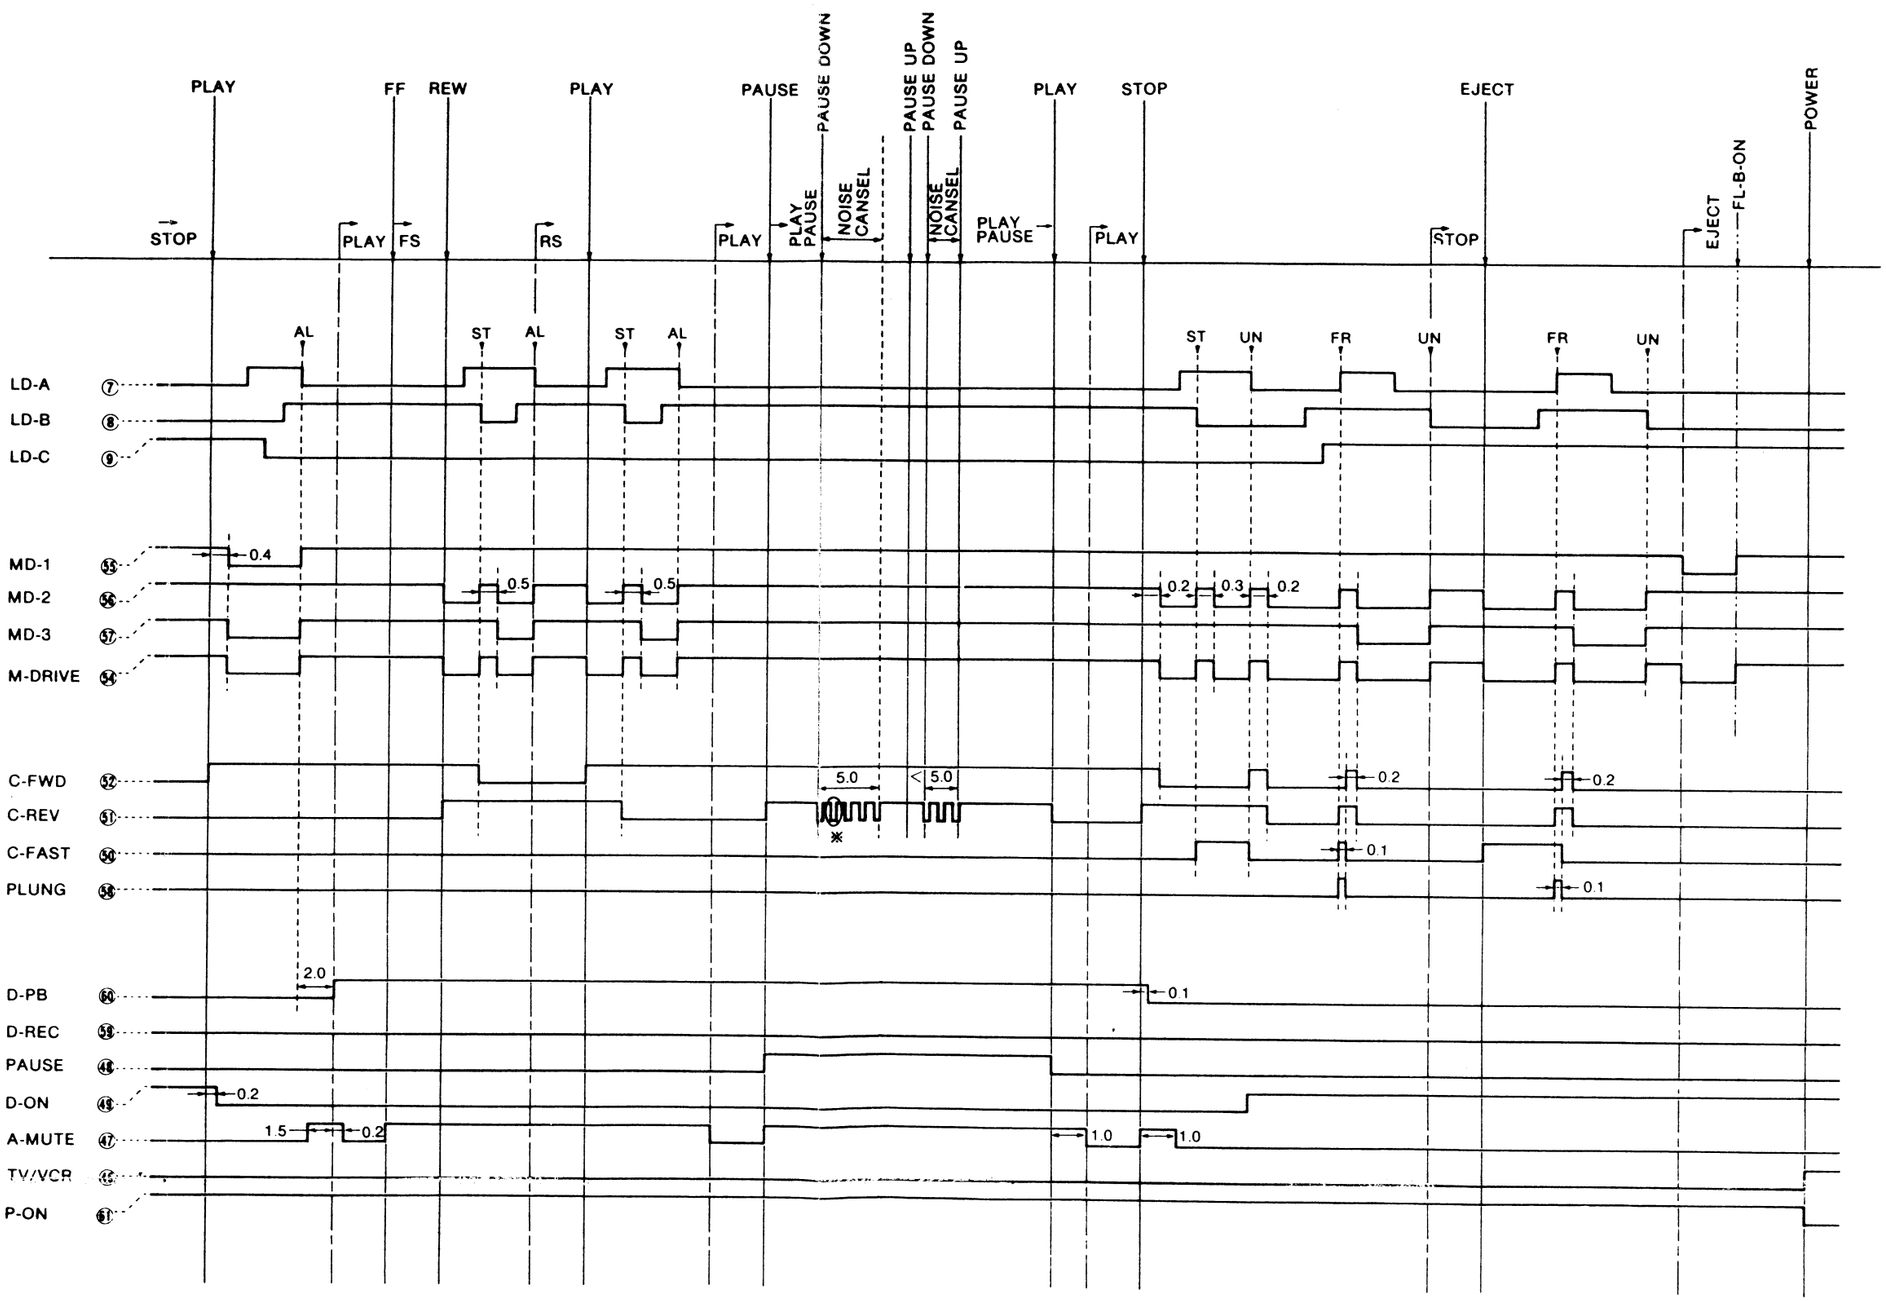

※

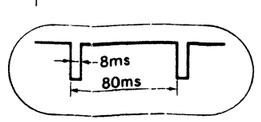

Under "NOISE CANSEL MODE"

If "NOISE CANSEL MODE" is more than "5"sec, it will transfer to "PAUSE MODE" automaticaly.

DRUM AND CAPSTAN TIMING CHARTS (RECORD MODE)

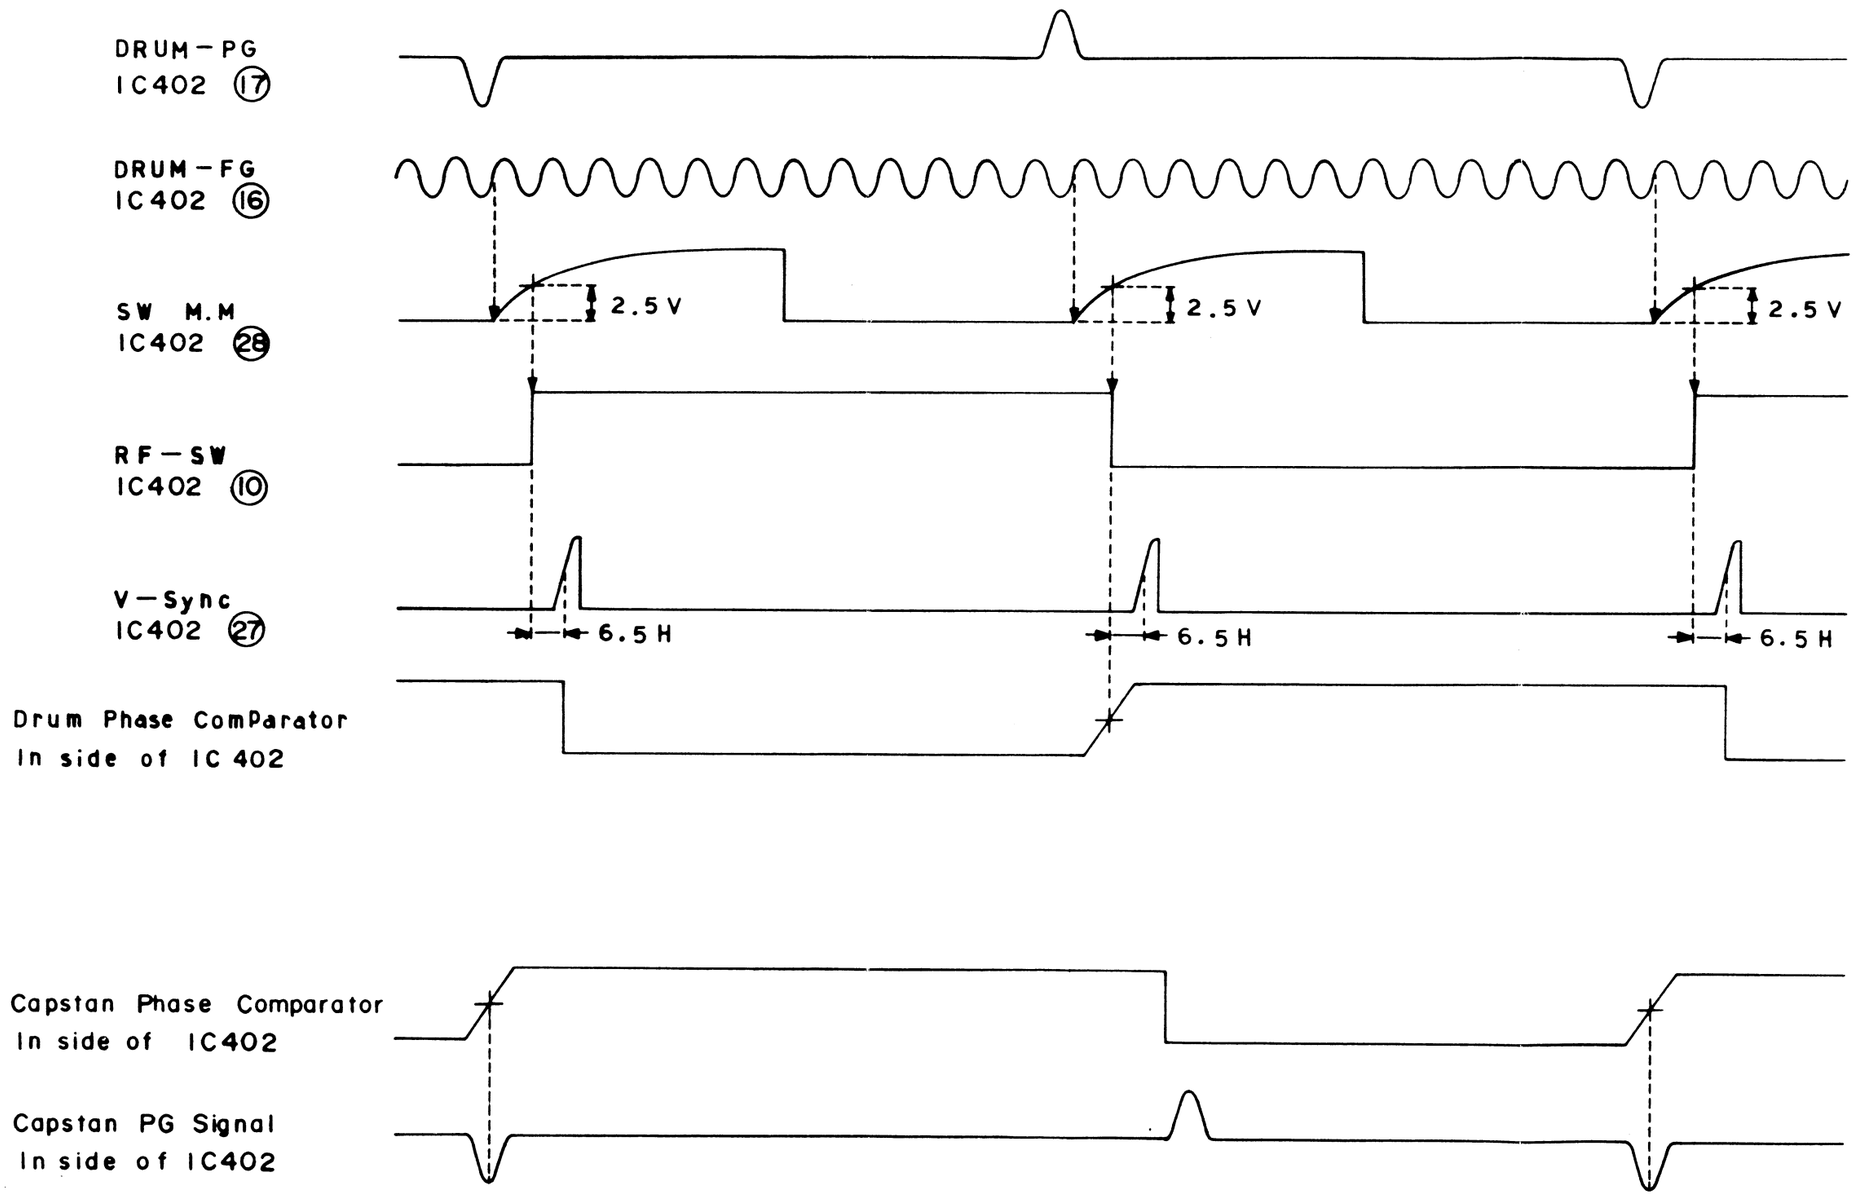

DRUM AND CAPSTAN TIMING CHARTS (PLAYBACK MODE)

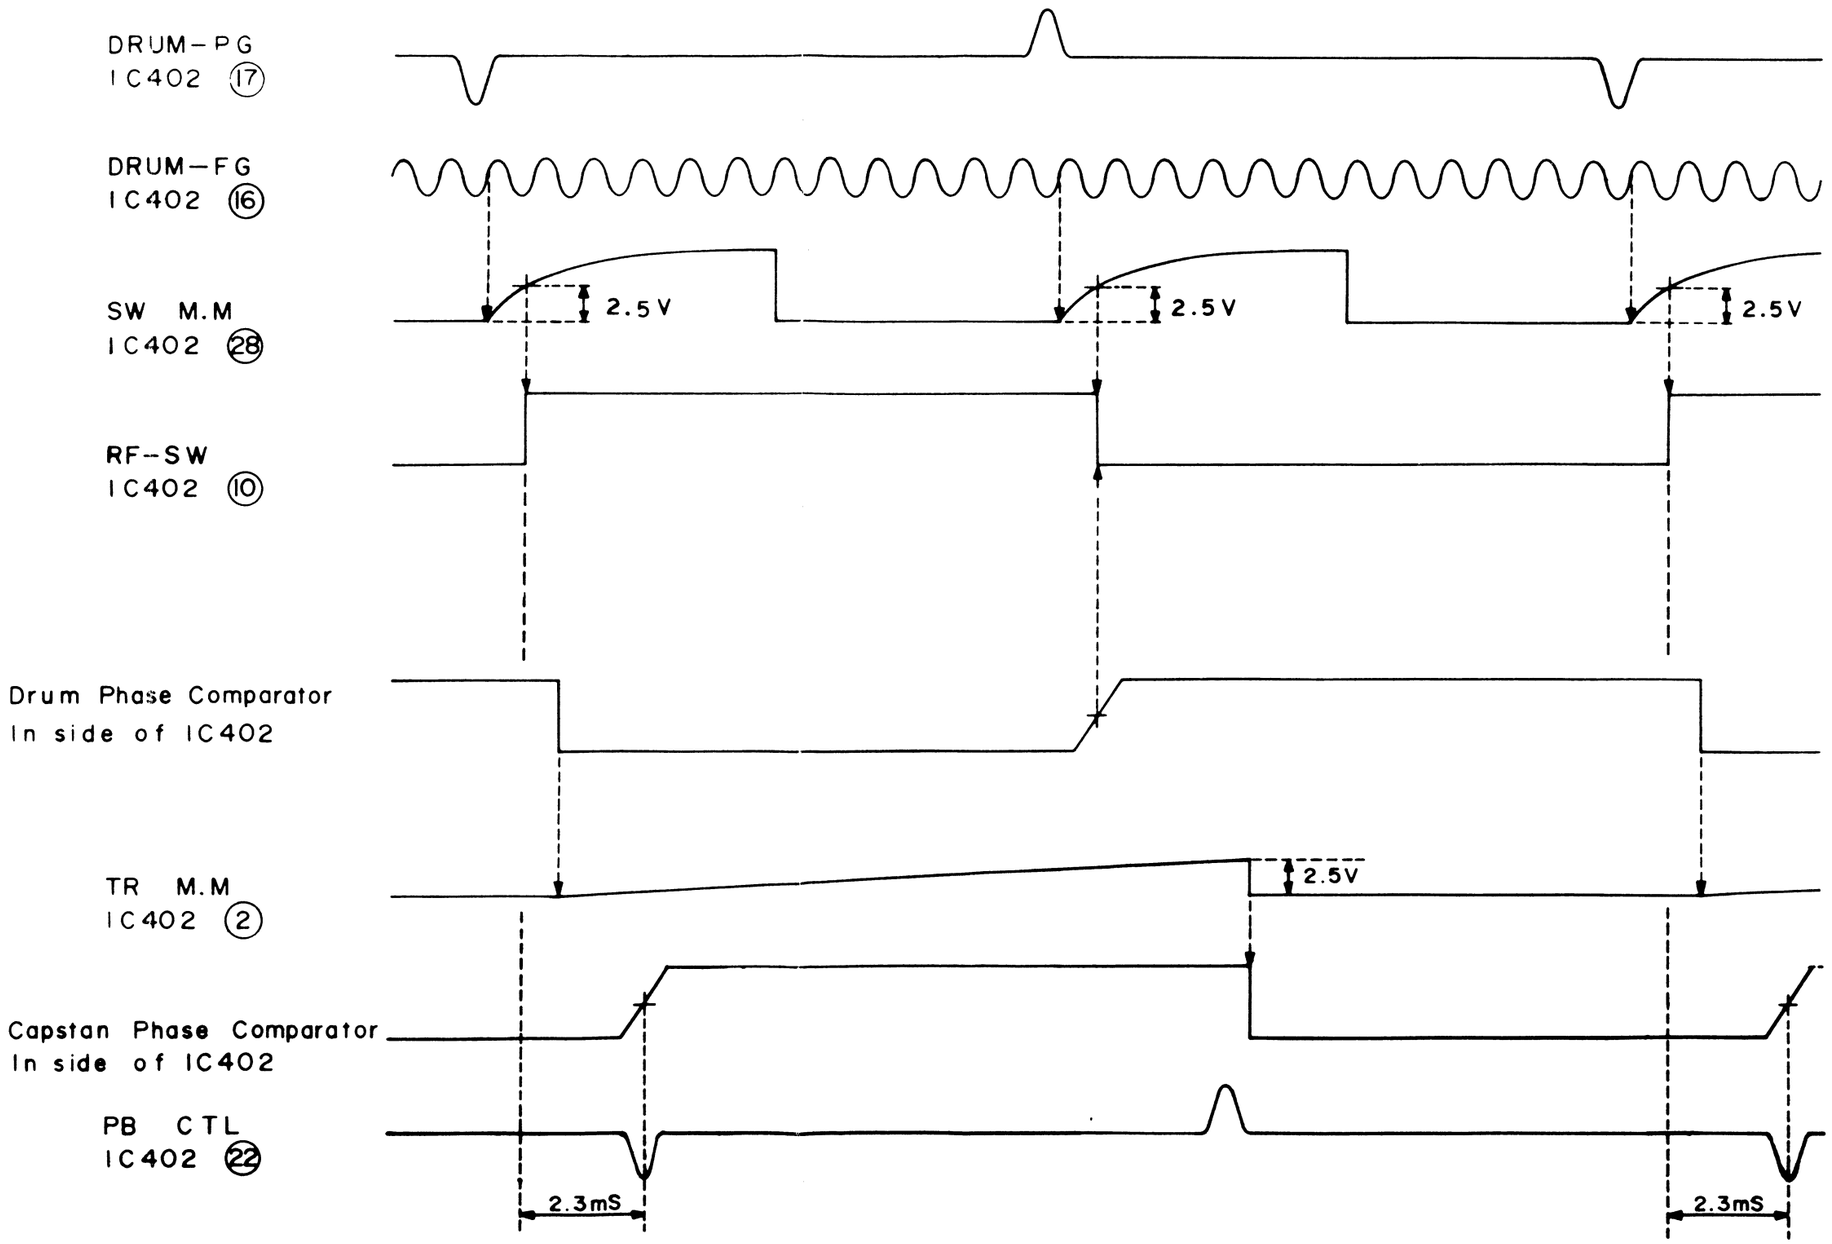

SCHEMATIC DIAGRAM (CONTROL/TIMER)

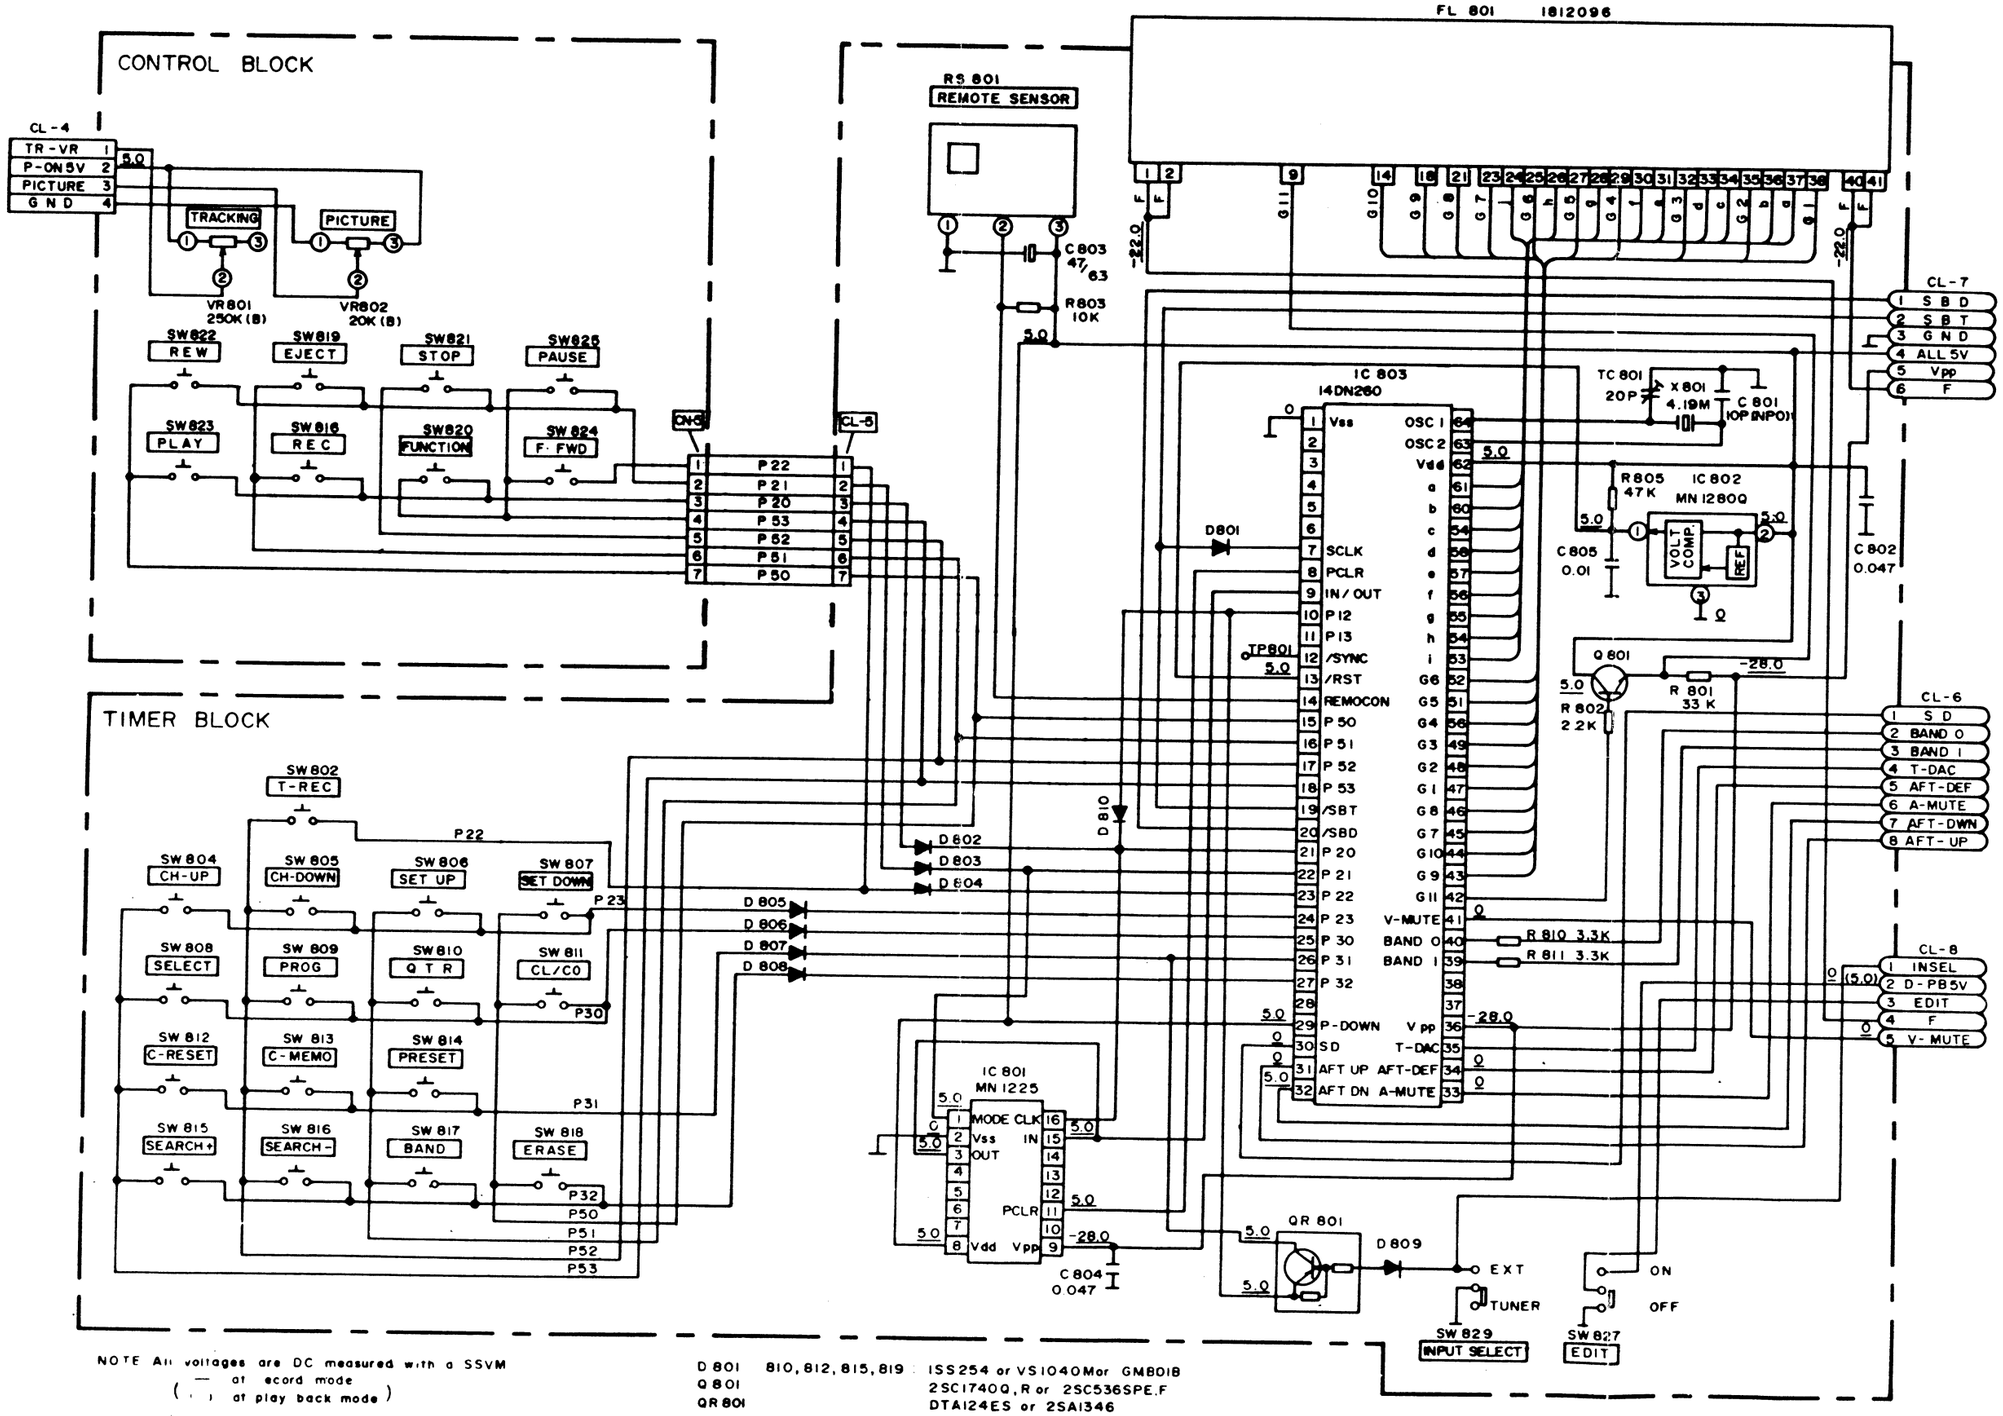

NOTE All voltages are DC measured with a SSVM
— at ecord mode
( ) at play back mode)

D 801 810, 812, 815, 819 : ISS254 or VS1040Mor GM8018
Q 801 2SC1740Q, R or 2SC536SPE.F
QR 801 DTA124ES or 2SAI346

SCHEMATIC DIAGRAM (POWER SUPPLY)

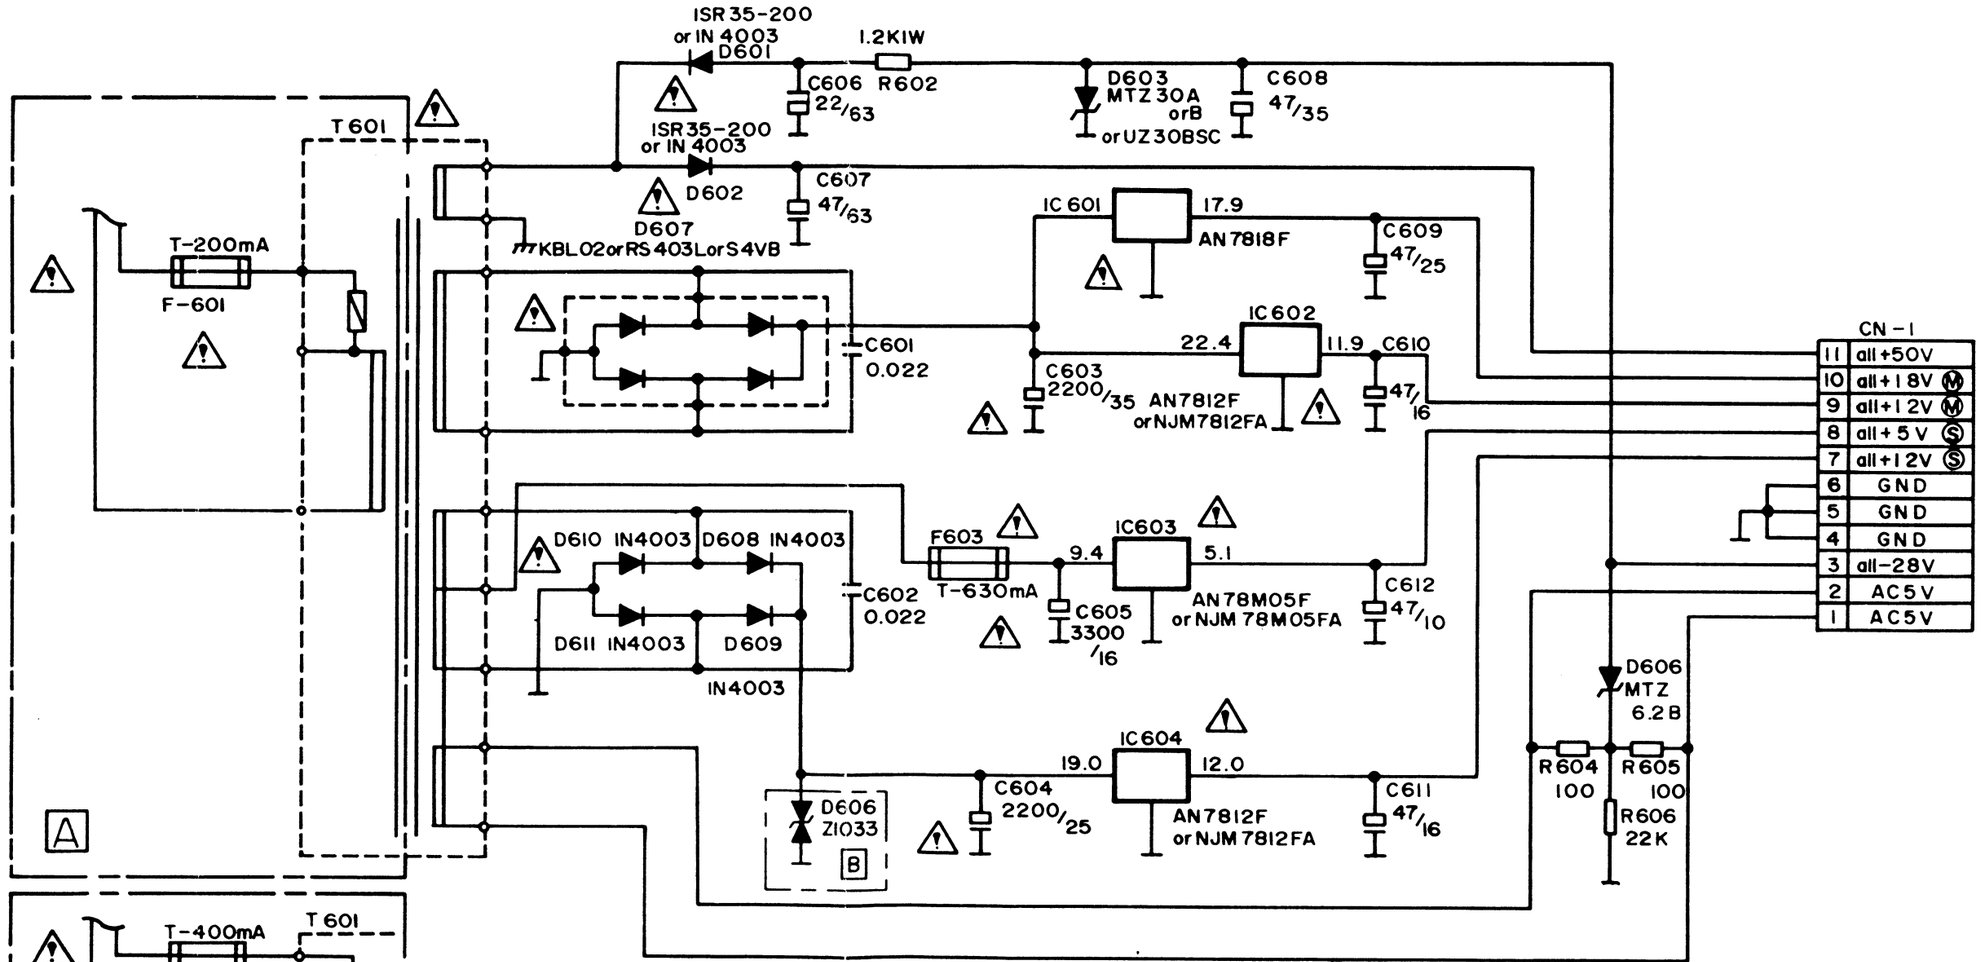

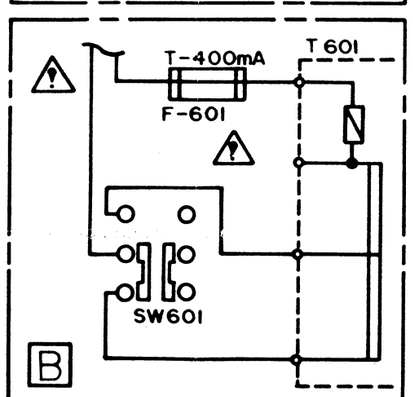

Use B circuit for M/E Asia instate of A circuit

WARNING

Replacement parts which special safety characteristics are identified by ⚠ shawing on this schematic diagram, Replace these critical components with recommended replacement parts. Don't degrade the safety of this set through improper servicing. Service personnel to make eakage current or resistance measurement to determine that exposed parts are acceptably insulated from the supply circuit before returning the appliance to the customer.

NOTE All voltages are DC measured with a SSVM.
The DC voltage at SP mode and record mode.

SCHEMATIC DIAGRAM
Video/Audio

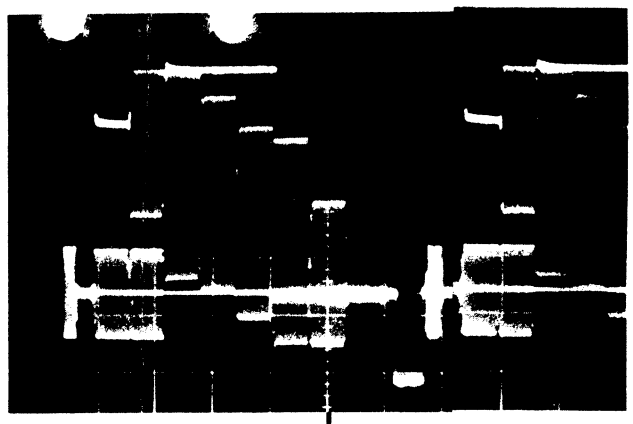

Luminance + Chrominance(REC)

Luminance(REC)

Chrominance(REC)

Luminance + Chrominance(PLAY)

Luminance(PLAY)

Chrominance(PLAY)

NOTE: All voltages are DC measured with a SSVM.
The DC voltage measured at E-E mode.
(▭ : at record mode.)
(▭ : at playback mode.)
Ⓕ : Fusing resistor
⚠ : Safety material

NOTES:
1. ALL RESISTANCE VALVES ARE INDICATED IN OHM (K = 10^3, M = 10^6).
2. ALL CAPACITANCE VALVES ARE INDICATED IN μF (P = 10^{-6} μF).
3. VOLTAGES ARE HEASURED WITH SSVM (Z: >10K OHM) FROM POINT INDICATED TO CHASSIS GROUND AT NO SIGNAL CONDITION UNLESS OTHERWISE NOTED. (SEE VOLTAGE CHART.)
4. CAPACITOR TYPES ARE (PL) = POLYPROPYLANE, (SC) = SEMI-CONDUCTIVE, (M) = MYLAR, OTHERS ARE CERAMIC.

WARNING:
REPLACEMENT PAR
ON THIS SCHEMATI
PARTS. DON'T DEGI
TO MAKE LEAKAGE
ACCEPTABLY INSUL

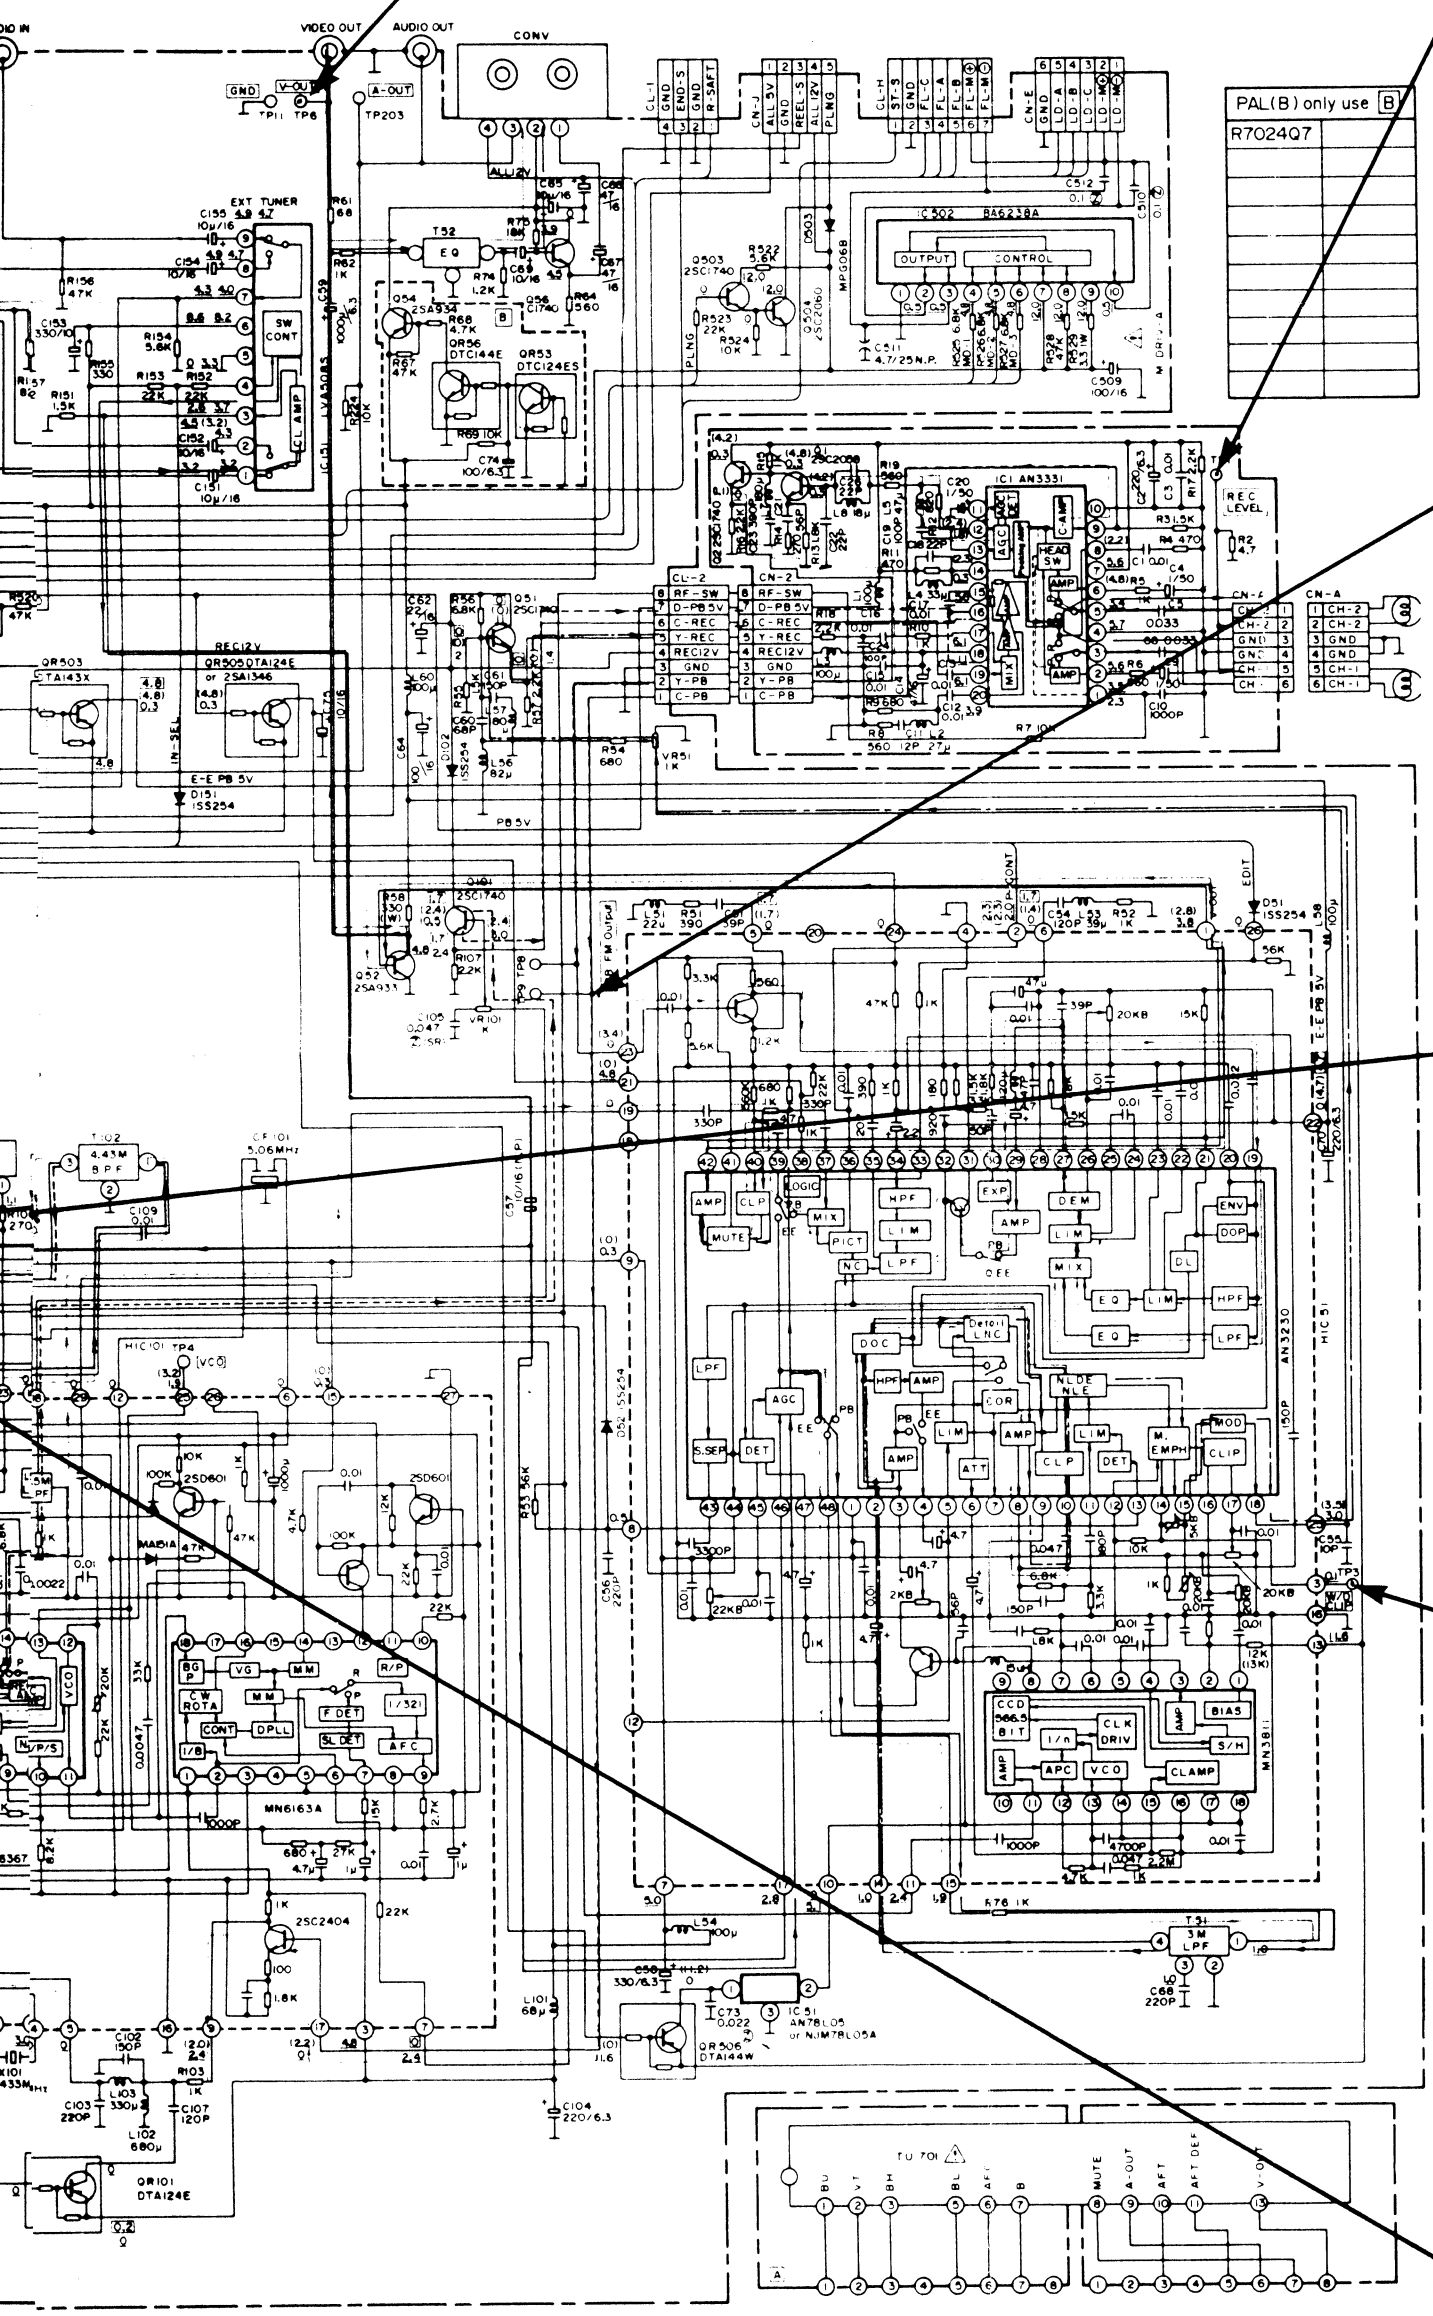

PAL(B) only use B	
R7024Q7	

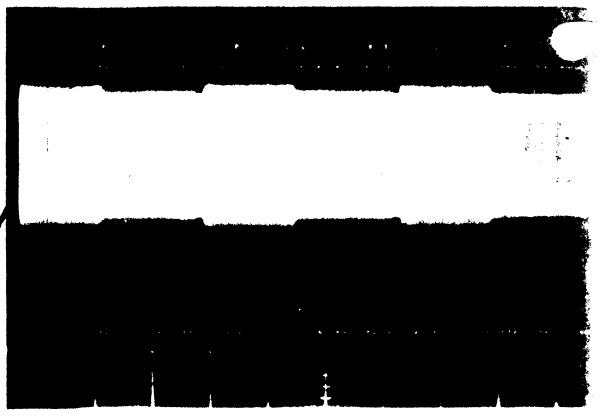

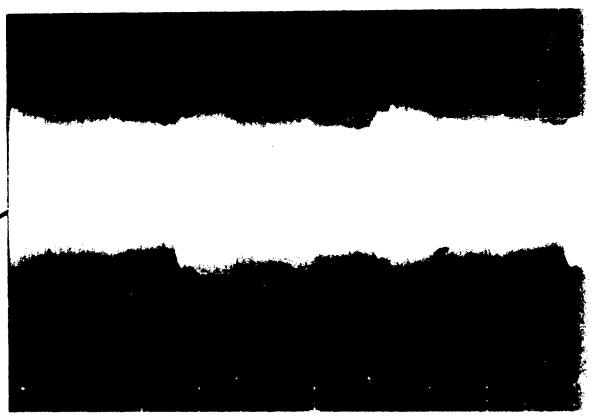

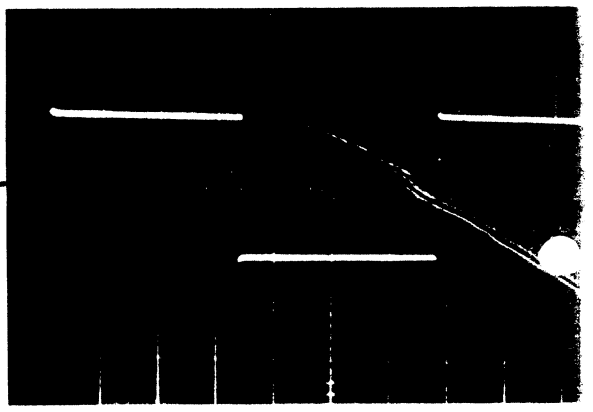

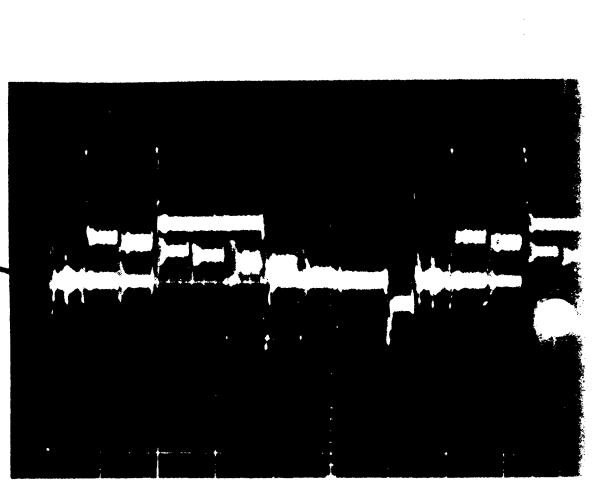

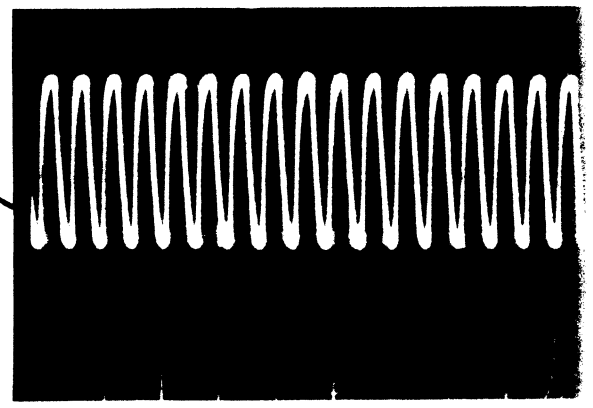

WARNING:
REPLACEMENT PARTS WHICH SPECIAL SAFETY CHARACTERISTICS ARE IDENTIFIED BY ⚠ SHOWING ON THIS SCHEMATIC DIAGRAM, REPLACE THESE CRITICAL COMPONENTS WITH RECOMMENDED REPLACEMENT PARTS. DON'T DEGRADE THE SAFETY OF THIS SET THROUGH IMPROPER SERVICING. SERVICE PERSONNEL TO MAKE LEAKAGE-CURRENT OR RESISTANCE MEASUREMENTS TO DETERMINE THAT EXPOSED PARTS ARE ACCEPTABLY INSULATED FROM THE SUPPLY CIRCUIT BEFORE RETURNING THE APPLIANCE TO THE CUSTOMER.

SCHEMATIC DIAGRAM (CONTROL/TIMER/VPS)

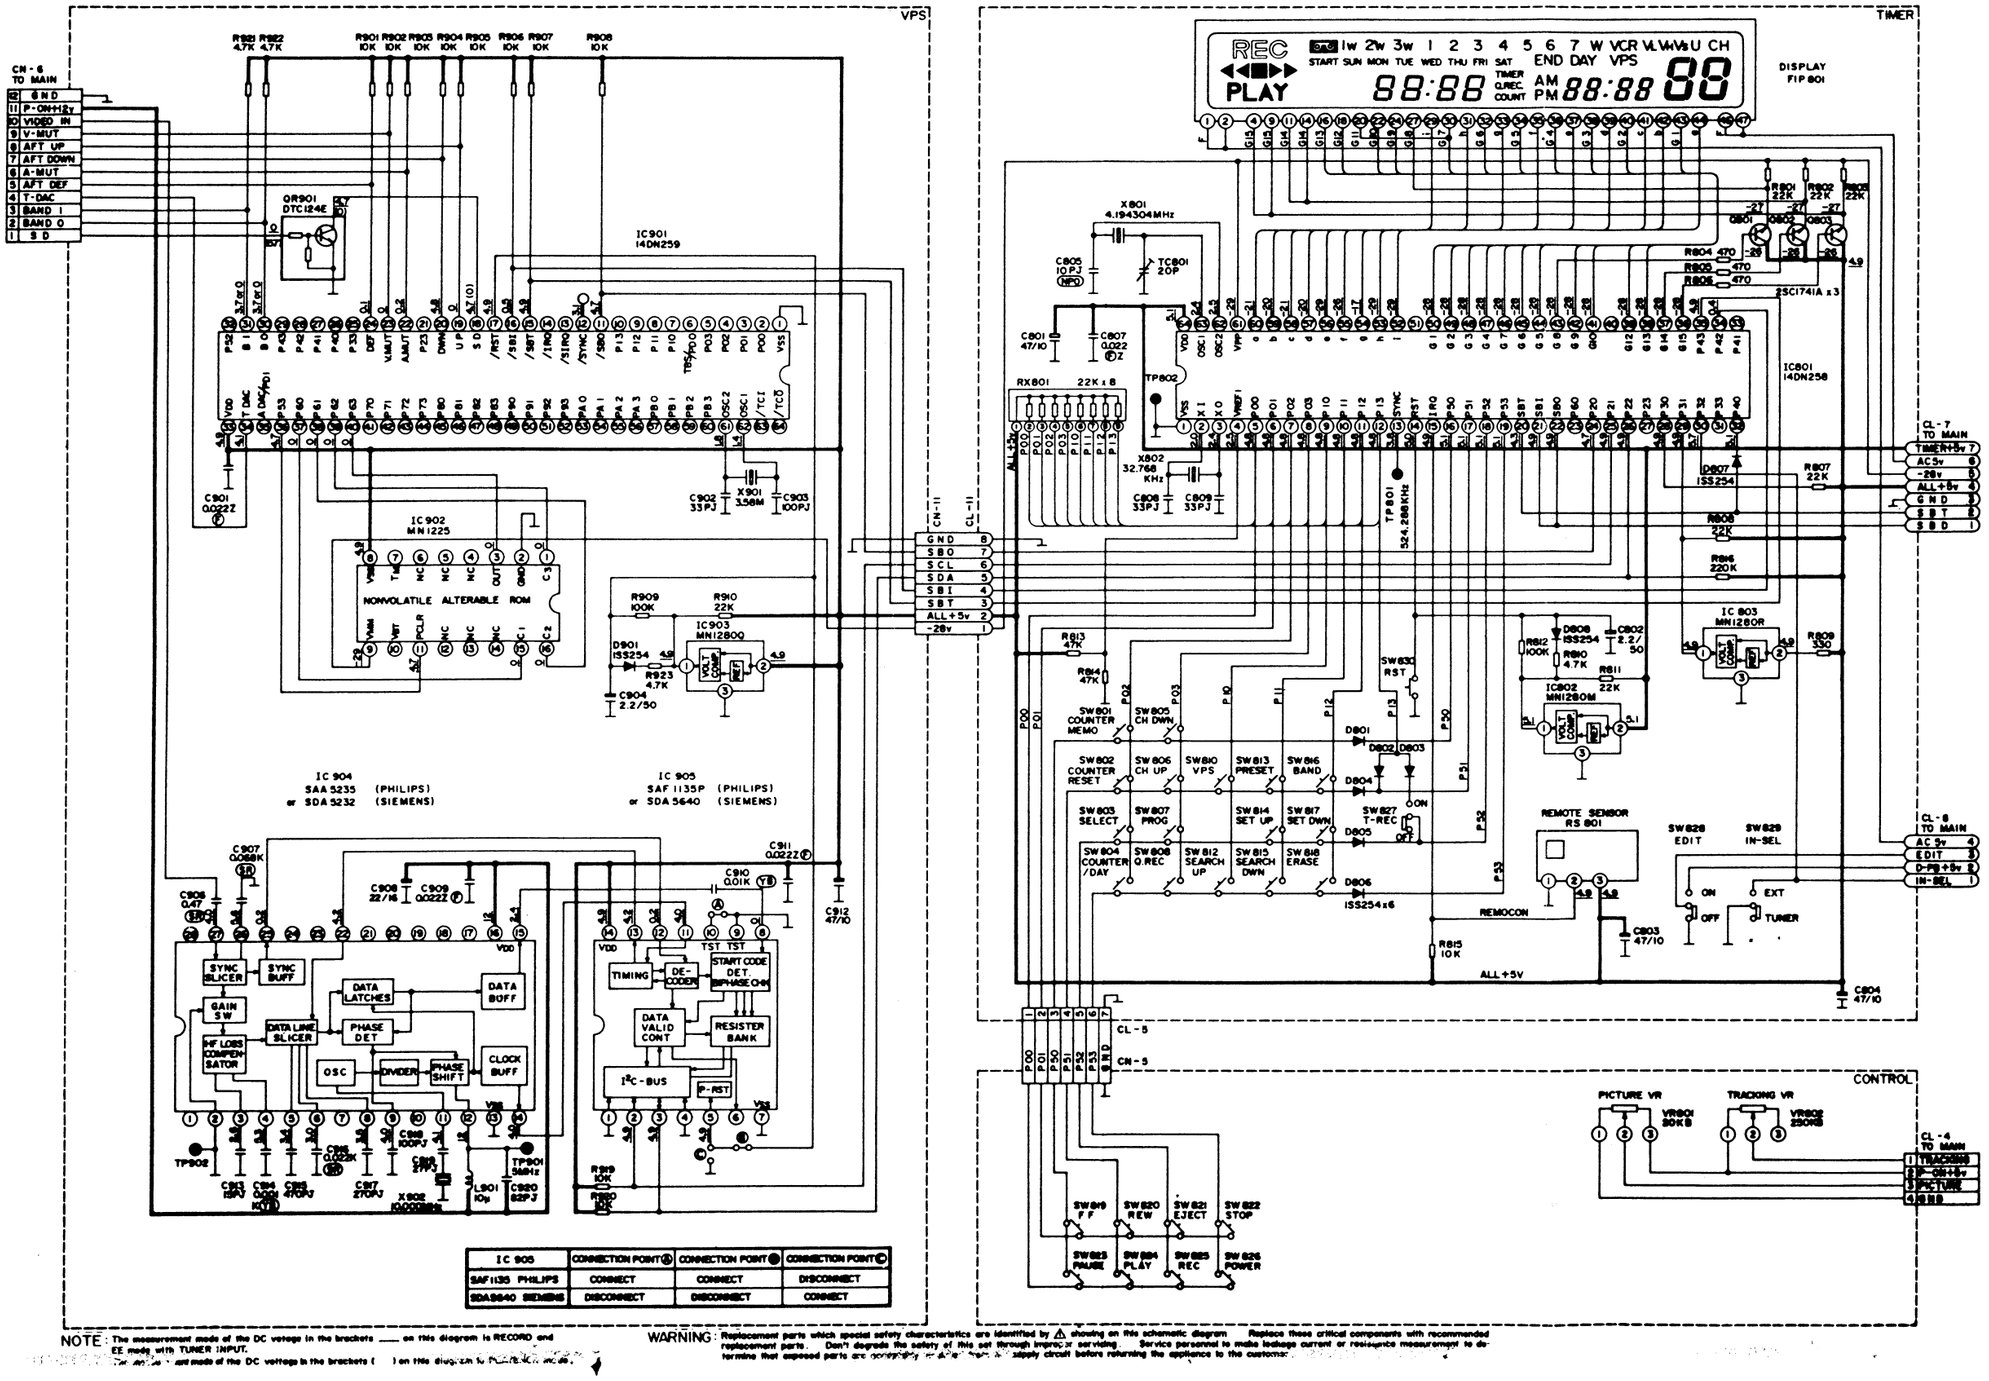

NOTE : The measurement mode of the DC voltage in the brackets ____ on this diagram is RECORD and EE mode with TUNER INPUT.
... and mode of the DC voltage in the brackets ( ) on this diagram is PLAYBACK mode.

WARNING : Replacement parts which special safety characteristics are identified by ⚠ showing on this schematic diagram. Replace these critical components with recommended replacement parts. Don't degrade the safety of this set through improper servicing. Service personnel to make leakage current or resistance measurement to determine that exposed parts are ... from ... supply circuit before returning the appliance to the customer.

TC-P2

VPS PCB

(TOP VIEW)

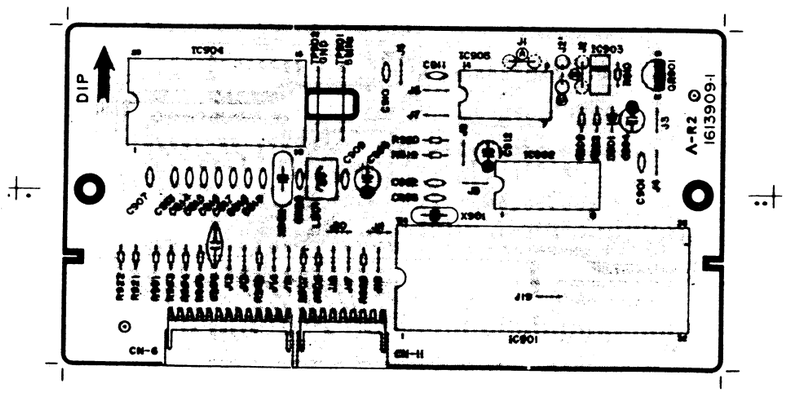

(BOTTOM VIEW)

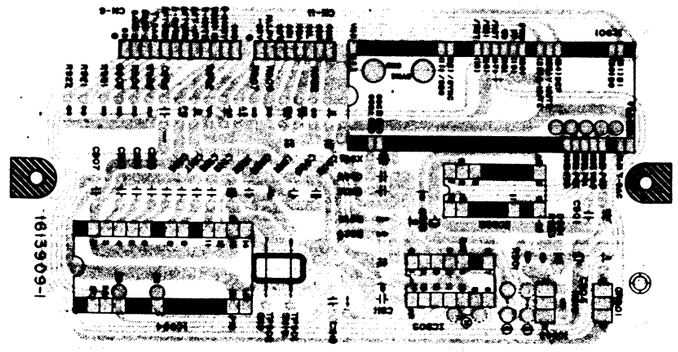

FUNAI

VCR-5400

VHS HQ

PAL

Video Cassette Recorder

HQ

Video cassette recorders bearing the "HQ" mark incorporate VHS high quality technology. Note that there is interchangeability with former VHS video cassette recorder.

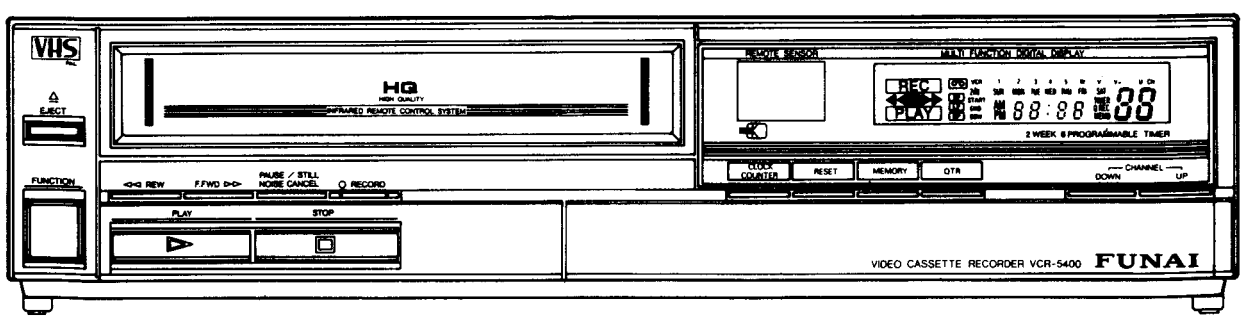

PARTS LIST

ELECTRICAL PARTS LIST

(PRV16)

Ref. No	Description	Parts No.
	PCB Ass'y, Head AMP	1613906X
	Capacitors	
C1	Ceramic 0.01 μF /50V +80/ −20%	1220842
C2	Electrolytic 220 μF /6.3V ±20%	526R227
C3	Ceramic 0.01 μF /50V +80/ −20%	1220842
C4	Electrolytic 1 μF /50V ±20%	526W105
C5	Ceramic 0.033 μF /50V +80/ −20%	1220887
C6-7	Not used	
C8	Ceramic 0.033 μF /50V +80/ −20%	1220887
C9	Electrolytic 1 μF /50V ±20%	526W105
C10	Ceramic 1000pF /50V ±10% YB	12B3102
C11	Ceramic 12pF /50V ±5 % SL	1270120
C12-13	Ceramic 0.01 μF /50V +80/ −20%	1220842
C14	Electrolytic 47 μF /16V ±20%	526T476
C15-17	Ceramic 0.01 μF /50V +80/ −20%	1220842
C18	Ceramic 22 pF /50V ±5 % SL	1270220
C19	Ceramic 100pF /50V ±5 % SL	1270101
C20	Electrolytic 1 μF /50V ±20%	526W105
C21	Ceramic 56pF /50V ±5 % SL	1270560
C22	Not used	
C23	Ceramic 390pF /50V ±5 % SL	1270391
C24	Ceramic 82pF /50V ±5 % SL	1270820
C25-26	Ceramic 22pF /50V ±5 % SL	1270220
	Coils	
L1	Microinductor 100 μH	2162101
L2	Microinductor 27 μH	2162270
L3	Microinductor 100 μH	2162101
L4	Microinductor 33 μH	2162330
L5	Microinductor 47 μH	2162470
L6	Not used	
L7	Microinductor 180 μH	2162181
L8	Microinductor 18 μH	2162180
	IC	
IC1	AN3331K (Linear) (Head AMP.)	14LN235
	Resistors	
R1	Not used	
R2	Carbon 4.7 ohm 1/5W ±5 %	1324479
R3	Carbon 1.5k ohm 1/5W ±5 %	1324152
R4	Carbon 470 ohm 1/5W ±5 %	1324471
R5	Carbon 1k ohm 1/5W ±5 %	1324102
R6	Carbon 560 ohm 1/5W ±5 %	1324561
R7	Carbon 10k ohm 1/5W ±5 %	1324103
R8	Carbon 560 ohm 1/5W ±5 %	1324561
R9	Carbon 680 ohm 1/5W ±5 %	1324681
R10	Carbon 1k ohm 1/5W ±5 %	1324102
R11	Carbon 470 ohm 1/5W ±5 %	1324471
R12	Carbon 820 ohm 1/5W ±5 %	1324821
R13	Carbon 1.8k ohm 1/5W ±5 %	1324182
R14	Carbon 270 ohm 1/5W ±5 %	1324271
R15	Carbon 1k ohm 1/5W ±5 %	1324102
R16-18	Carbon 2.2k ohm 1/5W ±5 %	1324222
R19	Carbon 560 ohm 1/5W ±5 %	1324561
	Trasistors	
Q1	2SC2839EF or 2SC2058QR	C2839EF or C2058QR
Q2	2SC536SPEF or 2SC1740QR	C536SEF or C1740QR
	Miscellaneous	
CN-A	Connector Base 6P	1770147
CN-2	Connector Base 8P	1770264
	Shield Plate, Top	6S50321
	Shield Plate, Bottom	6S50322

MLV53

Ref. No	Description	Parts No.
	PCB Ass'y, Video/Audio	1613937AX
	Capacitors	
C51	Ceramic 39 pF /50V ±5 % SL	1270390
C54	Ceramic 120 pF /50V ±5 % SL	1270121
C55	Ceramic 10 pF /50V ±5 % SL	1270100
C56	Ceramic 220 pF /50V ±5 % SL	1270221
C57	Electrolytic 10 μF /16V ±20% (N.P)	126U106
C58	Electrolytic 330 μF /6.3V ±20%	126A337
C59	Electrolytic 1000 μF /6.3V ±20%	126A108
C60	Ceramic 68 pF /50V ±5 % SL	1270680
C61	Ceramic 150 pF /50V ±5 % SL	1270151
C62	Electrolytic 22 μF /16V ±20%	126C226
C64	Electrolytic 100 μF /16V ±20%	126C107
C65	Electrolytic 10 μF /16V ±20%	126C106
C66-67	Electrolytic 47 μF /16V ±20%	126C476
C68	Ceramic 220 pF /50V ±5 % SL	1270221
C69	Electrolytic 10 μF /16V ±20%	126C106
C70	Electrolytic 220 μF /6.3V ±20%	126A227
C71-72	Not used	
C73	Ceramic 0.022 μF /50V +80/ −20%	12F3223
C75	Electrolytic 10 μF /16V ±20%	126C106
C101	Not used	
C102	Ceramic 150 pF /50V ±5 % SL	1270151
C103	Ceramic 220 pF /50V ±5 % SL	1270221
C104	Electrolytic 220 μF /6.3V ±20%	126A227
C105	Semi-conductive 0.047 μF /16V +80/ −20%	1220523
C107	Ceramic 120 pF /50V ±5 % SL	1270121
C109	Ceramic 0.01 μF /50V +80/ −20%	12F3103
C120	Ceramic 0.01 μF /50V +80/ −20%	12F3103
C151-152	Electrolytic 10 μF /16V ±20%	126C106
C153	Electrolytic 330 μF /10V ±20%	126B337
C154-155	Electrolytic 10 μF /16V ±20%	126C106
C181	Electrolytic 1 μF /50V ±20%	126F105
C182	Polyester Film 0.082 μF /50V ±5 %	1254823
C201	Polyester Film 0.047 μF /100V ±5 %	1255473
C202	Ceramic 220 pF /50V ±5 % SL	1270221
C203-204	Semi-conductive 0.01 μF /25V ±10%	12Y2103
C205	Electrolytic 47 μF /16V ±20%	126C476
C206	Ceramic 0.0015 μF /50V ±10% YB	12B3152
C207	Electrolytic 1 μF /50V ±20%	126F105
C208	Electrolytic 100 μF /16V ±20%	126C107
C209	Electrolytic 33 μF /16V ±20%	126C336
C210	Electrolytic 22 μF /16V ±20%	126C226
C211	Electrolytic 1 μF /50V ±20%	126F105
C212	Electrolytic 4.7 μF /25V ±20%	126D475
C213	Ceramic 0.001 μF /50V ±10% YB	12B3102
C214-215	Not used	
C216	Electrolytic 10 μF /16V ±20%	126C106
C217	Semi-conductive 0.01 μF /25V ±10%	12Y2103
C218	Semi-conductive 0.0033 μF /25V ±10%	12Y2332
C219	Electrolytic 1 μF /50V ±20%	126F105
C220	Electrolytic 22 μF /16V ±20%	126C226
C221	Electrolytic 47 μF /6.3V ±20%	126A476
C222	Electrolytic 1 μF /50V ±20%	126F105
C223	Ceramic 0.001 μF /50V ±10% YB	12B3102
C224	Electrolytic 22 μF /16V ±20%	126C226
C225	Semi-conductive 0.022 μF /25V ±10%	12Y2223
C226-227	Not used	
C401-404	Semi-conductive 0.1 μF /25V +80/ −20%	1220461 or 1220520
C405	Electrolytic 1000 μF /16V ±20%	626C108
C406	Semi-conductive 0.1 μF /12V ±10%	12Y1104
C407	Polyester Film 0.15 μF /50V ±5 % SL	1254154
C408	Semi-conductive 0.047 μF /16V +80/ −20%	1220523
C409	Electrolytic 1 μF /50V ±20%	126F105
C411-412	Electrolytic 10 μF /16V ±20%	126C106
C413	Electrolytic 2.2 μF /50V ±20% (N.P.)	126X225
C414	Electrolytic 10 μF /16V ±20%	126C106
C415	Semi-conductive 0.01 μF /25V ±10%	12Y2103
C416	Electrolytic 47 μF /6.3V ±20%	126A476
C417	Electrolytic 47 μF /10V ±20%	126B476
C418	Semi-conductive 0.047 μF /25V ±10%	12Y2473
C419	Electrolytic 1 μF /50V ±20%	126F105
C420	Semi-conductive 0.047 μF /25V ±10%	12Y2473
C421	Electrolytic 1 μF /50V ±20%	126F105
C422	Polyester Film 0.033 μF /50V ±5 % SL	1254333
C423	Semi-conductive 0.1 μF /12V ±10%	12Y1104
C424-425	Semi-conductive 0.0047 μF /25V ±10%	12Y2472
C426	Semi-conductive 0.1 μF /12V ±10%	12Y1104
C428	Electrolytic 100 μF /25V ±20%	126D107
C501	Electrolytic 47 μF /6.3V ±20%	126A476
C505	Electrolytic 2.2 μF /50V ±20%	126F225

Ref. No	Description	Parts No.
C506	Electrolytic 10 μF /16V ±20% (N.P.)	126U106
C509	Electrolytic 100 μF /16V ±20%	126C107
C510	Semi-conductive 0.1 μF /25V +80/ −20%	1220461 or 1220520
C511	Electrolytic 4.7 μF /25V ±20% (N.P.)	126V475
C512	Semi-conductive 0.1 μF /25V +80/ −20%	1220461 or 1220520
C513	Electrolytic 47 μF /16V ±20%	126C476
C514	Not used	
C652	Semi-conductive 0.047 μF /16V +80/ −20%	1220523
C654	Semi-conductive 0.1 μF /25V +80/ −20%	1220461 or 1220520
C702	Electrolytic 0.1 μF /50V ±20%	126F104
C703	Semi-conductive 0.033 μF /50V ±10%	1220786
C704	Polyester Film 0.015 μF /50V ±5 %	1254153
C705	Semi-conductive 0.033 μF /50V ±10%	1220786
C706	Polyester Film 0.015 μF /50V ±5 %	1254153
C707	Electrolytic 47 μF /35V ±20%	126E476
C708	Electrolytic 4.7 μF /25V ±20%	126D475
C709	Ceramic 0.001 μF /50V ±10% YB	12B3102
C710	Electrolytic 1000 μF /6.3V ±20%	126A108
C711	Ceramic 0.001 μF /50V ±10% YB	12B3102
C712	Ceramic 330 pF /50V ±5 % SL	1270331
C713	Electrolytic 0.47 μF /50V ±20%	126F474
C714	Electrolytic 1 μF /50V ±20%	126F105
C715	Ceramic 270 pF /50V ±5 % SL	1270271
C716	Electrolytic 0.47 μF /50V ±20%	126F474
C717	Electrolytic 100 μF /16V ±20%	126C107
C718-719	Electrolytic 47 μF /16V ±20%	126C476
C720	Electrolytic 3.3 μF /50V ±20%	126F335
C721	Not used	
C722	Electrolytic 0.1 μF /50V ±20%	126F104
C723	Electrolytic 0.47 μF /50V ±20%	126F474
	Coils	
L51	Microinductor 22 μH	2162220
L53	Microinductor 39 μH	2162390
L54	Microinductor 100 μH	2162101
L56	Microinductor 82 μH	2162820
L57	Microinductor 180 μH	2162181
L58	Microinductor 100 μH	2162101
L59	Not used	
L60	Microinductor 100 μH	2162101
L101	Microinductor 68 μH	2162680
L102	Microinductor 680 μH	117M491 or 117D491
L103	Microinductor 330 μH	2162331
L106	Not used	
L181	Microinductor 3.9 mH	113M575
L201	Microinductor 100 μH	2162101
L202	Microinductor 12 mH	117M502 or 117D472
L203	Microinductor 100 μH	2162101
L401-402	Choke 200 μH	117B441
T52	EQ Coil	1810585 or 1810710
T201	Audio Bias OSC	113M686 or 1130686
	Diodes	
D51-52	US1040M or 1SS254 or GMB01B	US1040M or 1SS254 or GMB01B
D56	US1040M or 1SS254 or GMB01B	US1040M or 1SS254 or GMB01B
D102	US1040M or 1SS254 or GMB01B	US1040M or 1SS254 or GMB01B
D151	US1040M or 1SS254 or GMB01B	US1040M or 1SS254 or GMB01B
D401-402	US1040M or 1SS254 or GMB01B	US1040M or 1SS254 or GMB01B
D404-408	US1040M or 1SS254 or GMB01B	US1040M or 1SS254 or GMB01B
D501-502	US1040M or 1SS254 or GMB01B	US1040M or 1SS254 or GMB01B

Ref. No	Description	Parts No.
D503	MPG06B	MPG06B
D505-506	US1040M or 1SS254 or GMB01B	US1040M or 1SS254 or GMB01B
D651	1SS132 or GMB01B	1SS132 or GMB01B
D702-703	US1040M or 1SS254 or GMB01B	US1040M or 1SS254 or GMB01B
	Filters	
T51	LPF 3MHz	1810805 or 1810994
T101	LPF 1.5MHz	113M621 or 113D621
T102	BPF 4.43MHz	1810770 or 1810804
CF101	Ceramic 5.06MHz (BPF)	1810497
CF181	Ceramic 4.5 MHz	1810359
DL101	Comb Filter	1812112 or 1812215
	ICs	
IC51	NJM78L05A or AN78L05 (Linear) (3terminal Voltage Regulator)	J78L05A or AN78L05
IC151	LVA508S (Linear) (Input Selector)	14L0187
IC201	BA7751LS or BA7751ALS (Linear) (Audio)	14L0200
IC202	BA7755 (Linear) (R /P Switch)	14LF236
IC401	BA6219B (Linear) (Capstan Drive)	14LF232
IC402	MN6748FVAA (Mos /Other) (Servo)	14DN300
IC501	MN158461FVU-6 (Mos /Micro Processor) (Sys-Con)	14DN244C
IC502	BA6238A or TA7288P (Lineae) (Loading Motor Drive)	14LF168 or 14LW198
IC652	NJM78L05A or AN78L05 (Linear) (3terminal Voltage Regulator)	J78L05A or AN78L05
IC701	LA7913 (Linear) (Band Selector & AMP)	14LQ237
IC702	AN6912 or LA6339 (Linear) (Camparator) BA10339 (Linear) or NJM2901N (Linear)	AN6912 or LA6339 or BA10339 or NJM2901N
IC703	LA7210 (Linear) (Sync Sepa)	14LQ115
IC704	L5631 (Linear) (Voltage Regulator)	L5631
HIC51	Hybrid Y (Other) (Luminance)	1812119
HIC101	Hybrid C (Other) (Color)	1812117
HIC401	Hybrid Servo (Other)	1812120
	Jacks	
J1	Not used	
J2	RCA (White)	1780078
J3	Not used	
J4	RCA (White)	1780078

Ref. No	Description	Parts No.
	Resistors	
R51	Carbon 390 ohm 1/5W ±5 %	1324391
R52	Carbon 1k ohm 1/5W ±5 %	1324102
R53	Carbon 56k ohm 1/5W ±5 %	1324563
R54	Carbon 680 ohm 1/5W ±5 %	1324681
R55	Carbon 1.5k ohm 1/5W ±5 %	1324152
R56	Carbon 6.8k ohm 1/5W ±5 %	1324682
R57	Carbon 2.2k ohm 1/5W ±5 %	1324222
R58	Oxide Film 330 ohm 1W ±5 %	1330419 or 1330363
R61	Carbon 68 ohm 1/5W ±5 %	1324680
R62	Carbon 1k ohm 1/5W ±5 %	1324102
R63	Not used	
R64	Carbon 560 ohm 1/5W ±5 %	1324561
R66	Not used	
R71	Carbon 82 ohm 1/5W ±5 %	1324820
R73	Not used	
R74	Carbon 1.2k ohm 1/5W ±5 %	1324122
R75	Carbon 18k ohm 1/5W ±5 %	1324183
R76	Carbon 1k ohm 1/5W ±5 %	1324102
R77	Carbon 4.7k ohm 1/5W ±5 %	1324472
R102	Carbon 6.8k ohm 1/5W ±5 %	1324682
R103	Carbon 1k ohm 1/5W ±5 %	1324102
R104-105	Not used	
R106	Carbon 270 ohm 1/5W ±5 %	1324271
R107	Carbon 2.2k ohm 1/5W ±5 %	1324222
R108-109	Not used	
R121	Carbon 5.6k ohm 1/5W ±5 %	1324562
R122	Carbon 1.8k ohm 1/5W ±5 %	1324182
R151	Carbon 1.5k ohm 1/5W ±5 %	1324152
R152-153	Carbon 22k ohm 1/5W ±5 %	1324223
R154	Carbon 5.6k ohm 1/5W ±5 %	1324562
R155	Carbon 330 ohm 1/5W ±5 %	1324331
R156	Carbon 47k ohm 1/5W ±5 %	1324473
R157	Carbon 82 ohm 1/5W ±5 %	1324820
R181	Carbon 1k ohm 1/5W ±5 %	1324102
R201	Carbon 15k ohm 1/5W ±5 %	1324153
R202	Fuse 22 ohm 1/4W ±5 %	5361220
R203	Carbon 47 ohm 1/5W ±5 %	1324470
R204	Carbon 6.8k ohm 1/5W ±5 %	1324682
R205	Carbon 4.7 ohm 1/5W ±5 %	1324479
R206	Carbon 56k ohm 1/5W ±5 %	1324563
R207	Carbon 4.7k ohm 1/5W ±5 %	1324472
R208	Carbon 39k ohm 1/5W ±5 %	1324393
R209	Carbon 5.6k ohm 1/5W ±5 %	1324562
R210	Carbon 68k ohm 1/5W ±5 %	1324683
R211	Carbon 220 ohm 1/5W ±5 %	1324221
R212	Carbon 330k ohm 1/5W ±5 %	1324334
R213	Carbon 10k ohm 1/5W ±5 %	1324103
R214	Not used	
R215	Carbon 22k ohm 1/5W ±5 %	1324223
R216	Carbon 8.2k ohm 1/5W ±5 %	1324822
R217	Carbon 1M ohm 1/5W ±5 %	1324105
R218	Carbon 27k ohm 1/5W ±5 %	1324273
R219	Carbon 15k ohm 1/5W ±5 %	1324153
R220	Carbon 680 ohm 1/5W ±5 %	1324681
R221	Carbon 330 ohm 1/5W ±5 %	1324331
R222-223	Not used	
R224-226	Carbon 10k ohm 1/5W ±5 %	1324103
R228	Carbon 68k ohm 1/5W ±5 %	1324683
R229	Carbon 100 ohm 1/5W ±5 %	1324101
R401	Oxide Film 1.5 ohm 1W ±5 %	1330391 or 1330317
R402	Oxide Film 3.3 ohm 2W ±5 %	1330460 or 1330318
R403-404	Carbon 2.7k ohm 1/5W ±5 %	1324272
R405-406	Carbon 39k ohm 1/5W ±5 %	1324393
R407	Carbon 1k ohm 1/5W ±5 %	1324102
R408	Carbon 4.7k ohm 1/5W ±5 %	1324472
R409-410	Carbon 10k ohm 1/5W ±2 %	1354103
R411	Carbon 100 ohm 1/5W ±5 %	1324101
R412	Carbon 2.2k ohm 1/5W ±5 %	1324222
R413	Carbon 1k ohm 1/5W ±5 %	1324102
R414	Carbon 3.3k ohm 1/5W ±5 %	1324332
R415	Carbon 18k ohm 1/5W ±5 %	1324183
R417-418	Carbon 10k ohm 1/5W ±5 %	1324103
R419	Not used	
R420	Carbon 6.8k ohm 1/5W ±5 %	1324682
R421	Carbon 91k ohm 1/5W ±5 %	1324913
R422	Carbon 6.8k ohm 1/5W ±5 %	1324682
R423	Carbon 75k ohm 1/5W ±5 %	1324753
R425	Carbon 1.5k ohm 1/5W ±5 %	1324152
R426	Carbon 27k ohm 1/4W ±5 %	1330738

Ref. No	Description	Parts No.
R501	Carbon 150 ohm 1/5W ±5 %	1324151
R502	Carbon 1.2k ohm 1/5W ±5 %	1324122
R503	Carbon 82k ohm 1/5W ±5 %	1324823
R504	Carbon 4.7k ohm 1/5W ±5 %	1324472
R505-506	Carbon 47k ohm 1/5W ±5 %	1324473
R507	Carbon 220k ohm 1/5W ±5 %	1324224
R508	Carbon 47k ohm 1/5W ±5 %	1324473
R509	Carbon 220k ohm 1/5W ±5 %	1324224
R510-512	Carbon 2.7k ohm 1/5W ±5 %	1324272
R513	Carbon 4.7k ohm 1/5W ±5 %	1324472
R514-515	Carbon 10k ohm 1/5W ±5 %	1324103
R516	Carbon 47k ohm 1/5W ±5 %	1324473
R519	Carbon 3.6k ohm 1/5W ±5 %	1324362
R520	Carbon 47k ohm 1/5W ±5 %	1324473
R522	Carbon 5.6k ohm 1/5W ±5 %	1324562
R523	Carbon 22k ohm 1/5W ±5 %	1324223
R524	Carbon 10k ohm 1/5W ±5 %	1324103
R525-527	Carbon 6.8k ohm 1/5W ±5 %	1324682
R528	Carbon 47k ohm 1/5W ±5 %	1324473
R529	Oxide Film 3.3 ohm 1W ±5 %	1330395 or 1330320
R651	Carbon 100k ohm 1/5W ±5 %	1324104
R652	Carbon 1.8k ohm 1/5W ±5 %	1324182
R653	Carbon 100k ohm 1/5W ±5 %	1324104
R654	Carbon 1.2k ohm 1/5W ±5 %	1324122
R655-656	Carbon 22k ohm 1/5W ±5 %	1324223
R657	Carbon 1.2k ohm 1/5W ±5 %	1324122
R701	Carbon 10k ohm 1/5W ±5 %	1324103
R702	Carbon 33k ohm 1/5W ±5 %	1324333
R703	Carbon 470k ohm 1/5W ±5 %	1324474
R704-706	Carbon 220k ohm 1/5W ±5 %	1324224
R707	Carbon 22k ohm 1/5W ±5 %	1324223
R708-709	Carbon 47k ohm 1/5W ±5 %	1324473
R710	Carbon 1M ohm 1/5W ±5 %	1324105
R711	Carbon 3.9k ohm 1/5W ±5 %	1324392
R712	Carbon 3.3k ohm 1/5W ±5 %	1324332
R713-714	Carbon 12k ohm 1/5W ±2 %	1354123
R715	Carbon 4.7k ohm 1/5W ±2 %	1354472
R716	Carbon 7.5k ohm 1/5W ±2 %	1354752
R717	Carbon 33k ohm 1/5W ±5 %	1324333
R718-720	Carbon 10k ohm 1/5W ±5 %	1324103
R721	Carbon 750 ohm 1/5W ±5 %	1324751
R722	Carbon 1k ohm 1/5W ±5 %	1324102
R723	Carbon 330k ohm 1/5W ±5 %	1324334
R724	Carbon 22k ohm 1/5W ±5 %	1324223
R725	Carbon 100k ohm 1/5W ±5 %	1324104
R726	Carbon 820 ohm 1/5W ±5 %	1324821
R727	Carbon 47k ohm 1/5W ±5 %	1324473
R728-729	Carbon 47k ohm 1/5W ±5 %	1324473
R730	Carbon 4.7k ohm 1/5W ±5 %	1324472
R731	Carbon 1.5k ohm 1/5W ±5 %	1324152
R734	Carbon 1.5k ohm 1/2W ±5 %	1322152
R745	Carbon 4.7k ohm 1/5W ±5 %	1324472
R746	Carbon 10k ohm 1/5W ±5 %	1324103
	Semi-Fixed Resistors	
VR51	1k ohm B	138N777 or 138J777
VR101	1k ohm B	138N777 or 138J777
VR201	100k ohm B	138N785 or 138J785
VR401	200k ohm B (Metal)	1380832
VR402	200k ohm B	138N786 or 138J786
	Transistors	
Q51	2SC536SPEF or 2SC1740QR	C536SEF or C1740QR
Q52	2SA608SPEF or 2SA933QR	A608SEF or A933QR
Q53	Not used	
Q56	2SC536SPEF or 2SC1740QR	C536SEF or A1740QR
Q101	2SC536SPEF or 2SC1740QR	C536SEF or C1740QR
Q120	2SC536SPEF or 2SC1740QR	C536SEF or C1740QR
Q201	2SD400F or 2SC2060Q	D400F or C2060Q
Q501	2SC536SPEF or 2SC1740QR	C536SEF or C1740QR

Ref. No	Description	Parts No.
Q502	2SA1317ST or 2SA934QR	A1317ST or A934QR
Q503	2SC536SPEF or 2SC1740QR	C536SEF or C1740QR
Q504	2SD400F or 2SC2060Q	D400F or C2060Q
Q651	2SB892ST or 2SB1010QR	B892ST or B1010QR
Q652	2SD1207ST or 2SD1384QR	D1207ST or D1384QR
Q653	2SC3393SPST or 2SC1741AQR	C3393SST or C1741AQR
Q654	2SB892ST or 2SB1010QR	B892ST or B1010QR
Q701	2SA1016KFG or 2SA1038RS	A1016KFG or A1038RS
Q702	2SK128TAPQ (FET)	K128PQ
Q704	2SD1012FG or 2SD1468SRS	D1012FG or D1468SRS
	Digital Transistors	
QR101	2SA1346 or DTA124ES	A1346 or A124ES
QR401	Not used	
QR501	2SC3400 or DTC124ES	C3400 or C124ES
QR502-503	DTA143XS	A143XS
QR504	2SC3400 or DTC124ES	C3400 or C124ES
QR505	2SA1346 or DTA124ES	A1346 or A124ES
QR506	DTA144WS	A144WS
QR702	2SA1346 or DTA124ES	A1346 or A124ES
QR703	2SC3400 or DTC124ES	C3400 or C124ES
QR704	Not used	
QR705	2SC3400 or DTC124ES	C3400 or C124ES
	Miscellaneous	
CN-Ba	Connector Base 5P (TOP)	1740767
CN-Bb	Connector Base 2P (TOP)	1740764
CN-D	Connector Base 7P (TOP)	1740769
CN-E	Connector Base 6P (TOP)	1740768
CN-J	Connector Base 5P (TOP)	1740767
X101	X'tal 4.43MHz	1811205 or 1811259
X501	Ceramic Resonator 3.58MHz	1811211 or 1812206
X701	Ceramic Resonator 500kHz	1811103 or 1810414
	Heatsink	6S50318
TU701	Tuner IF	1812156
Conv-1	RF Conv	1812155

Ref. No	Description	Parts No.
	Miscellaneous	
VR801	Potentiometer 250k ohm (B) (Tracking)	539N661
VR802	Potentiometer 20k ohm (B) (Picture)	539N703
RS801	Remote Sensor	1812012 or 1812075
CN-5	Connector Base 7P (Side)	1770252
	PCB Ass'y, SW	1613905EX
SW401	Slide SW	1621691 or 1621692 or
	Connector Base 8P (Side)	1740781

Ref. No	Description	Parts No.
	PCB Ass'y, Timer	1613937BX
	Capacitors	
C801	Ceramic 10 pF / 50V ±5 % NPO	12CH100
C802	Semi-conductive 0.047 μF / 16V +80/ −20%	1220523
C804	Ceramic 0.047 μF / 50V +80/ −20%	1220870
C805	Ceramic 0.01 μF / 50V +80/ −20%	12F3103
	Diodes	
D801-810	US1040M or 1SS254 or GMB01B	US1040M or 1SS254 or GMB01B
D811	Not used	
	ICs	
IC801	MN1225 (Mos / Memory) (Memory)	14DN269
IC802	MN1280Q (Mos / Other) (Reset)	14DN185
IC803	MN15283FVX-6 (Mos / Micro Processor) (Timer)	14DN260A
	Resistors	
R801	Carbon 33k ohm 1/5W ±5 %	1324333
R802	Carbon 2.2k ohm 1/5W ±5 %	1324222
R805	Carbon 47k ohm 1/5W ±5 %	1324473
R810-811	Carbon 3.3k ohm 1/5W ±5 %	1324332
	Transister	
Q801	2SC536SPEF or 2SC1740 QR	C536SEF or C1740QR
QR801	DTR 2SA1346 or DTA124ES	A1346 or A124ES
	Switchs	
SW802	Push SW	5622015 or 5622017 or 1622908
SW804-818	Push SW	5622015 or 5622017 or 1622908
SW827	Slide SW 1C-2P	1621660
SW829	Slide SW 1C-2P	1621660
	Miscellaneous	
TC801	Trimmer 20pF	1280122 or 1280154
X801	X'TAL 4.19MHz	1811191
FL801	FIP11GM6	1812096
	FIP Holder (R)	6N50142
	FIP Holder (L)	6N50149
	PCB Ass'y Control	1613937CX
	Capacitor	
C803	Electrolytic 47 μF / 6.3V ±20%	526R476
	Resistor	
R803	Carbon 10k ohm 1/5W ±5 %	1324103
	Switchs	
SW819-826	Push SW	5622015 or 5622017 or 1622908

(PSV27)

Ref. No	Description	Parts No.
	PCB Ass'y, Power Supply	1613903X
	Capacitors	
C601-602	Ceramic 0.022μF /50V +80/ −20%	12F3223
C603	Electrolytic 2200μF /35V +80/ −20%	626E228
C604	Electrolytic 2200μF /25V ±20%	626D228
C605	Electrolytic 3300μF /16V ±20%	626C338
C606	Electrolytic 22μF /63V ±20%	126G226
C607	Electrolytic 47μF /63V ±20%	126G476
C608	Electrolytic 47μF /35V ±20%	126E476
C609	Electrolytic 47μF /25V ±20%	126D476
C610-611	Electrolytic 47μF /16V ±20%	126C476
C612	Electrolytic 47μF /10V ±20%	626B476
	Diodes	
D601-602	1N4003 or GP10-4003 or 1SR35-200A	1N4003 or MPL5209 or 35-200A
D603	MTZ30 A, B or UZ-30BSC	MTZ30A or MTZ30B or UZ-30BSC
D604-605	Not used	
D606	MTZ6.2B	MTZ6.2B
D607	KBL02L or RS403L or S4VB20	KBL02L or RS403L or S4VB20
D608-611	1N4003 or GP10-4003	1N4003F2 or MPL5209
	ICs	
IC601	AN7818F (Linear) (Voltage Regulator)	AN7818F
IC602	AN7812F (Linear) or NJM7812FA (Linear) (Voltage Regulator)	AN7812F or 14L0251
IC603	AN78M05F (Linear) or NJM78M05F (Linear) (Voltage Regulator)	AN78M05F or 14L0238
IC604	AN7812F (Linear) or NJM7812FA (Linear) (Voltage Regulator)	AN7812F or 14L0251
	Resistors	
R601	Not used	
R602	Metal Oxide 1.2k ohm 1W ±5 %	534A122
R603	Not used	
R604-605	Carbon 100 ohm 1/5W ±5 %	1324101
R606	Carbon 22k ohm 1/5W ±5 %	1324223
	Miscellaneous	
T601	Power Trans	115M507 or 115C507 or 115N507
F601	Fuse 200mA	1790474
F602	Not used	
F603	Fuse 630mA	1790479
CN-1	Connector Base 11P (Side)	1770256
	Fuse Holder	1790424
	Others	
	AC Cord	1750236
	Cord Stopper	1790173
	RCA Plug Cord	1750926

MECHANICAL PARTS LIST (DECK)

Ref. No.	Description	Parts No.
	CYLINDER	
1	Cylinder Ass'y	8000-01-315
	(Consists of 2-13, 19, 20, 24)	
	2 Drum, upper with video head	8000-01-13
	3 Mount Assy, Cylinder	8000-01-302
	(Consists of 4-8, 24)	
	4 Drum, Lower Ass'y	8000-01-303
	5 Mount, Cylinder	8000-01-22
	6 PCB Ass'y, video Out	8000-01-304
	7 Screw, Sems, M3 × 10	9109-00-00
	8 Screw, Sems, M2.6 × 6	9098-00-00
	24 Screw, Sems, M3 x 12	9110-00-00
	9 Motor, TM-81A	6004-03-22
	10 Screw, Camera, M2 ×4.5	9560-00-00
	11 Screw, Sems, M2.6 × 6	9098-00-00
	12 PCB for Upper Drum	8000-01-14
	13 Screw, Sems, M3 ×8	9108-00-00
	19 Screw, Sems, M2 x 5	9078-00-00
	20 Rivet, Drum Motor Bracket	8000-01-501
14	Screw, Sems, M3×10	9109-00-00
15	Bracket, Drum Ground	8000-01-48
16	Ground, Drum	8000-01-49
17	Screw, Tams, M3 ×10	9109-00-00
18	Screw, CUP, M2.6 ×3	9965-00-00
21	Supporter PCB, Motor	8000-01-37
22-23	Not used	
25-30	Not used	
	CHASSIS	
31	Rivet, chassis	8000-02-507
32-33	Not used	
34	Open Angle Ass'y	8000-02-301
35	Screw, C-Tight, M2.6 × 5	9192-00-00
36	Rivet, Back Tension Change Plate	8000-02-502
37	Arm (B), Back Tension Change	8000-13-32
38	Collar	8000-08-12
39	Screw, Camera S-Tight, M2.6 ×3.5	9840-00-00
40	Actuator (B), Back Tension	8000-13-31
41	Collar	8000-08-12
42	Screw, C-Tight, M2.6×5	9192-00-00
43	Return Arm, Right Brake	8000-02-21
44	Collar	8000-08-12
45	Screw, C-Tight, M2.6×5	9192-00-00
46	Bracket, Mecha	8000-22-09
47	Screw, C-Tight, M3×5	9202-00-00
48-50	Not used	
	LOADING BASE	
51	Rivet, loading Base	8000-03-501
52	Block (L), Loading	8000-03-31
53	Block (R), Loading	8000-03-09
54	Post, Roller	8000-03-34
55	Boss, Loading	8000-03-12
56	Screw, Set with Hexagon Hole, M 2 ×3	9952-00-00
57	Screw, Camera, M2.6 ×4.5	9559-00-00
58	Washer, Flat, ϕ2.6 ×ϕ7 ×t 0.8	9324-00-00
59	Holder, Loading	8000-03-13
60	Screw, Sems, M2 ×4	9077-00-00
61	Guide, Tape	8000-03-14
62	Flange, Tape Guide	8000-03-18
63	Flange (B), Tape Guide	8000-03-20
64	Spring, Tape Guide	8000-03-15
65	Nut, M3	9453-00-00
66	Cap, Guide	8000-03-19
67	Nut, Tracking Adjuster	8000-03-16
68	Screw, Sems, M3 ×6	9107-00-00
69	Rollerpost, SIS	8000-03-33
70-76	Not used	
77	Flange (C), Tape Guide	8000-03-28
78	Flange (D), Tape Guide	8000-03-29
79	Nut, Nylon, M3	9953-00-00
80	Not used	
	LOADING DRIVE	
81	Plate (L) Ass'y, Loading	8000-04-301
	(Consists of 82-85)	
	82 Rivet, Loading Plate (L)	8000-04-501
	83 Roller, Back Tension Return	8000-04-25
	84 E-Ring, ϕ1.5	9500-00-00

Ref. No.	Description	Parts No.
	85 Spring, Loading Plate	8000-04-23
86	Plate (R) Ass'y Loading	8000-04-302
	(Consists of 87-88)	
	87 Rivet, Loading Plate (R)	8000-04-502
	88 Spring, Loading Plate	8000-04-23
89	Drive Gear (L) Ass'y	8000-04-303
	(Consists of 90-92)	
	90 Gear (A), L Drive	8000-04-13
	91 Gear (B), Ass'y, L Drive	8000-04-304
	92 Gear Spring, L Drive	8000-04-16
93	Washer, Flat, ϕ4 ×ϕ16×t 0.6	9956-00-00
94	Gear, Control	8000-04-20
95	Plate, Gang	8000-04-21
96	Gear, Gang	8000-04-22
97	Gear, Joint(B)	8000-04-19
98	Gear, Joint(A)	8000-04-18
99	Gear, Guide	8000-04-09
100	Washer, Flat, ϕ2.5 ×ϕ14×t 1	9955-00-00
101	E-Ring, ϕ2.0	9502-00-00
102	Roller, Guide	8000-04-10
103	Washer, Flat, ϕ2.5 ×ϕ10×t 1	9954-00-00
104	Screw, Small, M2.6 × 4	9038-00-00
105	E-Ring, ϕ3.2	9506-00-00
106	E-Ring, ϕ2.3	9503-00-00
107	E-Ring, ϕ2.5	9504-00-00
108-140	Not used	
141	Head Base Ass'y	8000-06-310
	(Consists of 142-150)	
	142 Head, Audio/Control	6204-15-02
	143 Rivet, Head Base	8000-06-501
	144 Screw, Azimuth SP	8000-06-26
	145 Not used	
	146 Spring, Azimuth	8000-06-04
	147 Screw, Small, M2.6 × 7	9041-00-00
	148 Screw, Set with Hexagon Socket, 3 ×5	9950-00-00
	149 Collar, Adjust	8000-06-05
	150 Nut, Nylon, M3	9953-00-00
151	Spring, Head	8000-06-03
152	Bracket Ass'y, MD PCB	8000-06-316
	(Consists of 153-155)	
	153 Bracket, MD PCB	8000-06-18
	154 PCB Ass'y, MD	8000-06-315
	155 Screw, Sems, M2 ×5	9078-00-00
156	Screw, Sems, M2.6 ×5	9097-00-00
157-170	Not used	
	FEH	
171	Plate Ass'y, Impedance Roller	8000-07-303
	(Consists of 172-175, 178)	
	172 Rivet, Impedance	8000-07-501
	173 Roller, Impedance	8000-07-05
	174 Washer, Polyslider,	9743-00-00
	ϕ1.6 ×ϕ3.8 × t 0.3	
	175 Washer, Polyslider,	9747-00-00
	ϕ2.1 ×ϕ5 × t 0.3	
	178 Head, Full Erase	6204-15-03
176	FE Plate Spring	8000-07-04
177	E-Ring, ϕ3.0	9505-00-00
179	Screw, Camera, M2 X 3	9550-00-00
180-190	Not used	
	TENSION ARM	
191	Tension Arm Ass'y	8000-08-302
	(Consists of 192-196)	
	192 Brake Ass'y	8000-08-303
	(Consists of 193-194)	
	193 Flat Ass'y, Back Tension	8000-08-301
	194 Screw, P-Tight, M2 × 8	9675-00-00
	195 Arm Ass'y, Tension Arm	8000-08-501
	196 E-Ring, ϕ1.5	9500-00-00
197	Plate, Back Tension Adjusting	8000-08-13
198	Spring, Tension Arm	8000-08-14
199	Screw, Sems, M2.6 ×5	9097-00-00
200	Washer, Flat, ϕ2.6 ×ϕ7 ×t 0.8	9324-00-00
201	Arm, Back Tension Return	8000-08-10
202	Collar	8000-08-12
203	Screw, Sems, Camera, M2.6 x 4.5	9999-18-01
204	E-Ring, ϕ2.0	9502-00-00
205	E-Ring, ϕ2.0	9502-00-00
206	Lever, Back Tension Return	8000-08-11
207	E-Ring, ϕ2.5	9504-00-00
208	Guide, Tension	8000-08-17
209	Support (B), Back Tension	8000-08-16
210	Screw, C-Tight, M2.6 × 5	9192-00-00

Ref. No.	Description	Parts No.
211	Screw, C-Tight, M3 × 5	9202-00-00
212-220	Not used	
	PINCH ROLLER	
221	Pinch Roller Ass'y	8000-09-306
	(Consists of 222-224)	
	222 Screw, M2.6 × 4	9038-00-00
	223 Rivet, Pinch Roller Arm	8000-09-504
	224 Pinch Roller A	8000-09-22
225	E-Ring, ϕ2.3	9503-00-00
226	Toggle Arm Ass'y	8000-09-305
	(Consists of 227-229)	
	227 Rivet, Toggle Arm	8000-09-505
	228 Spring (B), Pinch Roller	8000-09-05
	229 Spring (A), Pinch Roller	8000-09-04
230	Collar	8000-08-12
231	Screw, C-Tight M2.6 ×5	9192-00-00
232	Plate Ass'y, Pressure	8000-09-303
	(Consists of 233-237)	
	233 Rivet, Pressure Plate	8000-09-503
	234 Roller, Pressure	8000-09-08
	235 E-Ring, ϕ2.0	9502-00-00
	236 Collar	8000-08-12
	237 Screw, C-Tight, M2.6×5	9192-00-00
238	Actuator, Pressure Arm	8000-09-20
239	Support, Tape	8000-09-17
240	Shaft, Tape Support	8000-09-18
241	Spring, Tape Support	8000-09-19
242	Nut, Self	8000-09-21
243-250	Not used	
	SUB CHASSIS	
251	Sub Chassis Ass'y	8000-10-306
	(Consists of 252-259)	
	252 Rivet, Sub Chassis	8000-10-507
	253 Arm, Change Plate Action	8000-10-17
	254 E-Ring, ϕ3	9505-00-00
	255 Spring, Change Plate	8000-10-15
	256 Spring, Change Plate Action Arm	8000-10-19
	257 Rivet, Actuator Switch	8000-10-506
	258 Collar	8000-08-12
	259 Screw, Sems, M2.6 ×5	9097-00-00
260-262	Not used	
263	Screw, Sems, M2.6 × 5	9097-00-00
264	Screw, Sems, M2 × 6	9079-00-00
265	Screw, Camera, Flat Head, M2.6 × 5	9564-00-00
266-280	Not used	
	REEL	
281	Reel Ass'y, Supply	8000-11-301
282	Reel Ass'y, Take-up (B)	8000-11-310
283	Washer, Polyslider, ϕ2.1 ×ϕ5 × t 0.5	9876-00-00
284	Washer, ϕ3.1 ×ϕ6 × t 0.6	9969-00-00
285	Bracket Ass'y, Reel Sensor	8000-11-308
	(Consists of 286-288)	
	286 PCB Ass'y, Reel Sensor	8000-11-306
	287 Bracket (B), Reel Sensor	8000-11-17
	288 Screw, Camera, M2.6 × 2.5	9555-00-00
289	Screw, Sems M2.6×4	9096-00-00
290	Screw, M2.6 × 7	9041-00-00
291	Not used	
292	PCB Ass'y, Reel Sensor Connector	8000-11-307
293	Screw, Sems, M2.6 ×4	9096-00-00
294	Not used	
	REEL DRIVE	
295	Pulley, Wind	8000-12-308
296-300	Not used	
301	Ass'y, Clutch	8000-12-304
302	Gear Holder Ass'y	
	(Consists of 303-305, 314-320)	8000-12-305
	303 Rivet, Gear Holder	8000-12-503
	304 Gear, R Drive	8000-12-19
	305 Washer, Polyslider ϕ1.6 ×ϕ3.8 ×t0.3	9743-00-00
	314 Gear (B) Ass'y, Return	8000-12-306
	315 Drum Ass'y, Return	8000-12-307
	316 E-Ring, ϕ1.5	9500-00-00
	317 Arm, Return	8000-12-18
	318 Arm Collar, Return	8000-12-26
	319 Screw, Camera M2×3	9562-00-00
	320 Sprig, Return	8000-12-25

Ref. No.	Description	Parts No.
306	Gear (p)	8000-12-07
307	Gear, FF	8000-12-08
308	Washer, ϕ1.6 ×ϕ3.8 ×t0.3	9743-00-00
309	Not used	
310	Screw, Sems M2×5	9078-00-00
311	Clutch Ass'y, RF	8000-12-309
312	Washer, ϕ3.6 ×ϕ6 ×t0.1	9798-00-00
313	Washer, Polyslider ϕ2.6 ×ϕ6 ×t0.5	9884-00-00
	BRAKE	
321	Plate, Switching	8000-13-503
322	Brake Ass'y, Supply Reel	8000-13-301
	(Consists of 323-325)	
	323 Main Brake Ass'y, Supply Reel	8000-13-501
	324 Spring, Brake Arm	8000-13-09
	325 Shue B, Brake	8000-13-26
326	E-Ring, ϕ2.3	9503-00-00
327	Spring, Brake Main	8000-13-10
328	Brake Ass'y, Take-up Reel	8000-13-302
	(Consists of 329-331)	
	329 Main Brake Ass'y, Take-up Reel	8000-13-502
	330 Spring, Brake Arm	8000-13-09
	331 Shue B, Brake	8000-13-26
332	E-Ring, ϕ2.3	9503-00-00
333	Arm, Take-up Brake Actuator	8000-13-34
334	Collar	8000-08-12
335	Screw, Sems, M2.6 ×5	9097-00-00
336	Arm Ass'y, Left Brake	8000-13-304
	(Consists of 337-338)	
	337 Arm, Left Brake (B)	8000-13-33
	338 Shue, Brake	8000-13-11
339	Spring LB Arm	8000-13-18
340	E-Ring, ϕ2.3	9503-00-00
341	Arm, Right Brake Actuator	8000-13-21
342	Arm, Left Brake Actuator	8000-13-20
343	Spring, Nutral	8000-13-37
344	Collar, Left Brake Actuator Arm	8000-13-29
345	Spring, Left Brake Actuator Arm	8000-13-28
346	W Tams M2.6 × 11	9970-00-00
347	Crank, Bell	8000-13-23
348	E-Ring, ϕ2.5	9504-00-00
349	Plate, Main	8000-13-02
350	Plate, Pull (A)	8000-13-36
351	Collar	8000-08-12
352	Screw, Sems, M2.6×5	9097-00-00
353	Brake Ass'y, S Soft	8000-13-305
354	Spring, S Soft Brake	8000-13-16
355	E-Ring, ϕ2.3	9503-00-00
356	Arm Ass'y, Back Tension	8000-13-306
357	Spring, Right Brake	8000-13-17
358	Sleeve, Right Brake Arm	8000-13-24
359	E-Ring, ϕ2.3	9503-00-00
360	Not used	
	PLANGER	
361	Planger Ass'y, Supply	8000-14-303
	(Consists of 362-364)	
	362 Planger Ass'y, Main	8000-14-302
	363 Board, Release Spring	8000-14-06
	364 Screw, Sems, M2 × 4	9077-00-00
365	Planger	8000-14-04
366	Screw, Sems, M2.6 × 5	9097-00-00
367	Holer, Planger	8000-10-23
368	Screw, Sems, M2.6 × 4	9096-00-00
369-370	Not used	
	FLYWHEEL	
371	Capstan Ass'y, Flywheel	8000-15-29
372	FL Plate Ass'y	8000-15-304
373	Belt, Main	8000-15-26
374-375	Not used	
376	Washer, Nylon, ϕ3.6 ×ϕ10×t 0.5	9957-00-00
377	Capstan Metal	8000-15-24
378	Screw, Flat, M2.6 × 6	9684-00-00
379	Not used	
380	Screw, C-Tight, M3 × 5	9202-00-00
381	Washer, ϕ3.43×ϕ5 ×t 0.5	9860-00-00
382-391	Not used	
	MOTOR	
392	Motor Ass'y, Capstan	8000-16-303
393	Belt, Drive	8000-16-07

Ref. No.	Description	Parts No.
394	Belt, Joint	8000-16-08
395	Screw, Sems, M3 X 4	9105-00-00
396	Pulley, Joint	8000-16-304
397	Washer, Polyslider, ϕ1.6 $\times\phi$3.8 $\times$ t 0.3	9743-00-00
398	Washer, Lumilar, ϕ2.1 $\times\phi$5 $\times$ t 0.5	9920-00-00
399-460	Not used	
	SENSOR	
461	Not used	
	462 PCB Ass'y, Lamp Holder	8000-18-309
	463 Not used	
	464 Not used	
465	Not used	
466	Not used	
467	Sensor, Dew	6808-00-01
468	Screw, Sems, M3 $\times$ 4	9105-00-00
469-649	Not used	
650	Tape Loading Motor Ass'y (Consists of 651-671)	8000-21-302
	651 Motor with Pulley	8000-21-303
	652 Motor Bracket (B), Tape Loading	8000-21-27
	653 TL Worm Gear	8000-21-304
	654 Mode Switch Ass'y	8000-21-305
	655 Screw, Sems, M2.6 $\times$ 5	9097-00-00
	656 Holder (A), TL Worm Gear	8000-21-32
	657 Holder (B), TL Worm Gear	8000-21-33
	658 Pulley, TL	8000-21-40
	659 Belt, TL	8000-21-39
	660-662 Not used	
	663 Actuator, Angle Switch	8000-21-28
	664 Collar, Actuatorr Angle	8000-21-12
	665 Screw, Sems, M2 $\times$ 4	9077-00-00
	666 Actuator, M Switch	8000-21-501
	667 Not used	
	668 Screw Sems, M3 $\times$ 4	9105-00-00
	669 Screw C-Tight, M2.6 $\times$ 5	9192-00-00
	670 Washer, ϕ2.2 $\times\phi$3.8 $\times$ t 0.2	9939-00-00
	671 E-Ring, ϕ1.2	9499-00-00
	672-699 Not used	
700	Front Loading Ass'y (Consists of 701-819)	8000-22-301
701	Bracket Ass'y, Loading Motor (Consists of 702-716, 819)	8000-22-302
	702 Motor Ass'y, Loading	8000-22-303
	703 PCB Ass'y, Loading Motor	8000-22-304
	704 Rivet, Motor Bracket	8000-22-501
	705 Gear, Worm	8000-22-305
	706 PCB Ass'y, Sensor (R)	8000-22-320
	707-709 Not used	
	710 Lever (A), Switch	8000-22-28
	711 Lever (B), Switch	8000-22-29
	712 Holder, Worm Gear	8000-22-27
	713 Not used	
	714 Washer, Polyslider, ϕ1.6 $\times\phi$3.8 $\times$ t 0.3	9743-00-00
	715 Screw, Sems, M2 $\times$ 5	9078-00-00
	716 Belt, Front Loading	8000-22-64
	717 Bracket (B) , Motor	8000-22-70
	819 Screw, Sems, Camera, M2.6 x 4.5	9999-18-01
718	Not used	
719	Record Switch Ass'y	8000-22-324
720	Screw, Sems, M2 X 4	9077-00-00
721	Cassette Holder Ass'y (Consists of 722-727)	8000-22-308
	722 Holder, Cassette	8000-22-03
	723 Plate, Slide	8000-22-13
	724 Lock Plate (R)	8000-22-12
	725 Collar	8000-08-12
	726 Spring, Lock Plate	8000-22-43
	727 Screw, Camera, M2.6 $\times$ 3	9968-00-00
728-729	Not used	
730	Front Bracket Ass'y (Consists of 731-733)	8000-22-309
	731 Bracket, Front	8000-22-06
	732 Guide (R), Tape	8000-19-25
	733 Guide (L), Tape	8000-19-26
734-744	Not used	
745	Side Plate (R) Ass'y (Consists of 746-756)	8000-22-310
	746 Plate (R), Side	8000-22-502
	747 Pressure, Cassette	8000-19-11
	748 Not used	
	749 Screw, Camera, M2.3 $\times$ 2	9833-00-00
	750 Lever, Open	8000-22-25
	751 Spring, Open Lever	8000-22-44
	752 Collar, Opaen Lever	8000-22-42

Ref. No.	Description	Parts No.
	753 Screw, Camera, M2 $\times$ 4	9967-00-00
	754 Lever, Rock Cancel	8000-22-16
	755 Roller, Guide	8000-22-23
	756 Washer, Polyslider, ϕ1.6 $\times\phi$3.8 $\times$ t 0.3	9743-00-00
757	Stay, Top	8000-22-65
758-759	Not used	
760	Side Plate (L) Ass'y (Consists of 761-770)	8000-22-311
	761 Plate (L), Side	8000-22-503
	762 Pressure, Cassette	8000-19-11
	763 Not used	
	764 Screw, Camera, M2.3 $\times$ 2	9833-00-00
	765 Lock Plate (L)	8000-22-66
	766 Spring, Lock Plate (L)	8000-19-65
	767 Collar, Lock Plate	8000-19-63
	768 Screw, Camera, M2 $\times$ 2.5	9966-00-00
	769 Roller, Guide	8000-22-23
	770 Washer, Polyslider, ϕ1.6 $\times\phi$3.8 $\times$ t 0.3	9743-00-00
771-774	Not used	
775	Housing Bracket (R) Ass'y (Consists of 776-787)	8000-22-312
	776 Bracket (R), Housing	8000-22-504
	777 Wormwheel Ass'y (Consists of 778-780)	8000-22-313
	778 Wormwheel	8000-22-20
	779 Gear, Friction	8000-22-21
	780 Spring, Friction	8000-22-48
	781 Lift Gear (R) Ass'y (Consists of 782-784)	8000-22-314
	782 Gear (R), Lift	8000-22-15
	783 Arm, Lift	8000-22-11
	784 Spring, Lift Gear	8000-22-45
	785 Guide, Open Lever	8000-22-26
	786 Sleeve, Guide	8000-22-24
	787 E-Ring, ϕ2.5	9504-00-00
788-789	Not used	
790	Housing Bracket (L) Ass'y (Consists of 791-804)	8000-22-315
	791 Bracket (L), Housing	8000-22-505
	792 PCB Ass'y (L), Sensor	8000-22-322
	793-795 Not used	
	796 Lift Gear (L) Ass'y (Consists of 797-799)	8000-22-318
	797 Gear (L), Lift	8000-22-14
	798 Arm, Lift	8000-22-11
	799 Spring, Lift Gear	8000-22-45
	800 Lever, Lift	8000-22-22
	801 Spring, Lift Lever	8000-22-47
	802 Sleeve, Guide	8000-22-24
	803 E-Ring, ϕ2.5	9504-00-00
	804 Screw, Sems, M2.6 $\times$ 6	9098-00-00
805-809	Not used	
810	Bracket, Rear	8000-22-08
811	Plate, Upper	8000-22-07
812	Shaft, Synchronize	8000-22-46
813	Gear (A), Synchronize	8000-22-34
814	E-Ring, ϕ2.5	9504-00-00
815	Screw, Sems, M2.6 $\times$ 4	9096-00-00
816	Screw, Camera, M2.6 $\times$ 3	9556-00-00
817	Screw, Camera, M2.3 $\times$ 2.5	9991-00-00
818	Screw, C-Tight, M3 $\times$ 5	9202-00-00

MECHANICAL PARTS LIST (CABINET)

Ref. No	Description	Parts No.
A-1X	Front Ass'y	6A50238
	consists of following	
A-1	Front Panel Ass'y	6A50238X
	(Non-repairable)	
	Front	6C50165
	Button, FF	6D50831
	(REW, F.FWD, PAUSE/STILL NOISE CANCEL)	
	Button, Power (FUNCTION, EJECT)	6D50832
	Button, Counter	6D50830
	(CLOCK COUNTER, RESET, MEMORY,	
	CHANNEL DOWN/UP, QTR)	
	Button, Record	6D50850
	Button, Play (PLAY, STOP)	6D50810
A-2	Door, Timer	6D50889
A-3	Plate, Counter	6E50735
A-4	Plate, Timer	6E50682
A-5	Not used	
A-12	Label, Tuner	6E50668
A-6	Case, Top	6G50067
A-7	Panel Bottom	6G50053
A-8	Jack Board Ass'y	6A50183
A-9	Foot	6E50453
A-10	Door, Cassete	6A50225
A-11	Label Type	6E50759
A-13	Plate, Jack Board	6P50128
B1-1	Deck Ass'y (See Deck List) TN-8000	P306SRF
B2-1	Cabinet, Main	6C50148
B2-2	Holder, Deck Angle	6S50323
B2-3	Holder, Supporter	6S50326
B2-4	Holder, Deck	6S50208
B2-5	Holder, Cassette Door	6L50062
B2-6	Ground Plate	6S50319
B2-7	Stopper Holder, AC Cord	6S50286
B2-8	Ground Plate, Control PCB	6S50299
B2-9	Heatsink	6S50317
B2-10	Ground Plate	6S50212
L-1	Screw, P-Tight, Brazier Head, Flange M3×12 (for Jack Board Ass'y—2pcs.)	GCXP312
L-2	Screw, P-Tight, Bind Head M3×10 (for Jack Board Ass'y—1pc.) (for Head AMP PCB—1pc.) (for Holder, Supporter—2pcs.)	GBMP310
L-3	Screw, P-Tight, Bind Head M3×12 (for Main PCB—3pcs.)	GBMP312
L-4	Screw, P-Tight, Brazier, Flange M3×12 (for Deck Ass'y—5pcs.)	GCMP312
L-5	Screw, P-Tight, Bind Head M4×12 (for Heatsink—2pcs.)	GBMP412
L-7	Screw, S-Tight, Bind Head M3 ×6 (for Holder, Deck—1pc.) (for VPS PCB—2pcs)	GBMS306
L-8	Screw, CE-Tight M4 ×8 (for Transformer—2pcs.)	GZMC408
L-9	Screw, Sems, Pan Head M3 ×5 (for Holder, Cassette Door—1pc.) (for Ground Plate—1pc.)	CPM3305
L-10	Screw, Tapping, Bind Head M3×10 (for Transistors—4pcs.) (for IC—1pc) (for Power Supply PCB—1pc)	DBM1310
	***Hardware Kits ***	
L-2	Screw, P-Tight, Bind Head 3×10 (for Front Ass'y—3pcs.) (for Panel, Bottom—7pcs.)	GBMP310
L-6	Screw, P-Tight, Bind Head 4×12 (for Case, Top—3pcs.)	GBKP412
	Accessory	
	RF Cord	1750665 or 1750967
	Remote Control Box	1812097
	Owner's Manual	7E50393

(R7060CA)